 
 



- DE** Montageanleitung USTF/USTE/USTJ/USTG/USTL
BORA Steckdosen
- EN** Assembly instructions USTF/USTE/USTJ/USTG/USTL
BORA sockets
- ES** Indicaciones para el montaje USTF/USTE/USTJ/USTG/USTL
Cajas de enchufe BORA
- FR** Instructions de montage USTF/USTE/USTJ/USTG/USTL
Prises BORA
- IT** Indicazioni di montaggio USTF/USTE/USTJ/USTG/USTL
Prese BORA
- NL** Montage-instructie USTF/USTE/USTJ/USTG/USTL
BORA stopcontacten
- FI** Asennusohjeet USTF/USTE/USTJ/USTG/USTL
BORA pistorasiat
- SE** Monteringsanvisningar USTF/USTE/USTJ/USTG/USTL
BORA kontaktuttag
- NO** Monteringsanvisninger USTF/USTE/USTJ/USTG/USTL
BORA stikkontakter
- DK** Monteringshenvisninger USTF/USTE/USTJ/USTG/USTL
BORA stikkontakter
- PL** Wskazówki dotyczące montażu dla USTF/USTE/USTJ/
USTG/USTL
Gniazdka BORA
- RU** Указания по сборке USTF/USTE/USTJ/USTG/USTL
Розетки BORA
- HR** Napomene za montažu USTF/USTE/USTJ/USTG/USTL
Utičnice BORA
- CZ** Montážní pokyny USTF/USTE/USTJ/USTG/USTL
Zásuvky BORA
- HE** הוראות והתקנה USTF/USTE/USTJ/USTG/USTL
שקעים חשמליים של BORA
- SK** Návod na montáž USTF/USTE/USTJ/USTG/USTL
Zásuvka BORA
- SI** Navodila za montažo USTF/USTE/USTJ/USTG/USTL
Vtičnice BORA
- AE** USTF/USTE/USTJ/USTG/USTL تعليمات التجميع
BORA مقابس

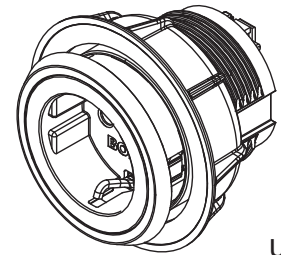


USTF

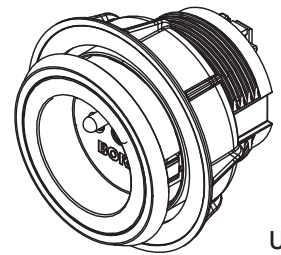

 
USTE

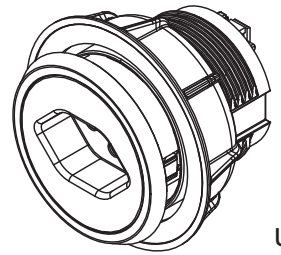

USTJ

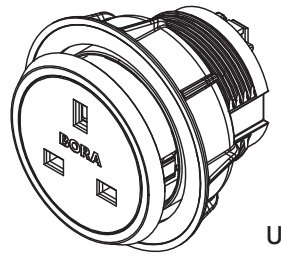 


USTG

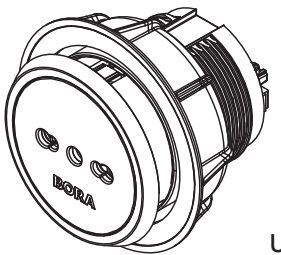 




USTL

USTXUM-000



 
USTF/USTE/USTJ/USTG/USTL

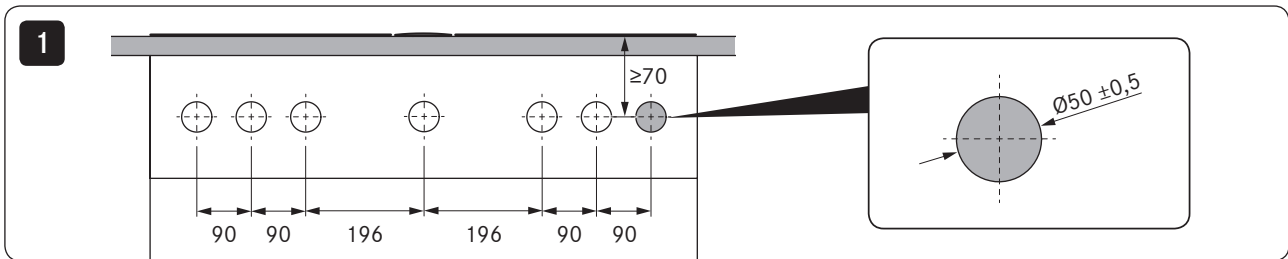

USTF/USTE/USTJ/USTL

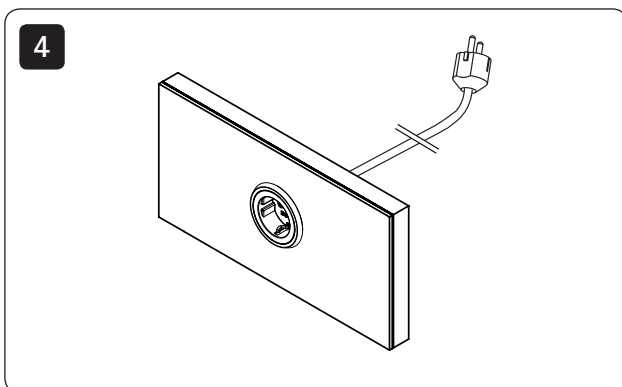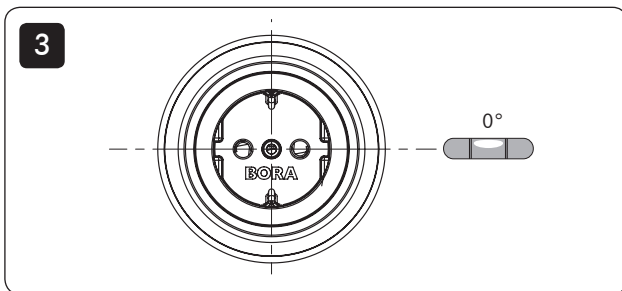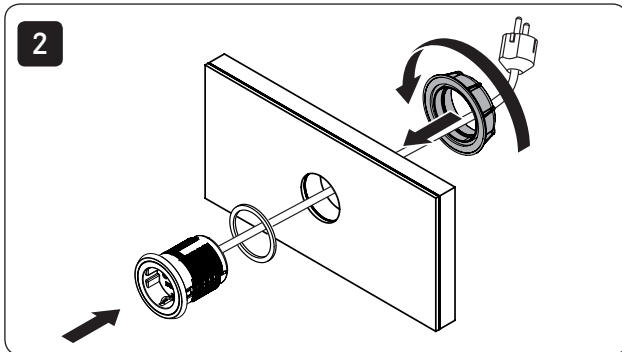   

USTG

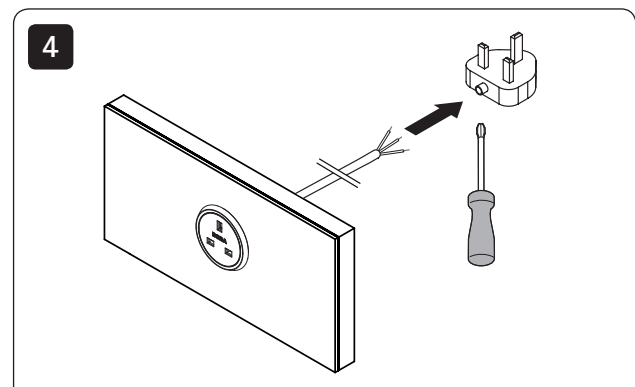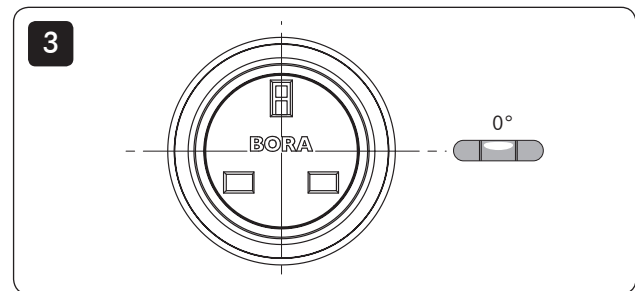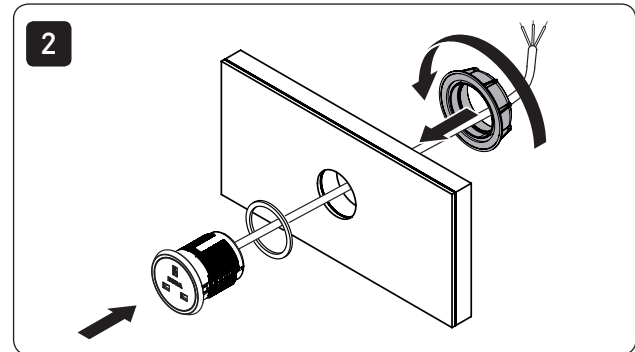   

► Connect the (type G) plug provided



Installation only by persons with the relevant electrical engineering qualifications and experience.

Improper installation could endanger your own life or the life of other users of the electrical systems. Improper installation also causes the risk of severe damage to property, including fires.

You are personally liable in the event of personal injury or damage to property.

Consult an electrician!