



DE Montageanleitung
BORA Steckdosen

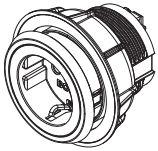


EN Installation Manual
BORA sockets




USTF, USTFAB

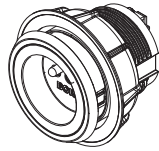


USTE, USTEAB

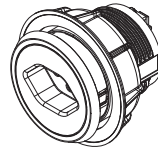







USTJ, USTJAB

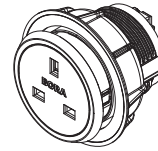


USTG, USTGAB

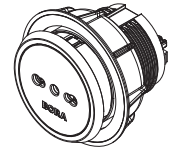

USTL, USTLAB

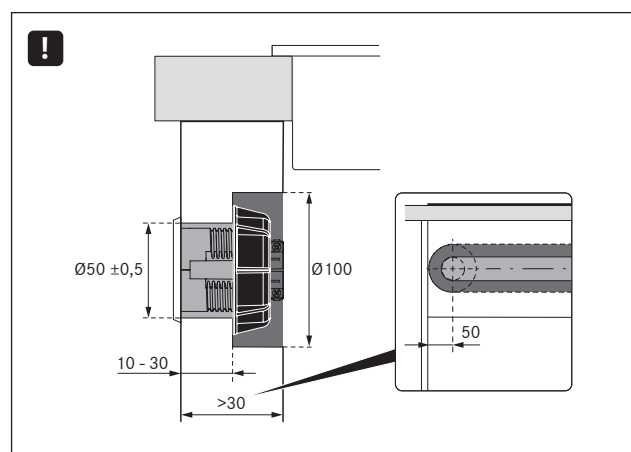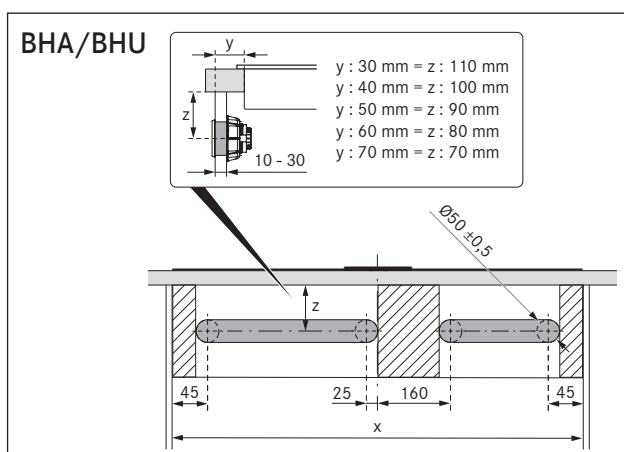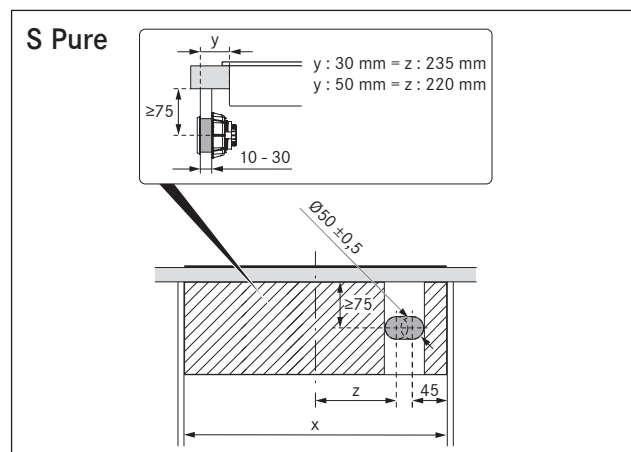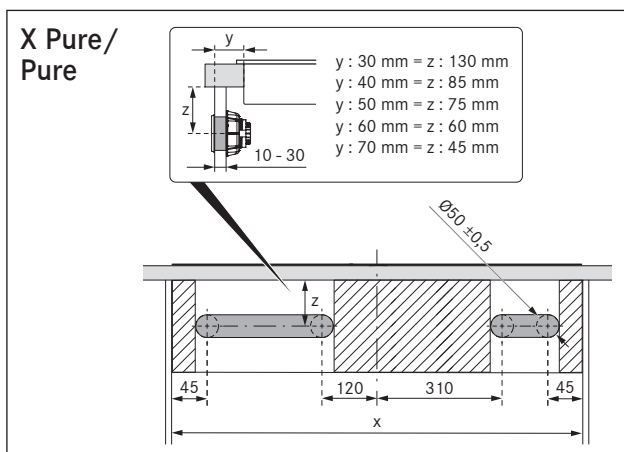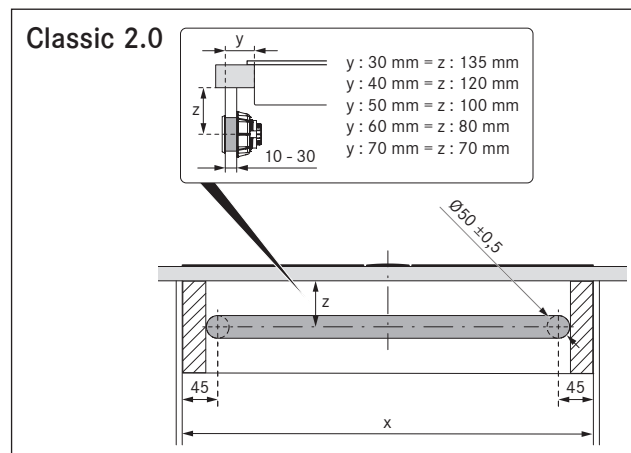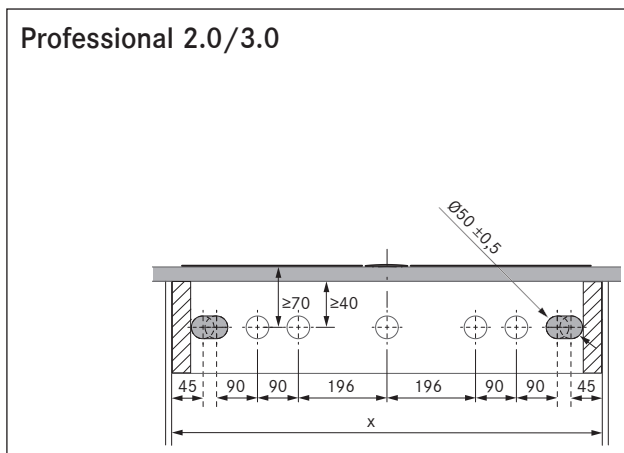

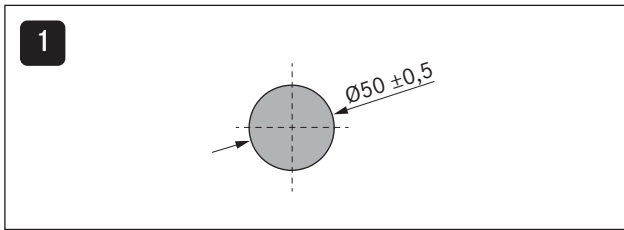

USTF, USTFAB/USTE, USTEAB/
USTJ, USTJAB/USTL, USTLAB

USTG, USTGAB

