


# **EN** Operating and installation instructions ULB1

BORA Air purification box Ecotube

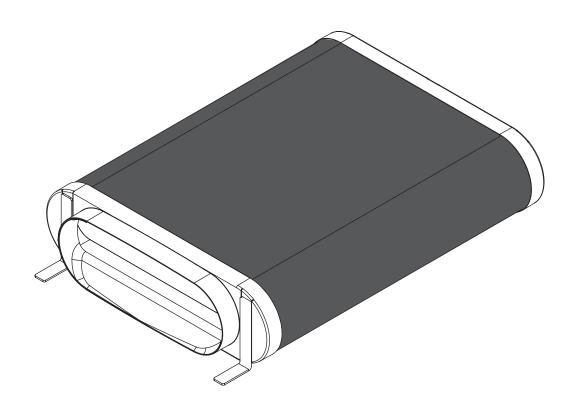

ULB1UMEN-001

Operating and installation instructions:

O Original

O Translation

Manufacturer

BORA Vertriebs GmbH & Co KG Prof.-Dr.-Anton-Kathrein-Straße 3 6342 Niederndorf Austria

Contact T +43 (0) 5373 / 62250-0 mail@bora.com www.bora.com

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from the BORA Service Team. Subject to printing errors and mistakes.

© BORA Vertriebs GmbH & Co KG

All rights reserved.

## **Table of Contents**

ı	General Information	4
<b>2</b> 2.1 2.2 2.3	Safety General safety instructions Safety instructions – operation Intended use	6
<b>3</b> 3.1 3.2 3.3	Device description Technical data Structure Functional principle	8
4.1 4.2 4.3 4.4 4.4.1 4.4.2 4.4.3 4.5	Installation Checking the scope of delivery	
<b>5</b> 5.1 5.2	Cleaning and maintenance Cleaning agents Cleaning	
6	Troubleshooting	12
<b>7</b> 7.1 7.2 7.3	Warranty, technical service and spare parts WarrantyServiceReplacement parts	13
8	Notes	14

#### 1 General information

#### Target group

These operating and installation instructions apply for the following target groups:

Target group	Requirements
User	The appliance can be used by children aged 8 and above as well as people with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed how to safely use the appliance and understand the resultant risks. Children must be supervised. All safety and warning information and the handling instructions in the installation instructions must be complied with.
Ambitious DIYers	Ambitious DIYers can independently conduct all joinery and installation work providing they possess the necessary skills and expertise. They must never independently establish electricity and gas connections.
Installation specialists	Installation specialists are authorised to conduct all joinery and installation work in line with existing regulations. The electricity and gas connections must be certified by a certified engineer for the applicable trade prior to commissioning.
Electricians	The electrical connection may only be established by a certified engineer. He/she also assumes responsibility for the proper electrical installation and commissioning.
Gas specialists	The gas connection may only be established by certified engineers. They also assume responsibility for proper installation and commissioning of the gas system.

Tab. 1.1 Target groups

#### INFO

BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH - hereinafter referred to as BORA - do not assume any liability for damage arising from non-adherence to these documents and from improper assembly! The electricity and gas connections must be made by a qualified specialist. Installation must comply with the valid standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

# Validity of the operating and installation instructions

These instructions apply to several device versions. It is therefore possible that some of the features described do not apply to your appliance.

#### Other applicable documents

These operating and installation instructions are valid in conjunction with other documents, which must be adhered to.

Please be sure to adhere to all documents that form part of the scope of delivery.

INFO	BORA accepts no liability for damage caused			
	by failure to comply with these documents!			

#### **Directives**

These devices meet the following EU/EC directives: 2009/125/EC Ecodesign Directive 2011/65/EU RoHS Directive 2012/19/EU WEEE Directive

#### Presentation of information

To make working with these instructions quick and easy, consistent formatting, numbering, symbols,

safety instructions, terms and abbreviations are used throughout.

Handling instructions are market with an arrow.

► Always carry out handling instructions in the sequence shown.

Bullet points are indicated by a square bullet point at the edge of the line.

- Bullet point 1
- Bullet point 2

INFO Information points out specific points you must always comply with.

#### Safety and warning information

The safety and warning information in these instructions are highlighted with symbols and signal words.

Safety and warning information is structured as follows:

# WARNING SYMBOL AND SIGNAL WORD!

Type and source of the danger Consequences of non-compliance

▶ Measures to minimise risk

The following applies:

- The warning symbol draws attention to the danger.
- The signal word indicates the severity of the risk.

Warning sign	Signal word	Hazard
<u> </u>	Danger	Indicates an imminent hazardous situation which could lead to death or serious injury if ignored.
	Warning	Indicates an imminent hazardous situation which could lead to death or serious injury if ignored.
	Caution	Indicates a potentially hazardous situation which could lead to slight or minor injuries if ignored.
_	Caution	Indicates a situation which could result in material damage if ignored.

Tab. 1.2 Meaning of warning symbols and signal words

### 2 Safety

#### 2.1 General safety instructions

property.

# INFO The appliance complies with the stipulated safety requirements. The user is responsible for appliance cleaning and maintenance as well as its safe use. Improper use can lead to personal injury and damage to

- The operating and installation instructions contain important information about installation and operation. These enable you to protect yourself against injuries and prevent damage to the appliance. Contact details for further information as well as application and usage questions can be found on the back of these operating and installation instructions.
- The term device is used to describe the BORA air purification box ULB1 and the BORA air purification box with 3 activated charcoal filters (ULB3).
- ▶ Read the operating and installation instructions fully before using the appliance for the first time.
- ► Always store the operating and installation instructions within easy reach so that they can be accessed if required.
- ► Pass the operating and installation instructions to the next owner if you sell the appliance.
- Conduct all work extremely attentively and conscientiously.
- ► Check the appliance for visible damage when unpacking it.
- ▶ Do not connect a damaged appliance.
- ▶ Only use the appliance once all installation activities are complete. This is the only way to ensure safe operation.
- ► Keep pets away from the appliance.

#### Recirculation mode

INFO	When cooking, additional moisture i released into the ambient air.			
INFO	In recirculation mode, only a slight amount of moisture is removed from			

► When using recirculation mode, ensure a sufficient supply of fresh air, e.g. by opening a window.

the cooking vapour.

- ► Ensure a normal and comfortable room climate (humidity of 45–60%), e.g. by opening natural ventilation openings or using domestic ventilation systems.
- ▶ After every use in recirculation mode, switch the cooktop extractor to a low level for about 15 minutes or activate the automatic after-run function.

# Households with children and people with special needs

- The appliance can be used by children aged 8 and above as well as people with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed how to safely use the appliance and understand the resultant risks.
- Supervise children in the vicinity of the appliance.
- Children must not play with the appliance.
- ▶ Do not store any items that could be of interest to children in storage spaces above or behind the appliance. Children will otherwise be encourage to climb on the appliance.

#### Unauthorised modifications

Unauthorised modifications can cause the appliance to pose risks.

▶ Do not conduct any modifications to the appliance.

#### Cleaning and maintenance

The activated charcoal filters must be regularly replaced.

Dirty filters can lead to unpleasant odours (see the Cleaning and maintenance section).

#### 2.2 Safety instructions – operation

The appliance must only be used in connection with a BORA cooktop extractor.

Please also see the BORA cooktop extractor operating instructions in this regard.

#### 2.3 Intended use

The appliance is only intended for use in private households to reduce odours during food preparation. It is not intended for:

- Outdoor use
- Installation in vehicles
- Heating rooms
- Use in non-stationary installation sites (e.g. on ships)
- Use with an external timer or a separate remote control system (remote operation)

Any use other than that specified in these operating and installation instructions or any use that goes beyond that which is described here is classed as unintended. BORA does not assume any liability for damages caused by improper use or incorrect operation.

#### All misuse is prohibited!

# **INFO**

BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH do not assume any liability for damage arising from non-adherence to the safety and warning information.

### 3 Device description

▶ Observe all safety and warning information during operation (see the Safety section).

The BORA Air purification box (ULB1) has the following features:

- Activated charcoal foam
- Fine filter fleece

#### 3.1 Technical data

Parameter	Value	
Weight (incl. accessories/packaging)	approx. 2.0 kg	
Housing material	Plastic	
Dimensions	(width x depth x height)	
Device with plinth	330 x 410 x 96 mm	
Duct connection (external dimensions)	245 x 89 x 25 mm	

Tab. 3.1 Technical data

#### 3.2 Structure

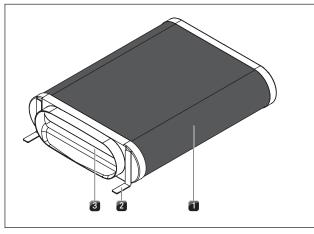


Fig. 3.1 BORA air purification box (ULB1)

- [1] Activated charcoal foam
- [2] Angle bracket
- [3] Fine filter fleece

#### **Device dimensions**

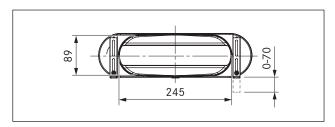


Fig. 3.2 ULB1 Aerial view

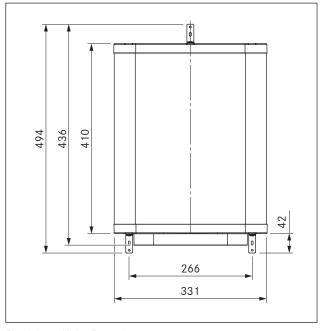


Fig. 3.3 ULB1 Front view



Fig. 3.4 ULB1 Side view

#### 3.3 Functional principle

- The cooking vapours created are extracted at the cooktop by the BORA cooktop extractor and fed into the recirculation unit.
- Inside the filter, the cooking vapour is pre-filtered by the fine filter fleece.
- Odour absorption takes place in the activated charcoal foam.
- The purified air is then expelled.

#### 4 Installation

- ► Observe all safety and warning information (see the Safety section).
- ► Follow the enclosed manufacturer's information.

INFO	The product must not be installed above cooling devices, dishwashers, stoves, ovens,		
	washing machines or driers.		

#### 4.1 Checking the scope of delivery

Name	Quantity
BORA air purification box (ULB1)	1
Operating and installation instructions	1
Angle bracket	3
Fixing screw set	1

Tab. 4.1 Scope of delivery

- Check the scope of delivery for damage and make sure it is complete.
- ► If there are any missing or damaged parts, please notify BORA After Sales Service.
- Do not under any circumstances install parts which are damaged.
- ▶ Dispose of transport packaging in the proper manner (see the Decommissioning and Disposal section).

#### 4.2 Tool and aids

The following tool is required to correctly install the recirculation unit:

■ Phillips screwdriver

#### 4.3 Assembly instructions

- Keep the airflow channels as short as possible.
- Do not install the device in floor units or bodies with no separation from the doors or drawers. as the positive pressure could cause these to open of their own accord.
- The drawers, back panels and shelves in the floor unit must be removable for maintenance and cleaning purposes.
- If the device is installed in an adjacent room, air recirculation must occur in the room in which the vapour extraction system is installed so as not to generate any low pressure.

#### 4.4 Installing the device

INFO	A return flow aperture of > 500 cm <sup>2</sup> in the plinth area must be provided for recirculation.
INFO	The air duct diameter must be no less than 150 mm (176 cm²).
INFO	With an air duct length of 50 cm, no corner or bend should be installed before the fan module (motor).
INFO	Install straight duct pieces with a length of at least 50 cm between the corners or bends.

#### 4.4.1 Installation

- ▶ Depending on the attachment method, attach the mounting brackets or Velcro fasteners to the device.
- ► Connect the duct with the duct connection on the device

#### Installation with mounting brackets:

▶ Use the screws provided to attach the housing.

#### Installation using Velcro:

- ▶ Remove the protective film from the Velcro fastener on the outer side of the device.
- ▶ Use the Velcro fastener to prevent the device from slipping.

# 4.4.2 Connect the duct system to the device.

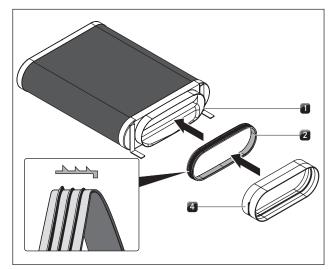


Fig. 4.1 Connecting the BORA Ecotube duct system (Ecotube duct connector or Ecotube moulded part)

- [1] Connection fittings
- [2] BORA Ecotube sealing flat
- [3] BORA Ecotube duct piece (Ecotube duct connector or Ecotube moulded part)

- ▶ Pull out the seal [2] on the connection fitting [1] of the device. This means stretching the seal [2] slightly.
- ▶ Push the Ecotube duct piece [3] to be connected with the sleeve on the connection fitting [1] with the seal [2].
- ▶ Make sure the seal [2] does not move.

# INFO When fitting the seal, make sure it fits and forms an air-tight seal with the connection duct piece when compressed.

#### 4.4.3 Replacement

Switch off the cooktop extractor. as shown in the BORA cooktop extractor operating instructions.

- ▶ Open the revision option to access you appliance.
- ▶ Release the device from the mounting brackets or the Velcro
- ► Remove the appliance from the ducting.
- ▶ Clean the ducting with a soft cloth and detergent or water
- ► Install the replacement appliance as described in the Installation section.
- ► Check that all the duct connections are tight and secure.
- ► Check that the appliance functions correctly.
- ▶ Do this by putting the cooktop extractor into operation as shown in the BORA cooktop extractor operating instructions.
- ► Seal the revision option.
- ▶ Properly dispose of the used filter.

#### 4.5 Handover to user

Once installation is complete:

- Explain the main functions to the user.
- Explain all safety-related aspects of operation and handling to the user.
- ▶ Provide the user with the accessories and the operating and installation instructions for safe storage.

# 5 Cleaning and maintenance

- ► Observe all safety and warning information (see the Safety section).
- ► Follow the enclosed manufacturer's information.
- ▶ When conducting scheduled cleaning and other work on the appliance, ensure that the cooktop extractor is fully switched off so as to prevent injury. For how to do this, please see the BORA cooktop extractor operating instructions.
- After every use, switch the cooktop extractor to a low level for about 15 minutes or activate the automatic after-run function.
- ► Stick to the following replacement intervals:
- In the event of odour formation
- Declining extraction performance

Component	Replacement cycle
BORA air purification box (ULB1)	1x per year

Tab. 5.1 Replacement cycle

#### 5.1 Cleaning agents

- Never use steam cleaners, abrasive sponges, scouring pads or chemically aggressive cleaning agents (e.g. oven cleaner spray).
- ► Make sure that the cleaning agent does not contain any sand, soda, acids, lyes or chloride.

#### 5.2 Cleaning

Users are not intended to clean the inside of the appliance and must not do this under any circumstances.

# 6 Troubleshooting

▶ Observe all safety and warning information (see the Safety section).

Operating situation	Cause	Remedy	
Unpleasant odours. The automatic after-run is not used.		Use the automatic after-run.	
Recirculation unit usage period exceeded.		Replace the BORA air purification box (ULB1).	

Tab. 6.1 Resolving a fault

▶ In all other instances, contact BORA After Sales Service (see the Warranty, technical service and spare parts section).

# 7 Warranty, technical service and spare parts

Observe all safety and warning information (see the Safety section).

#### 7.1 Warranty

The warranty period is 2 years.

#### 7.2 Service

#### **BORA Service:**

see back page of operation and installation instructions



▶ If there are faults which you are not able to resolve yourself, please contact your BORA specialist supplier or the BORA Service Team.

The BORA Service Team requires the type designation and the build number of your appliance (FD number). Both pieces of information can be found on the nameplate on the back of the instructions and on the appliance base.

#### 7.3 Replacement parts

▶ Only use original spare parts for repairs.

INFO

Replacement parts can be obtained from your BORA dealer, the BORA online service website at www.bora.com/service or by calling the service number provided.

### 8 Notes:

#### Nameplate:

(please affix)

#### Germany:

#### BORA Lüftungstechnik GmbH

Rosenheimer Str. 33 83064 Raubling Germany T +49 (0) 8035 / 907-240 F +49 (0) 8035 / 907-249 info@bora.com www.bora.com

#### Austria:

#### BORA Vertriebs GmbH & Co KG

Prof.-Dr.-Anton-Kathrein-Straße 3 6342 Niederndorf Austria T +43 (0) 5373 / 62250-0 F +43 (0) 5373 / 62250-90 mail@bora.com www.bora.com

#### Europe:

#### **BORA Holding GmbH**

Prof.-Dr.-Anton-Kathrein-Straße 3 6342 Niederndorf Austria T +43 (0) 5373 / 62250-0 F +43 (0) 5373 / 62250-90 mail@bora.com www.bora.com

#### Australia - New Zealand:

#### **BORA APAC Pty Ltd**

100 Victoria Road Drummoyne NSW 2047 Australia T +61 2 9719 2350 F +61 2 8076 3514 info@boraapac.com.au www.bora-australia.com.au



