



EN Operating and installation instructions X Pure, Pure

BORA X Pure surface induction cooktop with integrated cooktop extractor – exhaust air/recirculation (PUXA/PUXU)

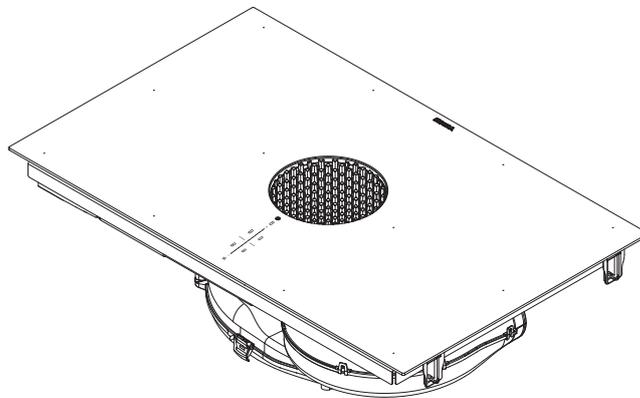

BORA Pure induction cooktop with integrated cooktop extractor – exhaust air/recirculation (PURA/PURU)

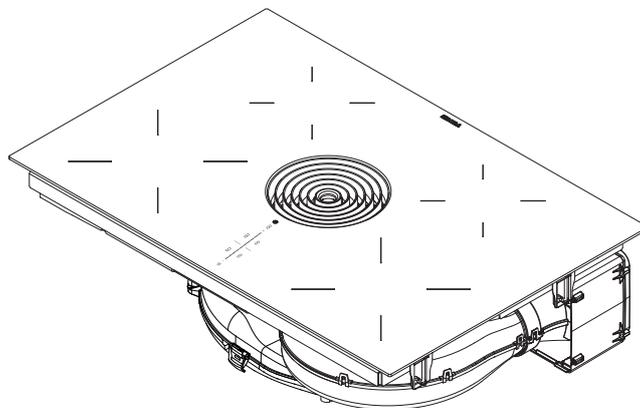

PUREUMEN-100

Operating and installation instructions:

Original

Translation

Manufacturer

BORA Vertriebs GmbH & Co KG

Innstraße 1
6342 Niederndorf
Austria

Contact

T +43 (0) 5373 / 62250-0
mail@bora.com
www.bora.com

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from the BORA Service Team. Subject to printing errors and mistakes.

© BORA Vertriebs GmbH & Co KG

All rights reserved.

Table of Contents

1	General information	4	6.5	Worktop cut-out	27
1.1	Target group	4	6.5.1	X Pure cut-out dimensions (PUXA, PUXU)	28
1.2	Validity of the operating and installation instructions.....	4	6.5.2	Pure cut-out dimensions (PURA, PURU)	28
1.3	Other applicable documents	4	6.6	Installing the appliance in exhaust mode (PUXA, PURA).....	29
1.4	Presentation of information	5	6.6.1	Preparing kitchen units	29
2	Safety	6	6.6.2	Preparing the cooktop.....	30
2.1	General safety instructions	6	6.6.3	Inserting the cooktop	30
2.2	Safety instructions – Cooktop operation	7	6.6.4	Securing the cooktop	31
2.3	Safety instructions – Cooktop extractor	9	6.6.5	Connecting the device to the duct system	31
2.4	Safety Instructions – Installation.....	9	6.7	Installing the appliance in recirculation mode (PURU, PUXU).....	32
2.5	Safety instructions – Cleaning and Maintenance ..	11	6.7.1	Preparing kitchen units	32
2.6	Safety instructions – disassembly and disposal ..	11	6.7.2	Preparing the cooktop.....	33
2.7	Safety instructions – spare parts	11	6.7.3	Inserting the cooktop	34
2.8	Use as intended	12	6.7.4	Securing the cooktop	35
3	Technical data	14	6.7.5	Establishing a connection with the back wall	35
3.1	X Pure (PUXA, PUXU)	14	6.7.6	Inserting the activated charcoal filter	35
3.2	Pure (PURA, PURU)	14	6.8	Establishing the power connection	36
4	Energy labelling	17	6.9	Initial operation	37
5	Device description	18	6.9.1	Dealer and service menu	37
5.1	Model description.....	18	6.9.2	Function test	39
5.2	System description.....	18	6.10	Sealing the device	39
5.2.1	Structure	18	6.11	Handover to user.....	39
5.2.2	Operating panel and operating principle.....	18	7	Operation	40
5.2.3	Symbols.....	19	7.1	General operating instructions.....	40
5.2.4	7-segment display	20	7.2	Touch control	40
5.2.5	Lighting.....	20	7.3	Operating the system.....	40
5.2.6	Sounds	20	7.3.1	Switching on.....	40
5.3	How the cooktop extractor works.....	20	7.3.2	Switching off.....	40
5.4	How the induction cooktop works	21	7.3.3	Control lock	40
5.5	Overview of features and functions	22	7.3.4	Childproofing feature.....	41
5.5.1	Cooktop extractor functions	22	7.3.5	Pause function.....	41
5.5.2	Cooktop functions.....	23	7.3.6	Short-time timer (egg timer)	41
5.6	Safety devices	24	7.3.7	Cleaning lock (wipe function).....	41
5.6.1	Childproofing feature.....	24	7.4	Operating the cooktop extractor.....	41
5.6.2	Control lock.....	24	7.4.1	Setting the fan power level	41
5.6.3	Cleaning lock (wipe function).....	24	7.4.2	Fan power setting.....	42
5.6.4	Residual heat display	24	7.4.3	Automatic extractor control	42
5.6.5	Safety shut-down	24	7.4.4	Switching the fan off	42
5.6.6	Overheating protection	24	7.5	Operating the cooktop	42
6	Installation	25	7.5.1	Selecting a cooking zone	42
6.1	General installation information	25	7.5.2	Setting cooking zone power levels.....	42
6.1.1	Simultaneous operation of the cooktop extractor in the exhaust air mode and a fireplace dependent upon the air supply in the room	25	7.5.3	Automatic heat up function.....	43
6.1.2	Home In module PUHIM (optional)	26	7.5.4	Cooktop power setting.....	43
6.2	Scope of delivery.....	26	7.5.5	Setting the warming level.....	43
6.2.1	Checking the scope of delivery.....	26	7.5.6	Setting the variable warming level	43
6.3	Tool and aids	26	7.5.7	Bridging function	43
6.4	Assembly instructions	26	7.5.8	Automatic bridging function.....	44
6.4.1	Required clearance distances	26	7.5.9	Cooking zone timer	44
6.4.2	General kitchen unit specifications.....	26	7.5.10	Switching off the cooking zone	45
6.4.3	Minimum unit dimensions for X Pure (PUXA, PUXU).....	27	7.6	User menu.....	45
6.4.4	Minimum unit dimensions for Pure (PURA, PURU).....	27	7.6.1	Menu item 1: Volume of the acoustic signals.....	45
6.4.5	Return flow of recirculated air in appliances in recirculation mode	27	7.6.2	Menu item 2: Childproofing feature	46
			7.6.3	Menu item 3: Showing and resetting the filter status (only in recirculation mode).....	46
			7.6.4	Menu item 6: LED test	47
			7.6.5	Menu item 7: Permanent pan size recognition ..	47
			7.6.6	Menu item 8: Show software/hardware version ..	48
			7.6.7	Menu item 9: Safety shut-down	48
			7.6.8	Menu item A: Super simple mode.....	48
			7.6.9	Menu item 0: Reset to factory settings	49

8	Cleaning and Maintenance	50
8.1	Cleaning agents.....	50
8.2	Cooktop and extractor care.....	50
8.3	Cleaning the cooktop.....	50
8.4	Cleaning the cooktop extractor.....	51
8.4.1	Removing the components.....	51
8.4.2	Cleaning the air inlet nozzle and stainless steel grease filter.....	51
8.4.3	Fitting the components.....	52
8.4.4	Removing liquids from the device.....	52
8.5	Cleaning the air guiding housing.....	52
8.5.1	Opening the air guiding housing.....	52
8.5.2	Closing the air guiding housing.....	52
8.6	Replacing the activated charcoal filter.....	53
8.6.1	Removing the activated charcoal filter.....	53
8.6.2	Inserting the activated charcoal filter.....	53
9	Troubleshooting	55
10	Decommissioning, disassembly and disposal	56
10.1	Decommissioning.....	56
10.2	Disassembly.....	56
10.3	Environmentally-friendly disposal.....	56
11	Warranty, technical service, spare parts, accessories	57
11.1	BORA manufacturer's warranty.....	57
11.1.1	Warranty extension.....	57
11.2	Service.....	57
11.3	Spare parts.....	57
11.4	Accessories.....	58

1 General information

1.1 Target group

These operating and installation instructions apply for the following target groups:

Target group	Requirements
User	The appliance can be used by children aged 8 and above as well as people with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed how to safely use the appliance and understand the resultant risks. Children must be supervised. All safety and warning information and the handling instructions in the installation instructions must be complied with.
Ambitious DIYers	Ambitious DIYers can independently conduct all joinery and installation work providing they possess the necessary skills and expertise. They must never independently establish electricity and gas connections.
Installation specialists	Installation specialists are authorised to conduct all joinery and installation work in line with existing regulations. The electricity and gas connections must be certified by a certified engineer for the applicable trade prior to commissioning.
Electricians	The electrical connection may only be established by a certified engineer. He/she also assumes responsibility for the proper electrical installation and commissioning.
Gas specialists	The gas connection may only be established by certified engineers. They also assume responsibility for proper installation and commissioning of the gas system.

Tab. 1.1 Target groups

INFO BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH - hereinafter referred to as BORA - do not assume any liability for damage arising from non-adherence to these documents and from improper assembly! The electricity and gas connections must be made by a qualified specialist. Installation must comply with the valid standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

1.2 Validity of the operating and installation instructions

These instructions apply to several device versions. It is therefore possible that some of the features described do not apply to your appliance. The details of the figures contained herein may differ from some appliance versions and are to be understood as schematic diagrams.

1.3 Other applicable documents

These operating and installation instructions are valid in conjunction with other documents, which must be adhered to.

Please be sure to adhere to all documents that form part of the scope of delivery.

INFO BORA accepts no liability for damage caused by failure to comply with these documents!

Directives

This device meets the following EU/EC directives:

2014/30/EU EMC Directive
 2014/35/EU Low Voltage Directive
 2009/125/EC Ecodesign Directive
 2011/65/EU RoHS Directive

1.4 Presentation of information

To make working with these instructions quick and easy, consistent formatting, numbering, symbols, safety instructions, terms and abbreviations are used throughout.

Handling instructions are marked with an arrow.

- ▶ Always carry out handling instructions in the sequence shown.

Bullet points are indicated by a square bullet point at the edge of the line.

- Bullet point 1
- Bullet point 2

INFO Information points out specific points you must always comply with.

Safety and warning information

The safety and warning information in these instructions are highlighted with symbols and signal words.

Safety and warning information is structured as follows:

WARNING SYMBOL AND SIGNAL WORD!

- Type and source of the danger
 - Consequences of non-compliance
 - ▶ Measures to minimise risk
-

The following applies:

- The warning symbol draws attention to the danger.
- The signal word indicates the severity of the risk.

Warning sign	Signal word	Hazard
	Danger	Indicates an imminent hazardous situation which could lead to death or serious injury if ignored.
	Warning	Indicates an imminent hazardous situation which could lead to death or serious injury if ignored.
	Caution	Indicates a potentially hazardous situation which could lead to slight or minor injuries if ignored.
–	Caution	Indicates a situation which could result in material damage if ignored.

Tab. 1.2 Meaning of warning symbols and signal words

2 Safety

2.1 General safety instructions

INFO The appliance complies with the stipulated safety requirements. The user is responsible for appliance cleaning and maintenance as well as its safe use. Improper use can lead to personal injury and damage to property.

- The operating and installation instructions contain important information about installation and operation. These enable you to protect yourself against injuries and prevent damage to the appliance. Contact details for further information as well as application and usage questions can be found on the back of these operating and installation instructions.
- The term “appliance” is used to refer to cooktops, cooktop extractors or cooktops with integrated cooktop extractor.
 - ▶ Read the operating and installation instructions fully before using the appliance for the first time.
 - ▶ Always store the operating and installation instructions within easy reach so that they can be accessed if required.
 - ▶ Pass the operating and installation instructions to the next owner if you sell the appliance.
 - ▶ Conduct all work extremely attentively and conscientiously.
 - ▶ Check the appliance for visible damage when unpacking it.
 - ▶ Do not connect a damaged appliance.
 - ▶ Do not connect the appliance to the mains until the duct system has been installed or the recirculation filter has been fitted.
 - ▶ Do not use the appliance until installation is complete. This is the only way to ensure safe operation.
 - ▶ Make sure contact with hot cooking surfaces is not possible.
 - ▶ Do not place any objects on the operating panel or the cooktop extractor air inlet nozzle.
 - ▶ Switch off the appliance after use.
 - ▶ Keep pets away from the appliance.

CAUTION!

Appliance components can cause injury if dropped!

Appliance components such as pan supports, operating controls, covers, grease filters, etc. can cause injury if dropped.

- ▶ Place any appliance components that have been removed in a safe place near the appliances.
- ▶ Ensure that no components removed from the appliance can fall on the floor.

Unauthorised modifications

Unauthorised modifications can cause the appliance to pose risks.

- ▶ Do not make any changes to the appliance.

Households with children and people with special needs

- ▶ The appliance can be used by children aged 8 and above as well as people with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed how to use the appliance safely and understand the resultant risks.
- ▶ Supervise children in the vicinity of the appliance.
- ▶ Children must not play with the appliance.
- ▶ Use the childproofing feature in order to prevent children from switching on the cooktop or changing the settings when they are unattended.
- ▶ Do not store any items that could be of interest to children in storage spaces above or behind the appliance. Otherwise, they will be tempted to climb onto the appliance.
- ▶ Keep children and other persons away from the cooking surfaces when hot.

Recirculation mode

INFO When cooking, additional moisture is released into the ambient air.

INFO In recirculation mode, only a slight amount of moisture is removed from the cooking vapour.

- ▶ When using recirculation mode, ensure a sufficient supply of fresh air, e.g. by opening a window.
- ▶ Ensure a normal and comfortable room climate (humidity of 45–60%), e.g. by opening natural ventilation openings or using domestic ventilation systems.
- ▶ After every use in recirculation mode, switch the cooktop extractor to a low level for about 20 minutes or activate the automatic after-run function.

Faults and errors

- ▶ Observe the information in the Troubleshooting chapter.
- ▶ In the event of any faults or errors that are not covered, switch the appliance off.

2.2 Safety instructions – Cooktop operation

- ▶ Avoid over-cooking.
- ▶ Pay attention to the residual heat display.
- ▶ Do not place any hot cookware in the area of the cooktop display so as not to damage the underlying electronics.
- ▶ Make sure that the base of the cookware as well as the cooking zones are clean and dry.
- ▶ Always lift (do not drag!) the cookware to prevent scratching and abrasion on the surface.



DANGER!

Danger of fire caused by leaving the cooktop unattended!

Oil or fat in the pot can quickly heat up and ignite.

- ▶ Never leave oil or fat to heat up unattended.
- ▶ Never extinguish oil and fat fires with water.
- ▶ Suffocate the fire, for example by using a lid.



DANGER!

Risk of explosion caused by flammable liquids!

Flammable liquids in the vicinity of the cooktop can explode and cause serious injury.

- ▶ Do not spray aerosols in the vicinity of this appliance while it is in operation.
- ▶ Do not place any flammable liquids in the vicinity of the cooktop.



DANGER!

Risk of electric shock!

Cracks, fissures or fractures in the glass ceramic panel can damage the underlying electronics. This can cause an electrical shock.

- ▶ If there are any cracks, fissures or fractures in the glass ceramic, switch the appliance off immediately.
- ▶ Securely disconnect the appliance from the mains using the LS switch, fuses, automatic circuit breakers or contactor.



WARNING!

Risk of burns from hot cooktop!

The cooktop and its exposed areas get hot during use. Once the cooking zone is switched off, it takes a little while to cool down to below 60 °C. Touching hot surfaces can cause serious burns.

- ▶ Never touch the cooktop when it is hot.
- ▶ Keep children away from the cooktop when it is hot or ensure they are supervised at all times.



WARNING!

During or after a power cut, cooktops may still be hot!

In the event of a power cut, a cooktop that was previously in operation may still be hot even though there is no indication of residual heat.

- ▶ Do not touch the cooktop while it is still hot.
- ▶ Keep children away from the hot cooktop.



WARNING!

Risk of fire from objects on the cooking surfaces!

The cooktop and its exposed parts are hot when the cooking zone is switched on and during the cooling phase. Objects on the cooktop can heat up and catch fire.

- ▶ Do not place any items on the cooktop.

**WARNING!****Risk of burns from hot objects!**

The cooktop and its exposed parts are hot when the cooktop is in use and during the cooling phase. Objects on the cooktop heat up very quickly and can cause serious burns. This particularly applies to metal objects (e.g. knives, forks, spoons, lids or cooktop extractor covers).

- ▶ Do not place any items on the cooktop.
- ▶ Please use suitable tools (pot holders, oven gloves).

**WARNING!****Risk of burns from hot cookware!**

Handles projecting over the edge are enticing for children to grab.

- ▶ Do not turn pot and pan handles so they stick out beyond the work surface.
- ▶ Make sure that children cannot pull hot pots and pans over.
- ▶ Use suitable stove guards.
- ▶ Do not use unsuitable stove guards (accident risk).
- ▶ To choose a suitable stove guard, contact your specialist supplier or the BORA Service Team.

**WARNING!****Risk of burns!**

Liquid between the cooking zone and the pan base can evaporate and cause burns.

- ▶ Make sure that the cooking zone and the pan base are always dry.

CAUTION!**Damage from hard and pointed objects!**

Hard and pointed objects can damage the glass ceramic panel of the cooktop.

- ▶ Do not use the surface of the cooktop as a worktop.
- ▶ Do not use hard and pointed objects when working on the cooktop.

CAUTION!**Damage from sugary and salty foods!**

Sugary and salty foods and juices can damage the hot cooking zone.

- ▶ Make sure sugary and salty foods or juices do not get onto the cooking zone while it is hot.
- ▶ Remove sugary and salty foods and juices from the hot cooking zone immediately.

CAUTION!**Escaping hot liquids!**

Unattended pans can boil over allowing hot liquids to escape.

- ▶ Always keep an eye on pans while cooking.
- ▶ Short cooking sessions must be constantly monitored.

CAUTION!**Damage caused by objects on the cooktop!**

Objects such as cookware lids on the cooktop can damage the glass ceramic panel.

- ▶ Do not place any objects on the cooktop while it is hot.

2.2.1 Safety instructions – cooktop installation

- ▶ Do not rely on the pan size recognition.

Effect on pace makers, hearing aids and metal implants**INFO**

Induction cooktops generate a high-frequency electromagnetic field in the area of the cooking zones. The cooking zones may affect pacemakers, hearing aids or metal implants negatively or disturb their function when in close proximity. A reduced function of the pacemaker is unlikely.

- ▶ If in doubt, contact the manufacturer of your medical device or your doctor.

2.3 Safety instructions – Cooktop extractor

- ▶ Do not place any hot cookware on the air inlet nozzle of the cooktop extractor.
- ▶ Make sure that hot cookware does not touch the edge of the air inlet nozzle.



DANGER!

Risk of smoke inhalation!

Using a fireplace that depends on the air in the room produces combustion gases.

If the cooktop extractor is used in conjunction with a fireplace that depends on the air in the room, toxic combustion gases (carbon monoxide) can be extracted from the chimney or outlet duct into the living area.

- ▶ Make sure that there is always a sufficient air supply.



DANGER!

Fire risk from flambéing!

While the cooktop extractor is working, it sucks up grease from cooking. Flambéing food can cause the grease to catch fire.

- ▶ Clean the cooktop extractor regularly.
- ▶ Never work with a naked flame while the cooktop extractor is running.



DANGER!

Fire risk from fat deposits!

If the stainless steel grease filter is not cleaned regularly, this can lead to increased levels of grease in it. This increases the fire risk.

- ▶ Clean and replace the filter at regular intervals.



CAUTION!

Exposed parts may become hot!

The cooktop extractor and its exposed parts are hot when the cooking zone is switched on and during the cooling phase.

- ▶ Please use suitable tools (pot holders, oven gloves).



WARNING!

Risk of injury when opening the bottom housing cover!

There is a risk of injury while the fan is turning.

- ▶ Switch off the cooktop extractor and the cooktop.
- ▶ Turn off the mains supply.

CAUTION!

Damage caused by objects or paper suctioned in!

Small and light items, such as cleaning cloths made from material or paper, can be suctioned into the cooktop extractor. This can damage the fan or impair the exhaust performance.

- ▶ Do not store any items or paper on the cooktop extractor.

CAUTION!

Damage caused by grease and dirt deposits!

Grease and dirt deposits can prevent the cooktop extractor from functioning properly.

- ▶ Never use the cooktop extractor without a stainless steel grease filter.

2.4 Safety Instructions – Installation

The appliance must only be installed and assembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

Work on electrical components must be conducted by trained electrical personnel.

The electrical safety of the appliance is only guaranteed if it is connected to a protective conductor system that has been installed in line with regulations. Ensure that this basic safety precaution is met.

- ▶ Check the appliance for visible damage prior to installation.
- ▶ Do not install any damaged appliance.
- A damaged appliance may put your safety at risk.

Repair and maintenance work may only be carried out by specialists authorised by the manufacturer.

**DANGER!****Risk of asphyxiation!**

Packaging components (e.g. film, polystyrene) can be life-threatening for children.

- ▶ Store all packaging components out of reach of children.
- ▶ Dispose of the packaging properly and immediately.

2.4.1 Safety Instructions – Cooktop installation

**DANGER!****Risk of electric shock!**

Connecting the appliance to the mains incorrectly poses a risk of electric shock.

- ▶ Make sure that the appliance has a fixed connection to the mains voltage.
- ▶ Make sure that the appliance is connected to a properly installed protective conductor system.
- ▶ Make sure that technical equipment is provided to enable all of the appliance's poles to be disconnected from the mains with a contact opening width of at least 3 mm (LS switch and automatic circuit breakers, fuses, contactor).

**DANGER!****Risk of electric shock!**

The connection cable can be damaged if it comes into contact with hot cooking zones. A damaged connection cable can cause a (fatal) electrical shock.

- ▶ Make sure that the connection cable does not come into contact with hot cooking surfaces.
- ▶ Make sure that the connection cable does not become trapped or damaged.

**CAUTION!****Lifting heavy loads can cause back injuries!**

If not handled correctly, removing and installing the appliance can cause injuries to the limbs or torso.

- ▶ Removing the cooktop from the packaging is a two-person job.
- ▶ Placing the cooktop into the worktop cut-out is a two-person job.
- ▶ Use appropriate aids to prevent damage or injuries to limbs or torso.

2.4.2 Safety Instructions – Cooktop extractor

**DANGER!****Risk of poisoning caused by combustion gases!**

When the cooktop extractor is used in exhaust mode, it draws in air from the room it is installed in and from neighbouring rooms. Without sufficient air, there will be a drop in air pressure. Toxic gases could be drawn out of the chimney or extraction ducting on a fireplace that depends on the room air and back into the room.

- ▶ Make sure that there is always a sufficient air supply.
- ▶ Only use reliable, tried-and-tested switching devices, (e.g. window contact switch, low pressure warning device) and have them approved by a qualified expert (certified chimney sweep).

**DANGER!****Risk of electric shock!**

Incorrect stripping of the connection cable to external switching devices results in a risk of electric shock.

- ▶ Ensure that the stated stripping lengths are adhered to.



DANGER!
Risk of electric shock and damage to property!

A damaged operating unit can lead to a short circuit.

- ▶ Do not operate any appliance with a damaged operating unit.
- ▶ Inform a BORA Service technician and have the operating unit replaced.

Special safety information for exhaust systems

- ▶ Please pay attention to the channel length between the fan and the wall sleeve in straight channel design.
- A minimum space of 90 cm between the blow out opening of the fan and the blow out opening of the wall sleeve must be planned in.

2.5 Safety instructions – Cleaning and Maintenance

The appliance must be cleaned at regular intervals. Dirt can lead to damage or bothersome odours. Remove dirt immediately.

- Any work involving cleaning and maintenance must not be carried out by children unless they are supervised at all times while doing so.
- ▶ Do not use a steam cleaner for cleaning. Steam can cause a short circuit on live parts and thus lead to property damage (see the Cleaning and Maintenance chapter).
- ▶ When cleaning, ensure that no water penetrates the appliance. Use only a slightly damp cloth. Never spray the device with water. Water penetration can cause damage!
- ▶ Whenever possible, clean the cooktop after every use.
- ▶ Clean the cooktop only after it has cooled down.
- ▶ When cleaning, only use non-abrasive detergents to prevent scratching and abrasion on the surface.

2.6 Safety instructions – disassembly and disposal

The appliance must only be disassembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

Work on electrical components must only be conducted by trained electrical personnel.



DANGER!
Risk of electric shock!

Incorrectly disconnecting the appliance from the mains results in a risk of electric shock.

- ▶ Securely disconnect the appliance from the mains using LS switches, fuses, automatic circuit breakers or contactors.
- ▶ Use an authorised measuring device to ensure that there is no power to the appliance.
- ▶ Do not touch exposed contacts on the electronic unit as they can contain residual charge.

2.7 Safety instructions – spare parts



WARNING!
Risk of injury and damage to property!

Incorrect components can lead to personal injury or damage to the appliance. Modifications, additions or alterations to the appliance can lead to safety risks.

- ▶ Only use original spare parts for repairs.

INFO

A damaged power supply cable must be replaced by a suitable power supply cable. This may only be done by an authorised member of the After Sales Service team.

2.8 Use as intended

The appliance cannot be used at altitudes above 2,000 m (metres above sea level).

The appliance is solely intended for preparing food in private households. This appliance is not intended for:

- Outdoor use
- Installation in vehicles
- Heating rooms
- Use in non-stationary installation sites (e.g. on ships)
- Use with an external timer or a separate remote control system (remote operation)

Any use other than that specified in these operating and installation instructions or any use that goes beyond that which is described here is classed as unintended. BORA does not assume any liability for damages caused by improper use or incorrect operation.

All misuse is prohibited!

INFO BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH do not assume any liability for damage arising from non-adherence to the safety and warning information.

3 Technical data

3.1 X Pure (PUXA, PUXU)

Parameter	Value
Multiphase supply voltage	380-415 V 2N/3N
Single-phase supply voltage	220-240 V
Frequency	50 Hz/60 Hz
Maximum power consumption	7,6 kW (4,4 kW / 3,6 kW)
Fuse protection/Three-phase power supply	3 x 16 A
Fuse protection/Two-phase power supply	2 x 16 A
Fuse protection/Single-phase power supply	1 x 32 A (1 x 20 A / 1 x 16 A)
Dimensions (width x depth x height)	830 x 515 x 199 mm
Weight (incl. accessories/packageging)	23 kg (PUXA) 24,5 kg (PUXU)
Cooktop	
Material surface	glass ceramic
Power levels	1 – 9, P
Front cooking zone size	230 x 230 mm
Front cooking zone power setting output	2100 W 3000 W
Rear cooking zone size	230 x 230 mm
Rear cooking zone power setting output	2100 W 3000 W
Cooktop energy consumption (pan size)	
Cooking zone 1 front left (150 mm)	179,4 Wh/kg
Cooking zone 2 back left (180 mm)	176,2 Wh/kg
Cooking zone 1 and 2 bridget (240 mm)	191,5 Wh/kg
Cooking zone 3 front right (150 mm)	174,7 Wh/kg
Cooking zone 4 back right (180 mm)	177,5 Wh/kg
Cooking zones 3 and 4 bridget (240 mm)	197,1 Wh/kg
Total (average)	182,7 Wh/kg
Extraction system (PUXA)	
Power levels	1 – 9, P
Exhaust air connection	BORA Ecotube
Recirculation system (PUXU)	
Power levels	1-9, P
Recirculation connection (WxH)	445 x 137 mm
Recirculation filter (PUXU)	
Maximum filter capacity	150 (1 year)

Tab. 3.1 Technical data X Pure (PUXA, PUXU)

3.2 Pure (PURA, PURU)

Parameter	Value
Multiphase supply voltage	380-415 V 2N/3N
Single-phase supply voltage	220-240 V
Frequency	50 Hz/60 Hz
Maximum power consumption	7,6 kW (4,4 kW / 3,6 kW)
Fuse protection/Three-phase power supply	3 x 16 A
Fuse protection/Two-phase power supply	2 x 16 A
Fuse protection/Single-phase power supply	1 x 32 A (1 x 20 A / 1 x 16 A)
Dimensions (width x depth x height)	760 x 515 x 199 mm
Weight (incl. accessories/packageging)	22,5 kg (PURA) 24,4 kg (PURU)
Cooktop	
Material surface	glass ceramic
Power levels	1 – 9, P
Front cooking zone size	Ø 210 mm
Front cooking zone power setting output	2300 W 3000 W
Rear cooking zone size	Ø 175 mm
Rear cooking zone power setting output	1400 W 2100 W
Cooktop energy consumption (pan size)	
Cooking zone 1 front left (210 mm)	186.3 Wh/kg
Cooking zone 2 back left (180 mm)	177.2 Wh/kg
Cooking zone 3 front right (210 mm)	191.5 Wh/kg
Cooking zone 4 back right (150 mm)	177.2 Wh/kg
Total (average)	183.1 Wh/kg
Extraction system (PURA)	
Power levels	1 – 9, P
Exhaust air connection	BORA Ecotube
Recirculation system (PURU)	
Power levels	1-9, P
Recirculation connection (WxH)	445 x 137 mm
Recirculation filter (PURU)	
Maximum filter capacity	150 (1 year)

Tab. 3.2 Technical data Pure (PURA, PURU)

Device dimensions PUXA

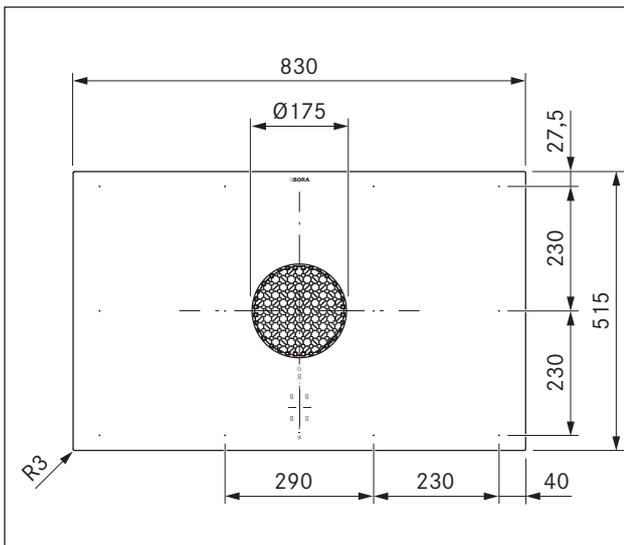


Fig. 3.1 PUXA device dimensions top view

Device dimensions PUXU

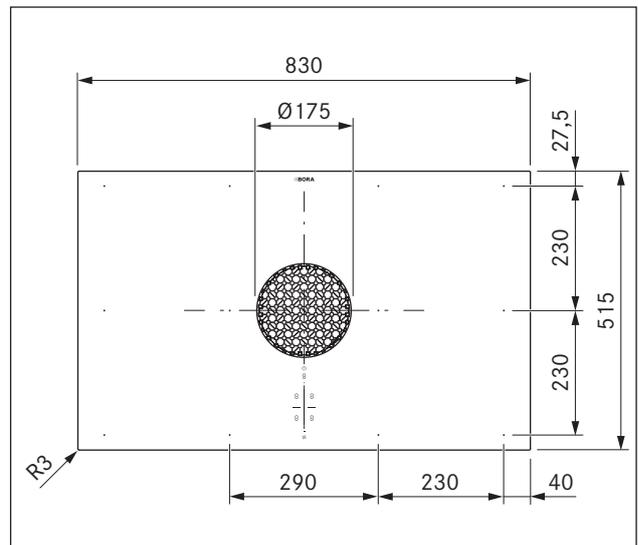


Fig. 3.4 PUXU device dimensions top view

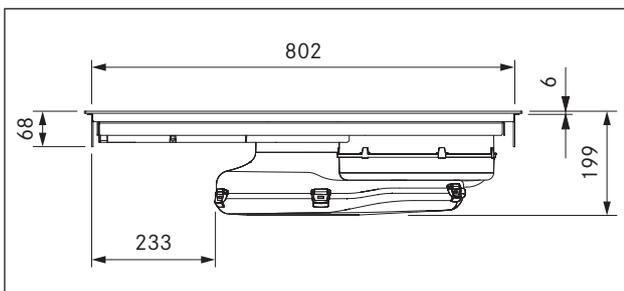


Fig. 3.2 PUXA device dimensions front view

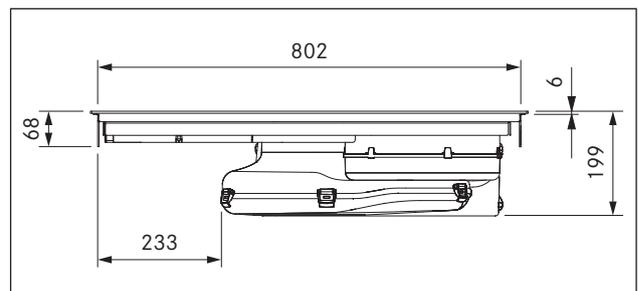


Fig. 3.5 PUXU device dimensions front view

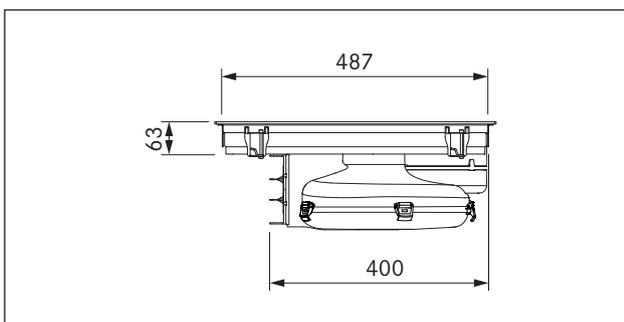


Fig. 3.3 PUXA device dimensions side view

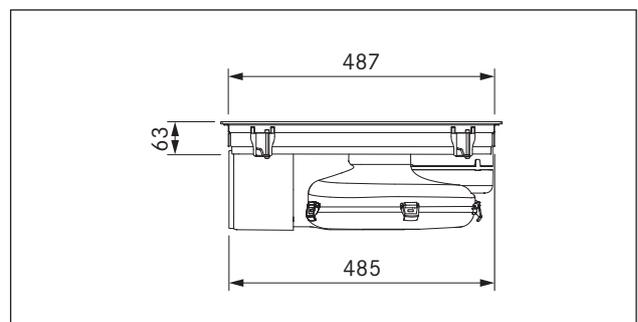


Fig. 3.6 PUXU device dimensions side view

Device dimensions PURA

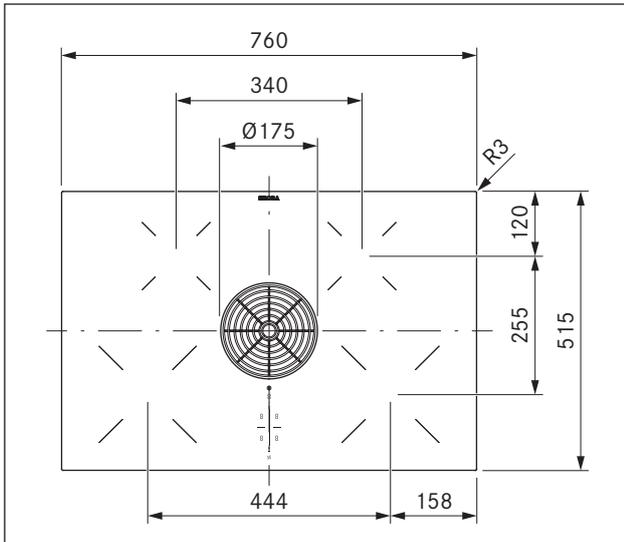


Fig. 3.7 PURA device dimensions top view

Device dimensions PURU

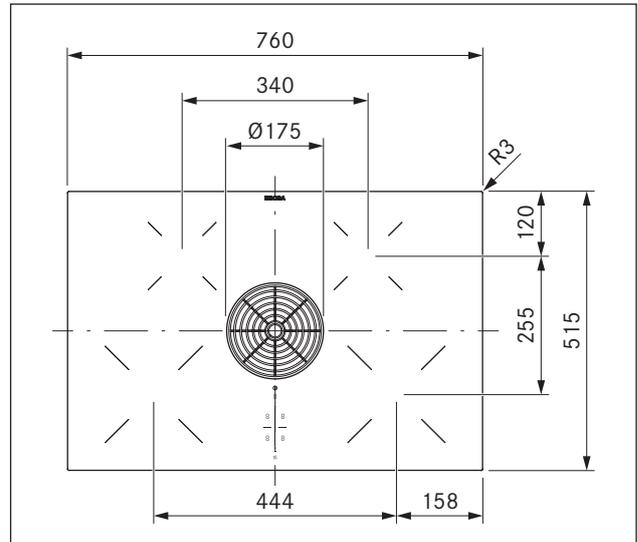


Fig. 3.10 PURU device dimensions top view

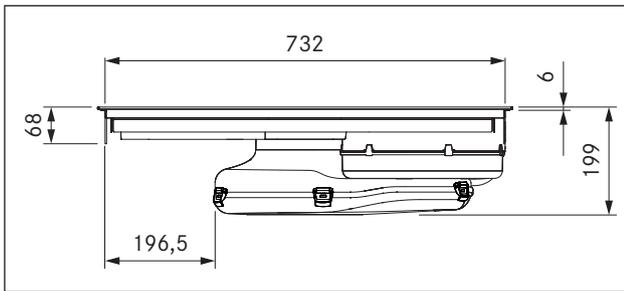


Fig. 3.8 PURA device dimensions front view

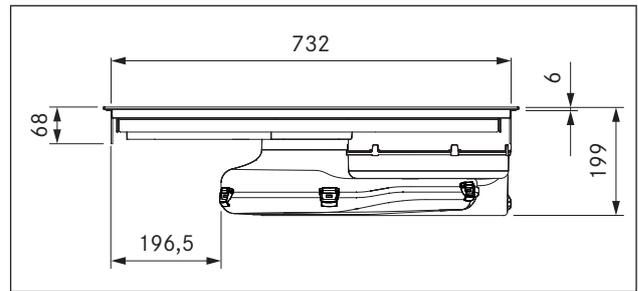


Fig. 3.11 PURU device dimensions front view

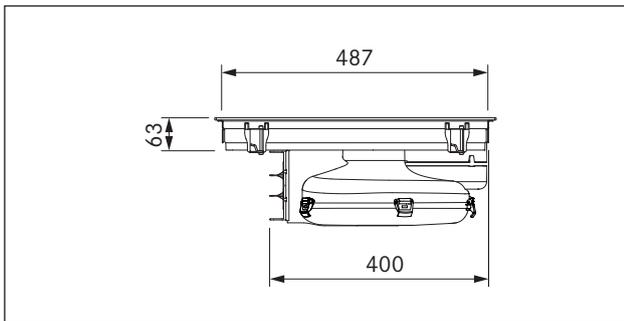


Fig. 3.9 PURA device dimensions side view

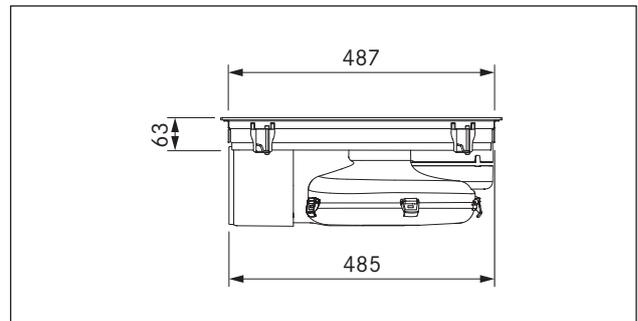


Fig. 3.12 PURU device dimensions side view

4 Energy labelling

Product description	BORA X Pure surface induction cooktop with integrated cooktop extractor PUXA	BORA Pure induction cooktop with integrated cooktop extractor PURA	
Operating mode	Exhaust air	Exhaust air	
Energy consumption	Value	Value	EN standard
Annual energy consumption (AEC_{hood})	35,6 kWh/a	33.7 kWh/a	61591
Energy efficiency class	A+	A+	61591
Flow volume			
Fluid dynamic efficiency (FDE_{hood})	32,9 %	32.6 %	61591
Fluid dynamic efficiency class	A	A	61591
Air flow level 1 minimum	187,3 m ³ /h	179.1 m ³ /h	61591
Air flow level 9 maximum	563,3 m ³ /h	548.3 m ³ /h	61591
Air flow power level (Q_{Max})	626,1 m ³ /h	622 m ³ /h	61591
Lighting			
Lighting efficiency (LE_{hood})	* lx/Watt	* lx/Watt	*
Lighting efficiency class	*	*	*
Grease filtering			
Level 9 maximum (GFE_{hood})	96,4 %	97.8 %	61591
Class at maximum level	A	A	61591
Sound power level			
Level 1 minimum	41,2 dB(A)	40.1 dB(A)	60704-2-13
Level 9 maximum	66,4 dB(A)	65.8 dB(A)	60704-2-13
Power setting	68,6 dB(A)	67.7 dB(A)	60704-2-13
Sound pressure level (additional details)			
Level 1 minimum	28,6 dB(A)	27.5 dB(A)	**
Level 9 maximum	53,8 dB(A)	53.2 dB(A)	**
Power setting	56,0 dB(A)	55.1 dB(A)	**
Details according to 66/2014			
Power consumption in off mode (P_o)	0,18 W	0.12 W	61591
Time increase factor	0,8	0.8	61591
Energy efficiency index (EEl_{hood})	43,3	42.8	61591
Air flow rate at the best efficiency point (Q_{BEP})	313,4 m ³ /h	304.3 m ³ /h	61591
Pressure at the best efficiency point (P_{BEP})	460,7 Pa	446 Pa	61591
Electric power input at the best efficiency point (W_{BEP})	122,0 W	115.5 W	61591

Tab. 4.1 Energy labelling instructions according to directive (EU) 65/2015 and 66/2014 respectively

* This specification is not applicable for this product.

** The sound pressure level has been determined from a distance of 1 m (distance-dependent level recording) on the basis of the sound power level established in EN 60704-2-13.

5 Device description

Observe all safety and warning information during operation (see Safety chapter).

5.1 Model description

Model	Long description
PUXA	BORA X Pure surface induction cooktop with integrated cooktop extractor – exhaust air
PUXU	BORA X Pure surface induction cooktop with integrated cooktop extractor – recirculation
PURA	BORA Pure induction cooktop with integrated cooktop extractor – exhaust air
PURU	BORA Pure induction cooktop with integrated cooktop extractor – recirculation

Tab. 5.1 Model description

5.2 System description

5.2.1 Structure

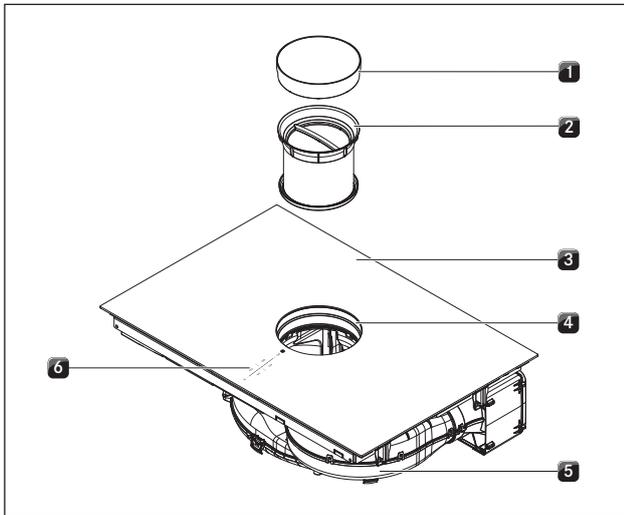


Fig. 5.1 Cooktop

- [1] Air inlet nozzle
- [2] Stainless steel grease filter
- [3] Cooktop
- [4] Inlet opening
- [5] Fan
- [6] Operating panel

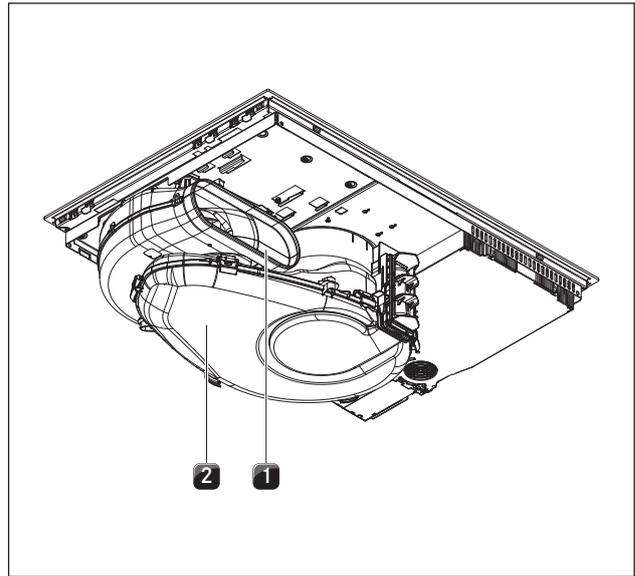


Fig. 5.2 Back view of PUXA, PURA

- [1] Exhaust opening
- [2] Air guiding housing with housing base

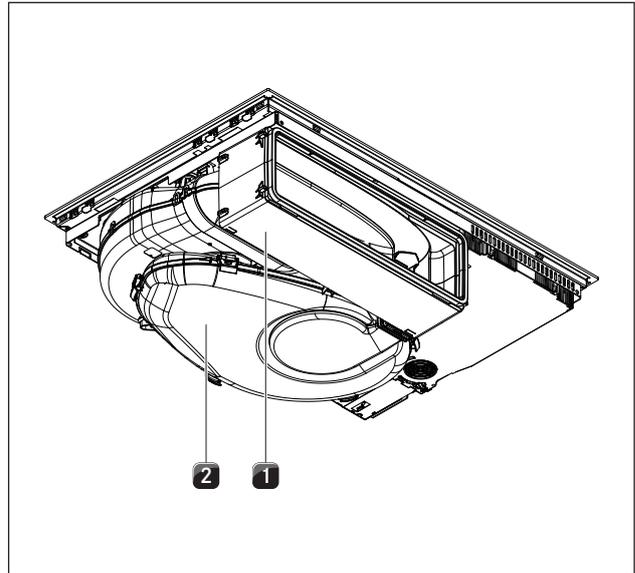


Fig. 5.3 Back view of PUXU, PURU

- [1] Air cleaning box with telescopic pull-out
- [2] Air guiding housing with housing base

5.2.2 Operating panel and operating principle

INFO The operating principle and functions are described in more detail in the Operation chapter.

The cooktop extractor and cooktops are operated via a central operating panel. The operating panel is fitted with electronic sensor buttons and display panels. The sensor buttons respond to finger contact (touch zones).

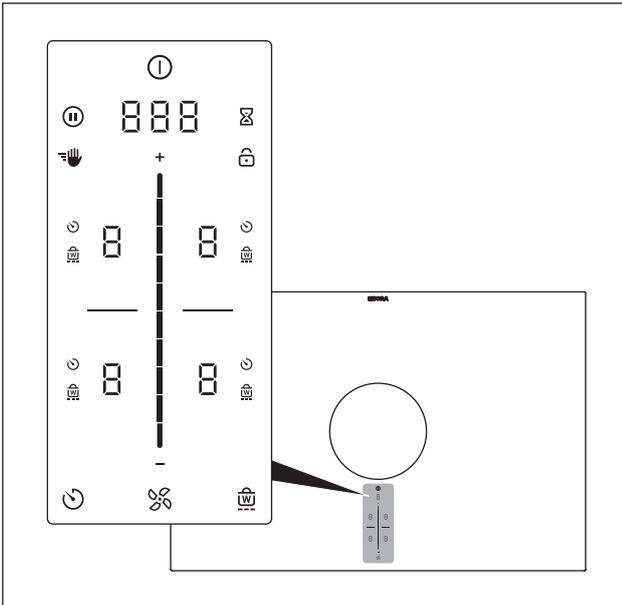


Fig. 5.4 Central touch/slider operating panel

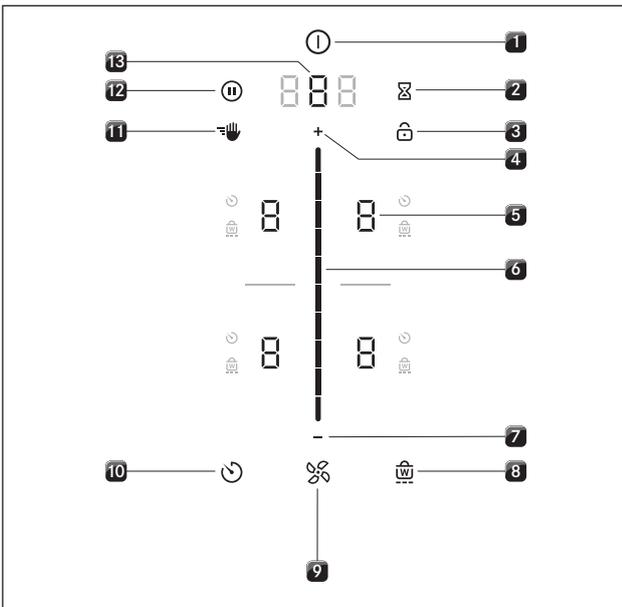


Fig. 5.5 Touch zones/buttons

- [1] Switching on/off
- [2] Short-time timer (egg timer)
- [3] Display lock
- [4] Power level setting zone plus
- [5] Cooking zone selection (4x)
- [6] Touch slider (power level setting zone)
- [7] Power level setting zone minus
- [8] Warming function
- [9] Fan functions
- [10] Cooking zone timer
- [11] Cleaning lock
- [12] Pause function
- [13] Select fan/Call up menu

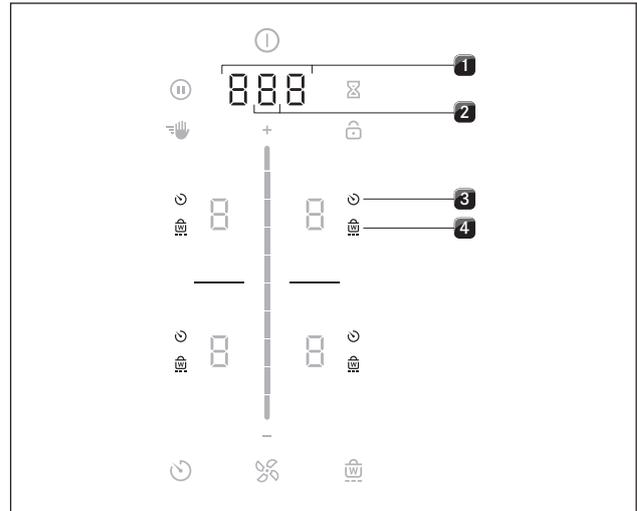


Fig. 5.6 Indicator zones

- [1] Multi-function display
- [2] Fan display
- [3] Cooking zone timer indicator (4x)
- [4] Warming indicator (4x)

5.2.3 Symbols

Symbols	Description	Function/meaning
	Power button	Switching on/off
	Pause button	Activating/deactivating the pause function
	Cleaning button	Activating/deactivating the cleaning lock
	Egg timer button	Setting the short-time timer (egg timer)
	Lock button	Display lock
	Slider	Setting values
	Plus button	Increasing values
	Minus button	Decreasing values
	Fan button	Activating/deactivating the automatic extractor function, cancelling the after-run function
	Timer button	Setting the cooking zone timer
	Warming button	Activating/deactivating the warming function

Tab. 5.2 Meaning of the symbols displayed (icons)

5.2.4 7-segment display

Multi-function display	Meaning	
Fan display	1-9	Power levels
	P	Power setting
	0	Inactive
	A	Automatic extractor function
	n	Automatic after-run
	F	Filter service
Multi-function display	0000	Time indication
	e.g. E	Error code
Cooking zone indicator	Meaning	
Cooking zone indicator	1-9	Power level
	P	Power setting
	u	Warming level (Pure)
	-	Warming level 1 (X Pure)
	=	Warming level 2 (X Pure)
	≡	Warming level 3 (X Pure)
	u	Pan size recognition
	0	Inactive
	H	Residual heat indicator (cooking zone is switched off but still hot)
	E	Error

Tab. 5.3 Meaning of the 7-segment displays

5.2.5 Lighting

INFO The operating panel has 2 different levels of lighting (100% and 50%).

INFO On principle the system adapts the lighting to the current operating scenario. Relevant display elements are more brightly lit and irrelevant ones are dimmed. Unavailable functions are faded out.

Lighting	Use
100%	Function is active and selected
50%	Function is inactive but can be selected
0% (no indicator)	Function is unavailable

Tab. 5.4 Lighting

5.2.6 Sounds

INFO The volume of the acoustic signals can be set in the menu (0% to 100%).

INFO The acoustic signal for the power button cannot be set to 0.

INFO Safety-relevant acoustic signals are always emitted with the volume at 100%.

The system basically differentiates between two different types of acoustic signals:

Acoustic signal	Purpose
Short individual beep (0.1 s)	Confirmation of a selection
Sequence of beeps	Interaction required

Tab. 5.5 Sounds

5.3 How the cooktop extractor works

Depending on the model you purchased, the cooktop extractor can be operated as an exhaust air or a recirculating air version.



Exhaust air mode

The air suctioned away is purified by the grease filter and expelled into the open air via a duct system.

The exhaust air must not be expelled into:

- a smoke or exhaust gas flue that is in operation
- a shaft used for the aeration of rooms where fireplaces are installed.

If the exhaust air is to be directed into a smoke or exhaust gas flue that is not in use, the installation must be checked and approved by the responsible heating engineer.



Recirculation mode

The air suctioned away is purified by the grease filter and an activated charcoal filter and fed back into the room in which the appliance is installed.

To prevent odours in recirculation mode, an odour filter must be used. For hygiene and health reasons, the activated charcoal filter must be replaced at the recommended intervals (see the Cleaning and maintenance chapter).

INFO In recirculation mode, ensure sufficient ventilation and aeration to expel humidity.

5.4 How the induction cooktop works

An induction coil is located underneath an induction cooking zone. If the cooking zone is switched on, this coil creates a magnetic field that acts directly on the base of the pot thus heating it up. The cooking zone is only indirectly heated up by the heat emitted by the pot. Cooking zones with induction only work if the cookware has a magnetisable base.

The induction automatically takes into account the size of the used cookware which means that only the area in the cooking zone covered by the base of the pot is heated up.

► Observe the minimum pot base diameter.

Power levels

The high power output of induction cooktops results in the very quick heating up of cookware. In order to avoid burning food, slight adjustment is needed in comparison to conventional cooking systems when selecting the power level.

Activity	Power level
Melting of butter and chocolate, breaking up gelatine	1
Keeping sauces and soups warm, soaking rice	1 - 3
Cooking potatoes, pasta, soups, ragouts, steaming fruit, vegetables and fish, defrosting food	2 - 6
Frying in coated pans, moderate frying (without overheating the fat) of pork cutlets, fish	6 - 7
Heating up fat, browning fish, cooking thickened sources and soups, making omelettes	7 - 8
Bringing large amounts of liquid to the boil, searing steaks	9
Heating up water	P

Tab. 5.6 Recommendations for power levels

The specifications provided in the table are standard values.

Depending on the cookware and filling quantity, it is recommended to either decrease or increase the power level.

Suitable cookware

INFO The heating and heat-through time for the base of the cookware as well as the cooking results are significantly influenced by the structure and material of the cookware.



Cookware with this symbol is suitable for induction cooktops. The cookware used for the induction cooktop must be made of metal, feature magnetic properties and possess a sufficient bottom surface.

Suitable cookware is made of:

- stainless steel with a magnetisable base
- enamelled steel
- cast iron

Appliance	Cooking zone	Minimum diameter
PUXA	front	120 mm
	rear	120 mm
PUXU	front	120 mm
	rear	120 mm
PURA	front	120 mm
	rear	90 mm
PURU	front	120 mm
	rear	90 mm

Tab. 5.7 Minimum cookware diameter

- Perform a magnet test, if necessary. If a magnet sticks to the base of the utensils, they are normally induction compatible.
- Pay attention to the cookware bottom. The base of the cookware should not show any sign of curvature. Due to incorrect temperature monitoring of the hob caused by the air gap between the cookware and the temperature sensor underneath the hob, overheating may occur. To avoid scratching the cooktop, the bottom of the cookware must not have any sharp grooves or sharp edges.
- Place the cookware (without a mat or similar) directly onto the glass ceramic.

Noises

The following noises may occur in the cookware when using induction cooking zones, depending on the material and the finish of the base:

- Humming may occur when using a high power level. It decreases or disappears if the power level is decreased.
- Crackling or whistling may occur due to bases of cookware being made of different materials (e.g. sandwich base).
- Clicking sounds may occur during electronic switching procedures especially at low power levels.
- Whirring may occur when the cooling fan is switched on. In order to increase the service life of the electronic system, the cooktop is equipped with a cooling fan. The cooling fan switches on automatically if the cooktop is used intensively. You will hear a whirring sound. The cooling fan may continue running after the device has been switched off.

5.5 Overview of features and functions

The BORA X Pure and Pure cooktops with integrated cooktop extractor have the following features and functions:

Features	PUXA	PUXU	PURA	PURU
Electronic power adjustment	✓	✓	✓	✓
Short-time timer (egg timer)	✓	✓	✓	✓
Cooktop extractor functions				
Automatic extractor control	✓	✓	✓	✓
Automatic after-run	✓	✓	✓	✓
Power setting	✓	✓	✓	✓
Filter service display		✓		✓
Cooktop functions				
Automatic heat up function	✓	✓	✓	✓
Pan size recognition	✓	✓	✓	✓
Permanent pan size recognition	✓	✓	✓	✓
Warming function			✓	✓
Variable warming function	✓	✓		
Bridging function	✓	✓		
Automatic bridging function	✓	✓		
Cooking zone timer	✓	✓	✓	✓
Pause function	✓	✓	✓	✓
Power setting	✓	✓	✓	✓
Safety devices				
Childproofing feature	✓	✓	✓	✓
Control lock	✓	✓	✓	✓
Cleaning lock	✓	✓	✓	✓
Residual heat display	✓	✓	✓	✓
Safety shut-down	✓	✓	✓	✓
Overheating protection	✓	✓	✓	✓

Tab. 5.8 Function overview

INFO You will find instructions on how to use/set the individual functions in the Operation chapter.

Electronic power adjustment

The power levels are adjusted via the operating panel by tapping or swiping movements on the touch slider. Alternatively the power levels can also be set using the touch buttons **+** and **-** above and below the touch slider.

Short-time timer (egg timer)

The short-time timer emits both a visual and an acoustic signal after a time set by the user and offers the function of a conventional egg timer.

5.5.1 Cooktop extractor functions

Automatic extractor control

The extractor power level automatically adjusts itself depending on the current cooktop settings. No manual adjustment of the fan controls is necessary but it is possible. The extractor power is automatically adjusted to the highest power level used on all connected cooking zones.

Function	Power levels									
Cooking level	1	2	3	4	5	6	7	8	9	P
Extractor power	4	4	4	4	5	6	7	8	9	P

Tab. 5.9 Extraction performance and cooking level

- If the power level of a cooking zone is changed, the extractor power is automatically adjusted after a 20 second delay.

Automatic after-run

The cooktop extractor continues to run at a lower level and switches off automatically after a defined time. The duration of the after-run function can be set in the menu (10, 15 or 20 minutes). The default duration of the after-run function is 20 minutes.

- When the extractor is switched off at the end of cooking the automatic after-run function is activated.
- Once the automatic after-run period has lapsed the cooktop extractor switches itself off.

INFO BORA expressly recommends use of the cooktop extractor after-run function.

Cooktop extractor power setting

When the power setting is activated, maximum extractor power is available for a predefined time.

This power setting makes it possible to suction away high levels of cooking vapours more quickly. After 5 minutes, the power setting is automatically switched to power level 9.

Filter service display

The cooktop extractor filter service indicator is automatically activated when the end of the activated charcoal filter service life is reached (only in recirculation mode).

- **F** is displayed in the multi-function display.
- The filter service display is shown every time the cooktop extractor is switched on and remains active until the filter has been changed and the filter service display has been reset (see Operation chapter).
- The cooktop extractor can still be operated without limitations.

INFO The components of the grease filter require regular cleaning regardless of the filter service indicator (see Cleaning and Maintenance chapter).

5.5.2 Cooktop functions

Automatic heat up function

When the automatic heat up function is activated, the cooking zone works at full power for a certain time and is then automatically reset to the previously set level.

Power level (continuous cooking level)	Cooking duration in min:sec
1	00:40
2	01:00
3	02:00
4	03:00
5	04:20
6	07:00
7	02:00
8	03:00

Tab. 5.10 Heating time overview

Pan size recognition

The cooking zone recognises the size of the cookware automatically and only targets the energy at that area. It also recognises cookware that is unsuitable or too small or if there is no cookware present.

A cooking zone is not working if \cup/\cup are alternated in the display. This happens if...

- ...it is switched on without cookware or with unsuitable cookware.
- ...the base diameter of the cookware is too small.
- ...the cookware is removed from a switched-on cooking zone.

If no pot is recognised 10 minutes after setting a power level, the cooking zone will switch off automatically.

Permanent pan size recognition

The cooking zone automatically recognises cookware and switches the corresponding operating panel on: Manual activation of the cooking zone is not necessary (see Operation chapter, User menu).

One-level warming function

On the warming level, meals that have already been cooked can be kept warm at a lower temperature without any risk of burning.

- The maximum duration for the warming function is preset to 8 hours.

Variable warming function (3 levels)

Depending on the application or food used, it is possible to choose from 3 warming levels at different temperatures:

Warming level	Symbol	Temperature
1 (melting)	-	≈ 42 °C
2 (keeping warm)	-	≈ 74 °C
3 (simmering)	≡	≈ 94 °C

Tab. 5.11 Warming levels

- The maximum duration for the warming function is limited to 8 hours.

INFO In practice the temperatures of the warming levels may vary slightly as they are influenced by the cookware, the amount of food and the different heating technologies. The temperatures can also vary due to the influence of the cooktop extractor.

Bridging function

With the bridging function two cooking zones can be combined to form one large cooking zone. The power for the combined zones is then adjusted by a single operating control. Power adjustment takes place simultaneously (both cooking zones are operated on the same power level).

The bridging function is suitable for heating food, e.g. in a roaster.

Automatic bridging function

If a large enough cooking pot or roaster is placed on the two cooking zones that are one behind the other, they will automatically be combined to form one large cooking zone. It is not necessary to activate the bridging function manually (see Operation chapter, Customer menu).

Cooking zone timers (automatic cut-off)

The automatic cut-off function automatically switches off the selected cooking zone once a preset time has lapsed. The timer function can also be used on several cooking zones at the same time (multi-timer).

Pause function

With the pause function all cooking zones can be quickly and easily deactivated temporarily. When the function is cancelled, operation resumes at the original settings. The cooking session can be paused for max. 10 minutes. Once 10 minutes have lapsed, the cooking session is automatically ended.

Cooktop power setting

When the power setting is activated, maximum cooking zone power is available for a predefined time.

- The available power is focused on the selected cooking zone, meaning that the max. power of the second cooking zone on that side is automatically and temporarily reduced:
 - If the front cooking zone is operated using the power setting, a maximum power level of 7 can be selected in the rear cooking zone.

- If the rear cooking zone is operated using the power setting, a maximum power level of 7 can be selected in the front cooking zone (max. power level 8 on Pure).
- If the power level selected for the second cooking zone is too high, P will blink three times and the cooking zone will switch back to power level 9.
- After 5 minutes, the cooking zone is automatically switched back to power level 9.

INFO Never heat up oil, fat and the like on the power setting. The bottom of the pan can overheat due to the high power output.

5.6 Safety devices

5.6.1 Childproofing feature

The childproofing feature prevents the appliance from being switched on accidentally or without permission.

5.6.2 Control lock

The control lock prevents the current settings from being changed accidentally or without permission.

- If the control lock is active, the symbol lights up .
- The functions are locked and the indicators on the display are dimmed (exception: On/Off touch button).

5.6.3 Cleaning lock (wipe function)

The cleaning lock prevents settings from being changed when wiping the operating panel during a cooking session. When activated, the operating panel is locked for 10 seconds. The remaining time is displayed. All appliance settings remain unchanged in the meantime.

5.6.4 Residual heat display

If a cooking zone is still hot after switching off, there is a risk of burns or fire. While *H* is displayed for a cooking zone (residual heat display), do not touch the cooking zone or place any heat-sensitive objects on top of it.

- *H* shown at 100% brightness: very high temperature
 - *H* shown at 50% brightness: high temperature
- The display goes out after a sufficient cooling time (temperature < 55°C).

5.6.5 Safety shut-down

Cooktop extractor

The cooktop extractor switches to automatic mode after 120 min if there has been no input or changes to the power level (see Automatic extractor function).

Cooktops

Each cooking zone is automatically switched off after a predefined operating time in which the power level has not been changed. 3 levels are available to set the time until safety shut-down.

- Safety shut-down is preset to level 2.
- The level can be changed in the user menu.

Power levels	Safety shut-down after hrs:min		
	Level 1	Level 2	Level 3
1	12:00	08:24	06:00
2	10:00	06:24	04:00
3	09:00	05:12	02:30
4	08:00	04:12	02:00
5	06:00	03:18	01:30
6	04:00	02:12	01:00
7	04:00	02:12	01:00
8	03:00	01:48	00:45
9	02:00	01:18	00:30
P	00:05	00:05	00:05

Tab. 5.12 Safety shut-down for power levels

Warming level	Safety shut-down after hrs:min		
	Level 1	Level 2	Level 3
	12:00	08:00	04:00

Tab. 5.13 Safety shut-down for the warming level

- ▶ Switch the cooking zone back on if you want to put the cooking zone back into operation.

5.6.6 Overheating protection

INFO If the cooktop overheats, the power is reduced or the cooktop is switched off completely.

The device is fitted with overheating protection. The overheating protection can be triggered if:

- Cookware is heated up empty.
- Oil or fat is heated on high power.
- A hot cooking zone is switched on again after a power cut.

Whilst the overheating protection is active, one of the following steps is taken:

- The activated power setting is switched back to the previous level.
- The power setting P can no longer be switched on.
- The power level set is reduced.
- The cooktop switches off completely.

After a sufficient cooling period, the cooktop can be used again in full.

6 Installation

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Follow the enclosed manufacturer's information

6.1 General installation information

INFO The power supply cable must be provided by the customer.

INFO The appliance must not be installed above cooling devices, dishwashers, stoves, ovens, washing machines or dryers.

INFO The contact surface of the worktops and wall sealing strips must be made of a heat-resistant material (up to approx. 100 °C).

INFO Worktop cut-outs must be moisture-sealed using suitable means and, where necessary, fitted with a thermal insulator.

INFO The integrated cooktop extractor must not be used with other cooktops.

General installation information for cooktops

INFO To ensure that the cooktops perform optimally at all times, there must be sufficient ventilation beneath the cooktops.

INFO The performance of the cooktops is affected or the cooktops overheat if the warm air beneath the cooktops cannot escape.

INFO If a cooktop overheats, the power is automatically reduced or the cooktop is switched off completely (see Overheating protection).

INFO If cable protection (false floor) is planned beneath the appliance, this must be fitted so it does not obstruct ventilation.

- ▶ Make sure that the area below the cooktop has a sufficient air supply.

6.1.1 Simultaneous operation of the cooktop extractor in the exhaust air mode and a fireplace dependent upon the air supply in the room

INFO The state and regional laws and regulations must be observed with regard to the exhaust duct design.

INFO A sufficient air supply must be ensured.

Fireplaces that depend on the air in the room (e.g. gas, oil, wood or coal-fired heaters, continuous-flow water heaters, instantaneous water heaters) draw in air from the room in which they are installed and release the exhaust fumes into the outside air via an exhaust system (e.g. chimney).

If the cooktop extractor is used in exhaust mode, it draws in air from the room in which it is installed as well as from neighbouring rooms. If there is insufficient air supply, low pressure will occur. Toxic gases could be drawn out of the chimney or extraction ducting and back into the room.

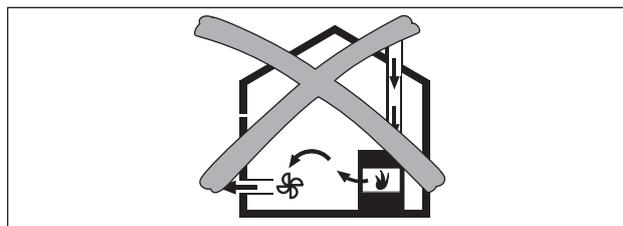


Fig. 6.1 Exhaust air installation - not permitted

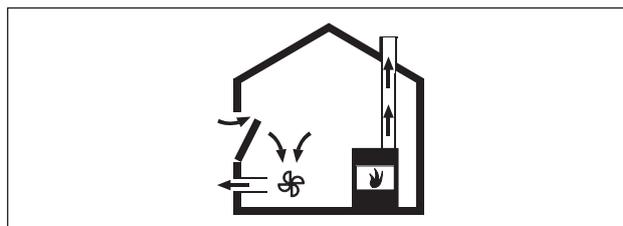


Fig. 6.2 Exhaust air installation - correct

- ▶ If simultaneously operating both a fireplace and the cooktop extractor in the same room, ensure that:
 - the maximum low pressure is 4 Pa (4×10^{-5} bar);
 - a safety device (e.g. window contact switch, low pressure warning device) is used to ensure that a sufficient supply of fresh air is guaranteed;
 - the exhaust air is not be ducted into a chimney that is used for exhaust gases of devices operated with gas or other combustibles;
 - the installation is checked and approved by an authorised certified engineer (e.g. heating engineer).

INFO If the cooktop extractor is used exclusively in recirculation mode, operation with an open fireplace is possible without any additional safety measures.

6.1.2 Home In module PUHIM (optional)

Via this additional interface it is possible to establish a connection to other systems and, for example, a window contact switch or low pressure warning device can be connected. The module is to be integrated in the cooktop.

INFO The BORA Pure Home In module PUHIM is available as an accessory (including installation instructions).

INFO The BORA window contact switch UFKS is available as an accessory (including installation instructions).

6.2 Scope of delivery

Scope of delivery: PUXA, PUXU, PURA, PURU	Quantity
Cooktop with integrated cooktop extractor	1
Air inlet nozzle	1
Stainless steel grease filter	1
Operating and installation instructions	1
Installation clamps	4
Sealing tape	1
Height adjustment plate set	1
Glass ceramic scraper	1
Bag containing various small parts for assembly	1
Additional scope of delivery: PURU, PUXU	
Activated charcoal filter	1
Template for back wall cut-out	1

Tab. 6.1 Scope of delivery

6.2.1 Checking the scope of delivery

- ▶ Make sure the delivery is complete and check it for damage.
- ▶ If there are any missing or damaged parts, please notify BORA After Sales Service immediately.
- ▶ Do not under any circumstances install parts which are damaged.
- ▶ Dispose of transport packaging in the proper manner (see the Decommissioning, disassembly and disposal section).

6.3 Tool and aids

The following special tools are required to correctly install the cooktop:

- Compass saw or hand saw
- Drilling template for cut-out on rear wall PURU (included in scope of delivery)
- Torx 20 screwdriver
- Black, heat-resistant silicone sealant

6.4 Assembly instructions

6.4.1 Required clearance distances

- ▶ Observe the required clearance distances.

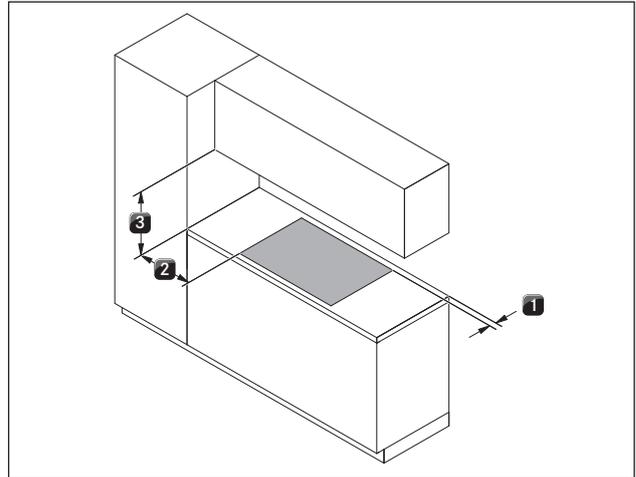


Fig. 6.3 required clearance distances

- [1] Minimum clearance of 50 mm between the worktop cut-out and the rear edge of the worktop.
- [2] Minimum clearance of 300 mm from the left and right of the worktop cut-out to the adjacent cabinet or wall.
- [3] Minimum clearance of 600 mm between the worktop and the wall unit. A minimum clearance of 1000 mm is recommended for ergonomic reasons.

6.4.2 General kitchen unit specifications

- Cross bars on the kitchen unit in the area of the worktop cut-out may need to be removed.
- In the case of thin worktops, there must be a sufficiently rigid support plate on the unit.
- No false floor is necessary below the cooktop. If cable protection (false floor) is planned, the following must be taken into account:
 - It must be fitted in such a way that it can be removed for maintenance work.
 - To ensure sufficient cooktop ventilation, a minimum distance of 15 mm to the bottom edge of the cooktop is to be observed.
- The drawers and/or shelves in the floor unit must be removable.
- For correct installation, the slide-in units of the base cabinet must be shortened depending on the installation situation.

6.4.3 Minimum unit dimensions for X Pure (PUXA, PUXU)

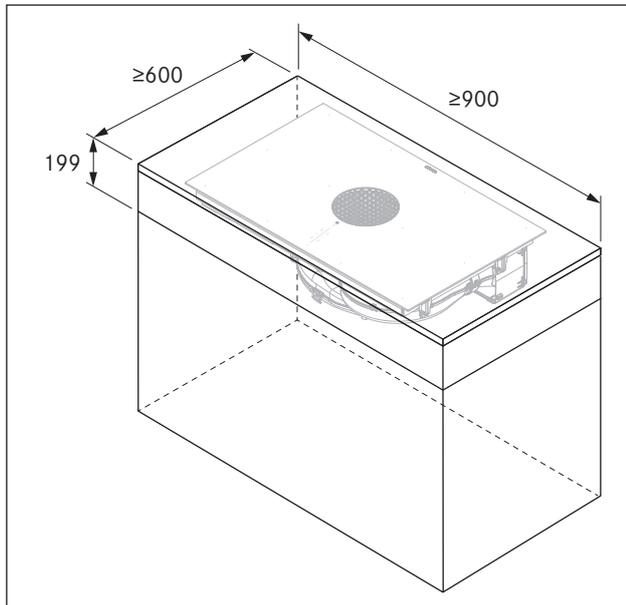


Fig. 6.4 X Pure minimum unit dimensions

6.4.4 Minimum unit dimensions for Pure (PURA, PURU)

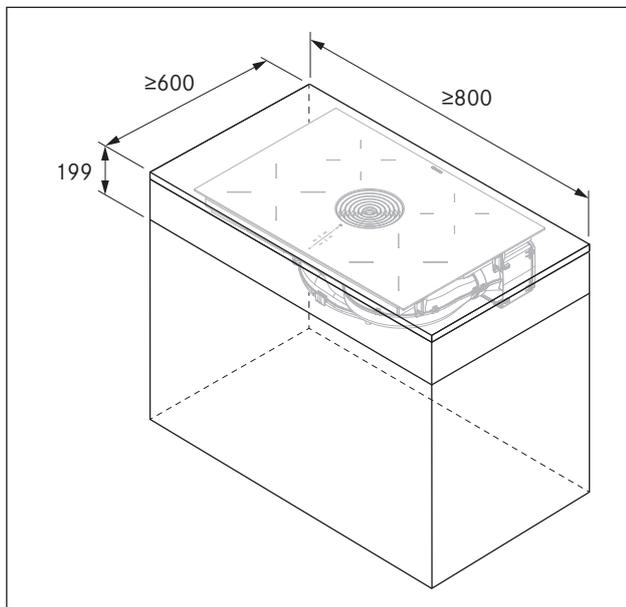


Fig. 6.5 Pure minimum unit dimensions

6.4.5 Return flow of recirculated air in appliances in recirculation mode

In the case of recirculation appliances there must be a return flow aperture in the kitchen units $\geq 500 \text{ cm}^2$. For recirculation, the necessary return flow aperture can be created using a shortened plinth. A slatted plinth with at least the minimum opening cross-section can also be used.

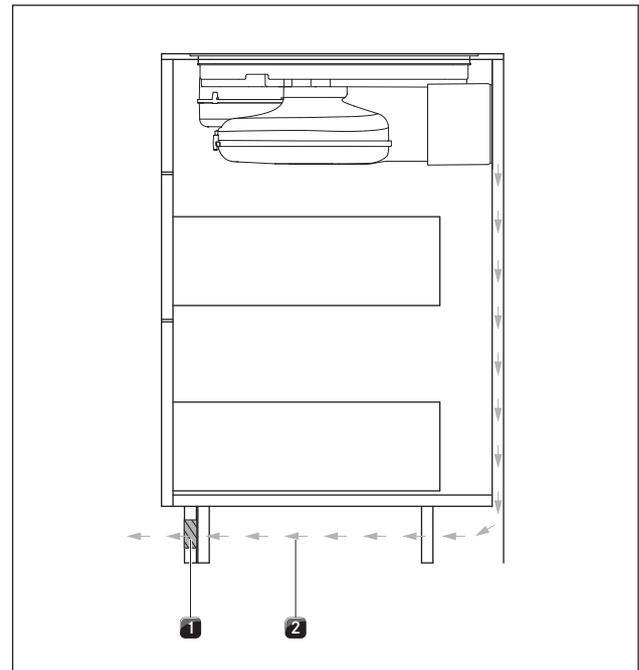


Fig. 6.6 Return flow aperture in the plinth area

- [1] Return flow aperture (total opening cross-section $\geq 500 \text{ cm}^2$)
- [2] Return flow of recirculated air

► Ensure that the return flow aperture is large enough.

6.5 Worktop cut-out

Worktop overhang

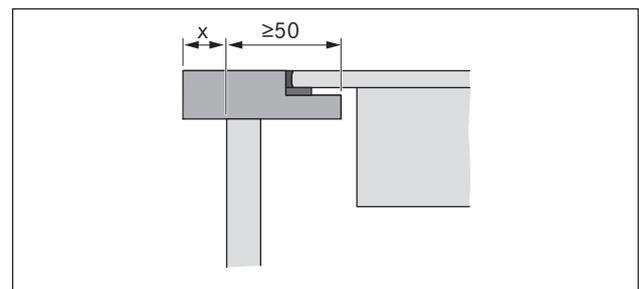


Fig. 6.7 Worktop overhang

- Please note the worktop overhang x when creating the worktop cut-out. Applies to flush installation and surface mounting.
- Create the worktop cut-out taking into account the specified cut-out dimensions.
- Make sure that the cutting surfaces of the worktops are properly sealed.
- Comply with the instructions of the worktop manufacturer.

6.6 Installing the appliance in exhaust mode (PUXA, PURA)

INFO The state and regional laws and regulations must be observed with regard to the exhaust duct design. A sufficient air supply must be ensured.

INFO The exhaust air must be directed to the outside by appropriate exhaust air ducts.

INFO The minimum cross-section of the air ducts must be 176 cm², which equates to a round pipe with a diameter of 150 mm or the BORA Ecotube duct system.

INFO As a general rule, with the built-in fan, a length of duct of up to 6 metres with six 90° bends, 8 metres with four 90° bends or 10 metres with two 90° bends can be installed.

INFO Not compatible with BORA Universal fans.

INFO Planning instructions for the installation of the exhaust air ducts are provided in the BORA ventilation handbook.

6.6.1 Preparing kitchen units

- The back wall of the floor unit must be adjusted for the exhaust air duct.
- A minimum clearance of 110 mm between the back furniture body wall and an adjacent kitchen unit or room wall must be observed for the air duct.

Installation dimensions

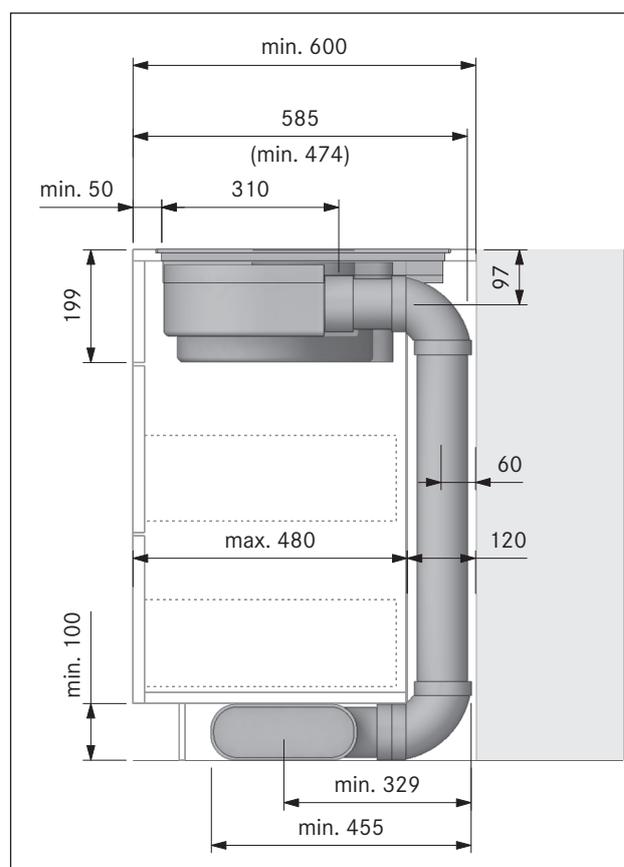


Fig. 6.16 Installation dimensions for exhaust air, worktop depth 600 mm

Adjusting the back wall of the unit

- ▶ Before installation, check the suitability of the floor unit with regard to the necessary installation dimensions for the device and the planned duct system.
- ▶ If necessary, adjust the position of the back wall according to the required installation dimensions.

6.6.2 Preparing the cooktop

Attaching the sealing tape

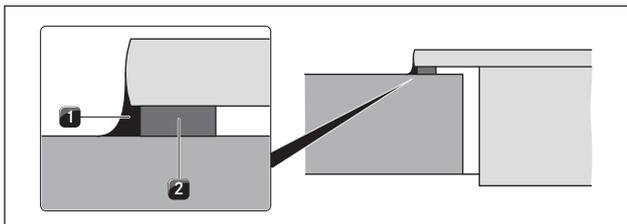


Fig. 6.17 Sealing tape for surface mounting

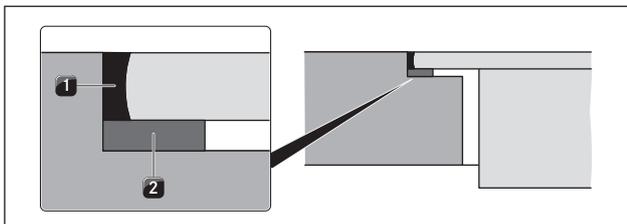


Fig. 6.18 Sealing tape, flush installation

- [1] Black, heat-resistant silicone sealant
- [2] Sealing tape

- ▶ With surface mounting, attach the enclosed sealing tape [2] to the underside of the cooktop before installing it. Do not leave any gaps.
- ▶ With flush installation, attach the enclosed sealing tape [2] to the horizontal cutting edge in the worktop cut-out, even if you are sealing the cooktop with a silicone sealing compound [1] or similar.

Fitting the installation clamps

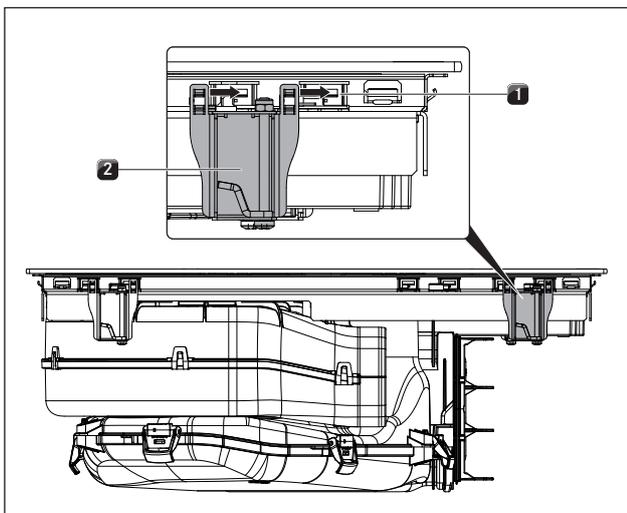


Fig. 6.19 Inserting the cooktop

- [1] Retaining brackets
- [2] Installation clamps

INFO 2 installation claps must be fitted to each side of the cooktop.

- ▶ Slide the 4 installation clamps [2] until they reach the stop position in the retaining brackets [1] on the bottom of the cooktop
- ▶ Slide the 4 retaining brackets into the fixtures provided on the bottom of the cooktop.

6.6.3 Inserting the cooktop

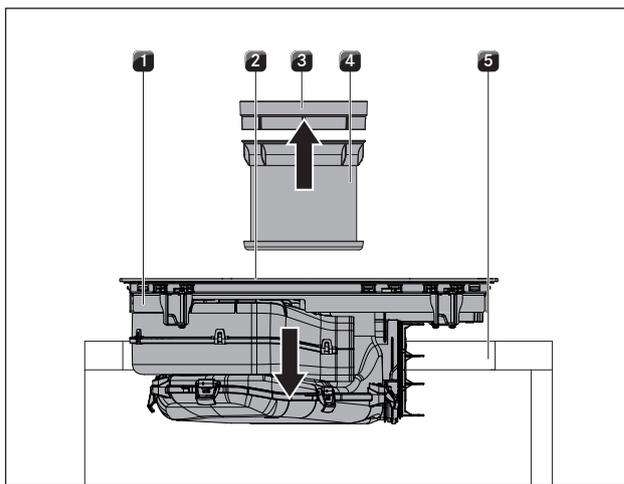


Fig. 6.20 Inserting the cooktop

- [1] Cooktop
- [2] Inlet opening
- [3] Air inlet nozzle
- [4] Stainless steel grease filter
- [5] Worktop cut-out

- ▶ Before inserting the cooktop, remove the air inlet nozzle [3] and the stainless steel grease filter [4].
- ▶ Use the inlet opening [2] as a handle during insertion.
- ▶ Keep the cooktop [1] straight as you lift it into the worktop cut-out [5]
- ▶ Insert the cooktop [1] into the centre of the worktop cut-out [5].
- ▶ Precisely align the cooktop.

Information regarding flush installation:

- ▶ Make sure that the sealing tape of the cooktop is well sealed all the way round.

Information regarding surface mounting:

- ▶ Make sure that the sealing tape for the cooktop is flat against the worktop.

Height adjustment plates for flush installation (optional)

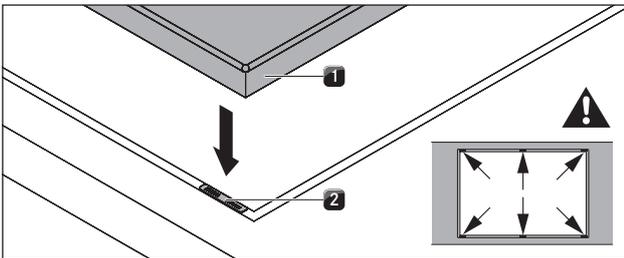


Fig. 6.21 Inserting height adjustment plates

- [1] Cooktop
- [2] Height adjustment plate

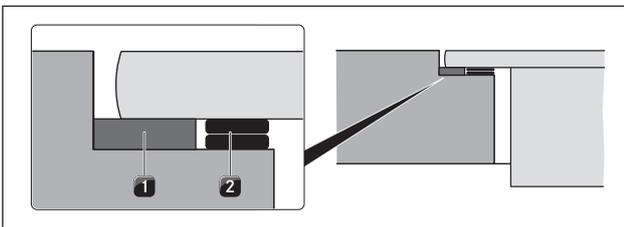


Fig. 6.22 Height adjustment plates

- [1] Sealing tape
- [2] Optional height adjustment plates

- The height adjustment plates are self-adhesive to prevent slipping during installation.
- ▶ If necessary, lay the height adjustment plates [2] underneath.
- ▶ Place the height adjustment plates next to the sealing tape [2].

6.6.4 Securing the cooktop

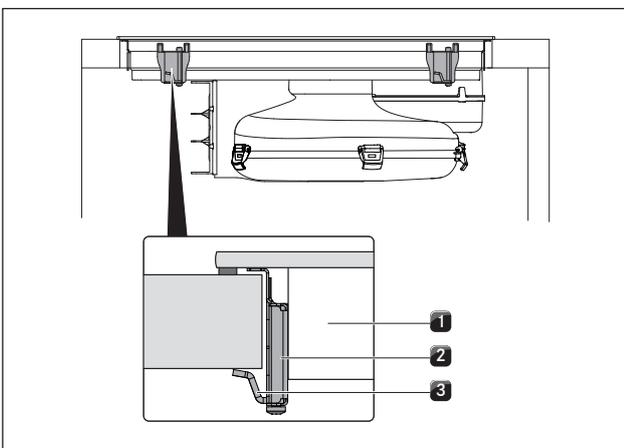


Fig. 6.23 Securing the cooktop in the middle

- [1] Cooktop
- [2] Installation clamp
- [3] Fixing bracket

- ▶ Secure the cooktop to the worktop [1] with the fixing bracket [3] on the installation clamp [2].
- ▶ Tightening torque: max. 2.2 Nm.

6.6.5 Connecting the device to the duct system

INFO The duct system must be fitted to the device free of load and with the power supply switched off.

INFO For correct installation, the slide-in units of the base cabinet must be shortened depending on the installation situation.

INFO When attaching the seals, ensure that an airtight seal is created with the connection duct piece when the seals are compressed.

- ▶ Use only BORA Ecotube duct parts.
- ▶ Do not use flexible or fabric hoses.

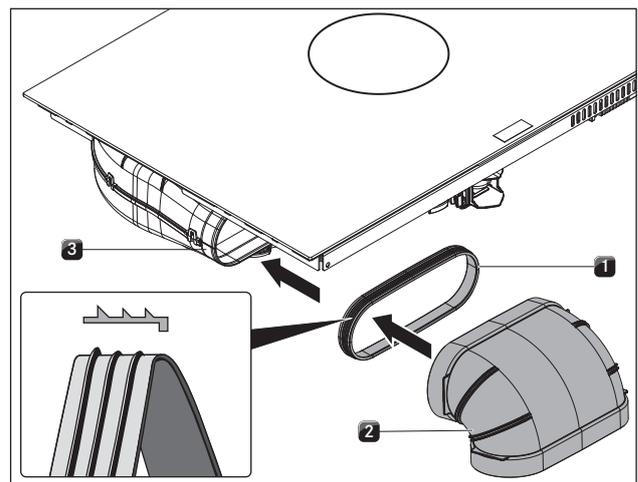


Fig. 6.24 Connecting the duct system

- [1] Seal
- [2] Duct part
- [3] Exhaust opening

- ▶ Pull the seal [1] onto the exhaust opening [3] on the device. The seal [1] will need to be stretched slightly.
- ▶ Push the duct part to be connected [2] with the coupling onto the exhaust opening [3] with the seal [1].
- ▶ Ensure that the seal [1] is not displaced.

6.7 Installing the appliance in recirculation mode (PURU, PUXU)

INFO A minimum clearance of 25 mm must be provided for the vertical return flow of the recirculation air.

INFO A return flow aperture $> 500 \text{ cm}^2$ must be provided in the kitchen units.

6.7.1 Preparing kitchen units

- The floor unit must have a continuous back wall so that the recirculation air is not directed into the front furniture body compartment.
- There must be a cut-out in the back wall.
- A minimum clearance of 25 mm between the back furniture body wall and an adjacent kitchen unit or room wall must be observed for the return flow of the recirculation air.

Installation dimensions

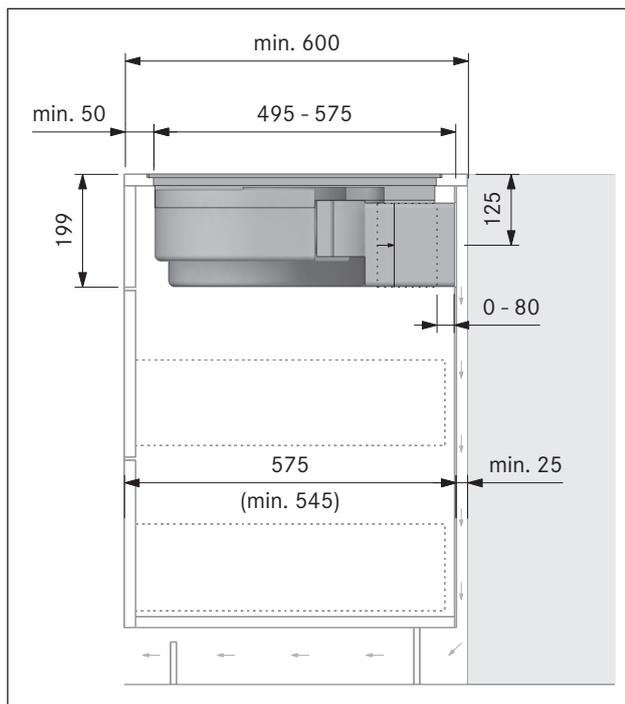


Fig. 6.25 Installation dimensions for recirculation, depth of worktop 600 mm

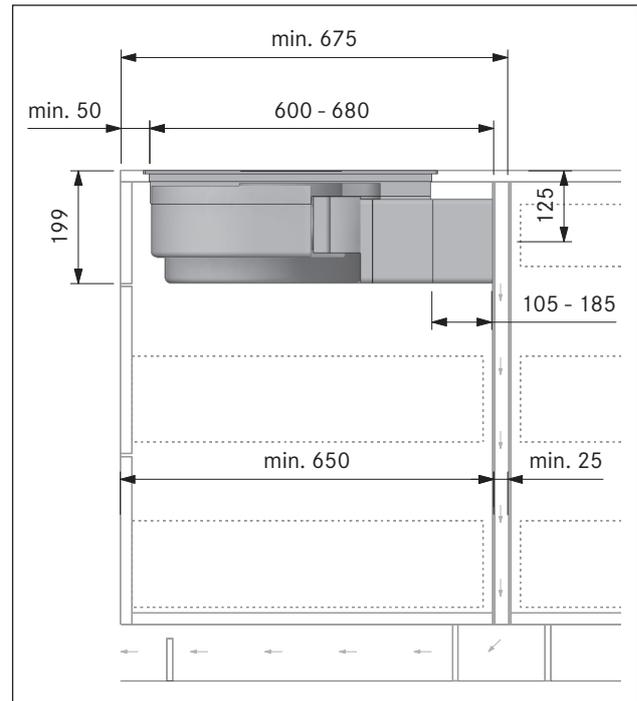


Fig. 6.26 Installation dimensions for recirculation, depth of worktop from 675 mm

Adjusting the back wall of the unit

- ▶ Adapt the back wall according to the required installation dimensions.
- ▶ If applicable, move the back wall.
- ▶ If necessary extend the height of the back wall so that the unit is closed to the front.

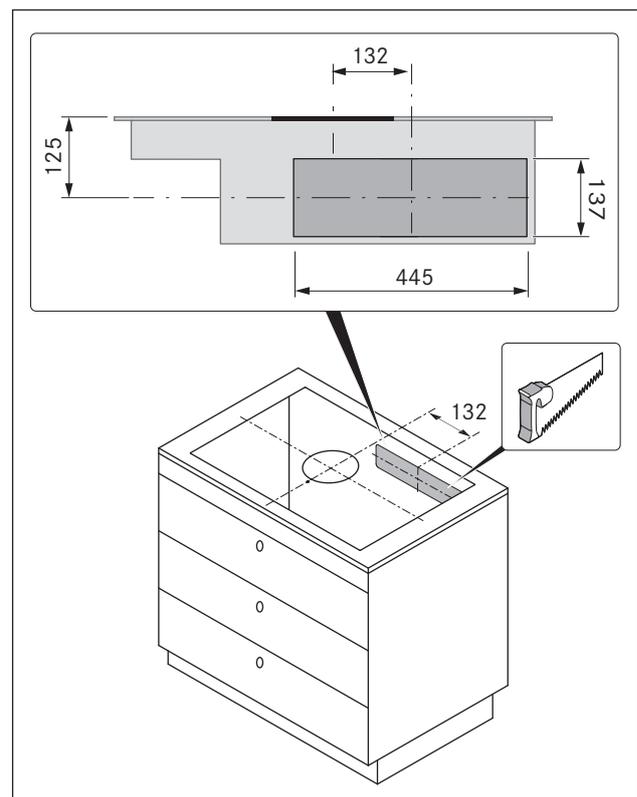


Fig. 6.27 Return flow aperture cut-out

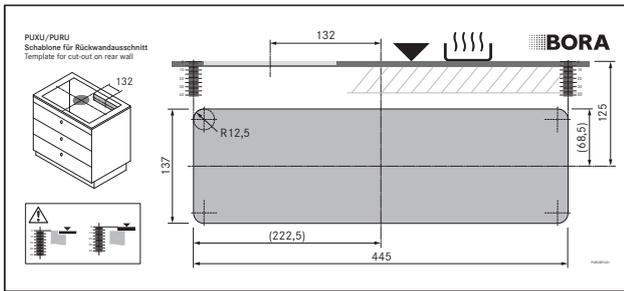


Fig. 6.28 Template for back wall cut-out

- Position the template on the back wall of the unit with the help of the markings and instructions.

INFO Centre of cut-out (horizontal):
125 mm from the top edge of the cooktop
Centre of cut-out (vertical):
Offset 132 mm from the centre of the cooktop.

- Draw the bore hole accordingly with the aid of the drilling template provided.
- Saw out the return flow aperture.
- Decrease the height of the skirting boards or create corresponding openings in the plinth.

6.7.2 Preparing the cooktop

Attaching the sealing tape

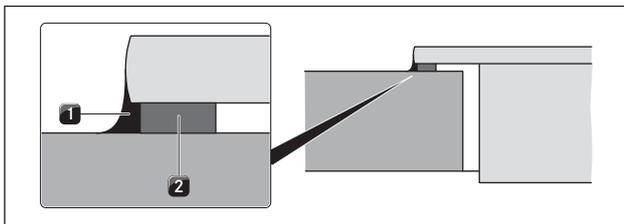


Fig. 6.29 Sealing tape for surface mounting

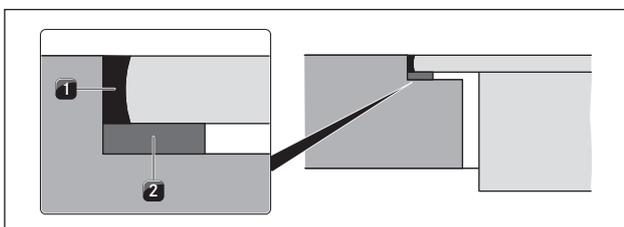


Fig. 6.30 Sealing tape, flush installation

- [1] Black, heat-resistant silicone sealant
- [2] Sealing tape

- With surface mounting, attach the enclosed sealing tape [2] to the underside of the cooktop before installing it. Do not leave any gaps.
- With flush installation, attach the enclosed sealing tape [2] to the horizontal cutting edge in the worktop cut-out, even if you are sealing the cooktop with a silicone sealing compound [1] or similar.

Fitting the installation clamps

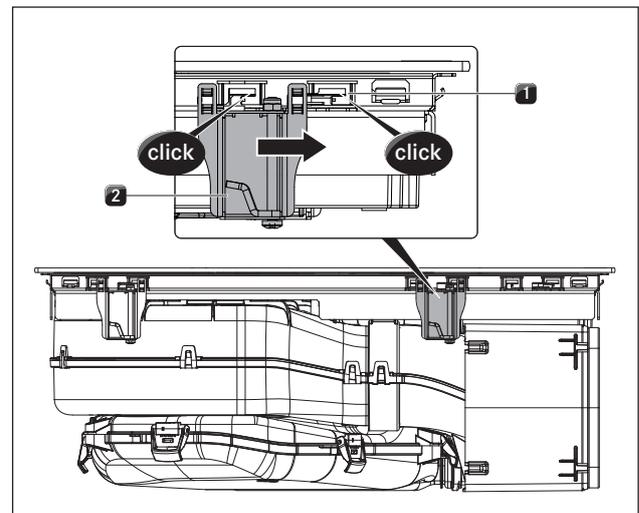


Fig. 6.31 Inserting the cooktop

- [1] Retaining brackets
- [2] Installation clamps

INFO 2 installation claps must be fitted to each side of the cooktop.

- Slide the 4 installation clamps [2] until they reach the stop position in the retaining brackets [1] on the bottom of the cooktop.

Extending the telescopic pull-out (optional)

INFO The telescopic pull-out is used to connect the duct to the back wall of the kitchen unit. It enables the distance between the cooktop and the back wall of the unit to be flexibly bridged (max. 80 mm). If necessary, the telescopic pull-out can be extended by a further 105 mm with the PULBTA extension (available as an accessory).

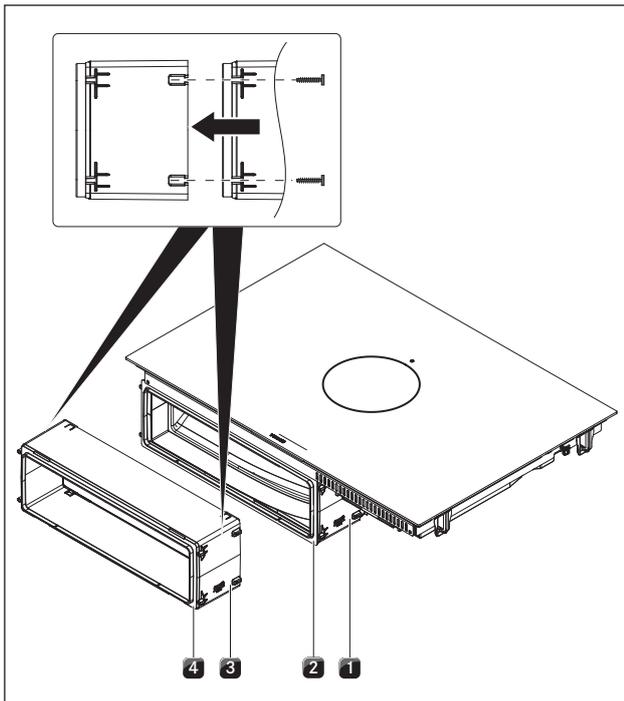


Fig. 6.32 Extending the telescopic pull-out.

- [1] Telescopic pull-out
- [2] Telescopic pull-out adhesive tape
- [3] Telescopic pull-out extension PULBTA
- [4] Adhesive tape for telescopic pull-out extension PULBTA

- ▶ Remove the protective film from the adhesive tape [2] on the front of the telescopic pull-out [1].
- ▶ Attach the extension PULBTA [3] (available as an accessory including screws for attachment) to the telescopic pull-out [1].
- ▶ Remove the protective film from the adhesive tape [4] on the front of the extension PULBTA [3].

6.7.3 Inserting the cooktop

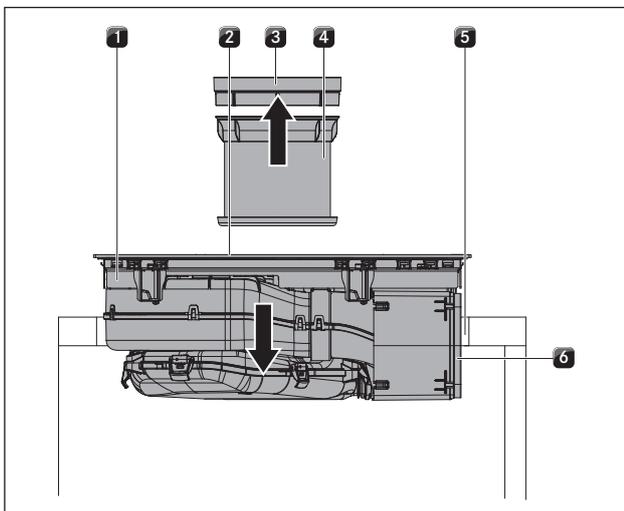


Fig. 6.33 Positioning the cooktop in the centre

- [1] Cooktop
- [2] Inlet opening
- [3] Air inlet nozzle
- [4] Stainless steel grease filter
- [5] Worktop cut-out
- [6] Adhesive tape

- ▶ Before inserting the cooktop, remove the air inlet nozzle [3] and the stainless steel grease filter [4].
- ▶ Remove the protective film from the adhesive tape [6] on the front of the telescopic pull-out.
- ▶ Use the inlet opening [2] as a handle during insertion.
- ▶ Keep the cooktop [1] straight as you lift it into the worktop cut-out [5].
- ▶ Insert the cooktop [1] into the centre of the worktop cut-out [5].
- ▶ Precisely align the cooktop.

Information regarding flush installation:

- ▶ Make sure that the sealing tape of the cooktop is well sealed all the way round.

Information regarding surface mounting:

- ▶ Make sure that the sealing tape for the cooktop is flat against the worktop.

Height adjustment plates for flush installation(optional)

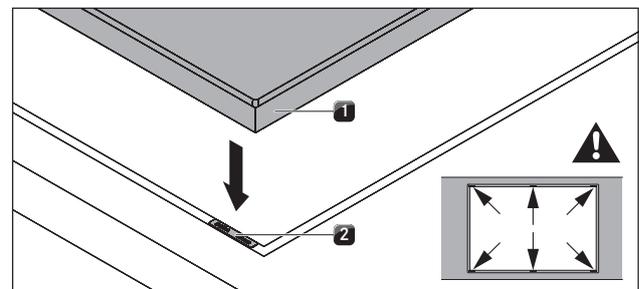


Fig. 6.34 Height adjustment plates

- [1] Cooktop
- [2] Height adjustment plate

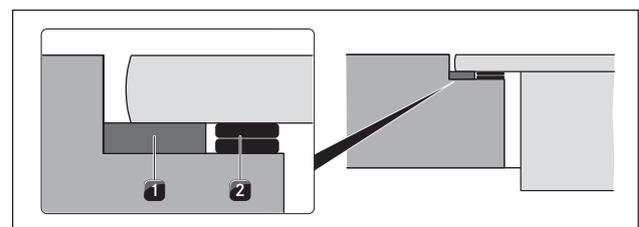


Fig. 6.35 Height adjustment plates

- [1] Sealing tape
- [2] Optional height adjustment plates

- The height adjustment plates are self-adhesive to prevent slipping during installation.

- ▶ If necessary, lay the height adjustment plates [2] underneath.
- ▶ Place the height adjustment plates next to the sealing tape [2].

6.7.4 Securing the cooktop

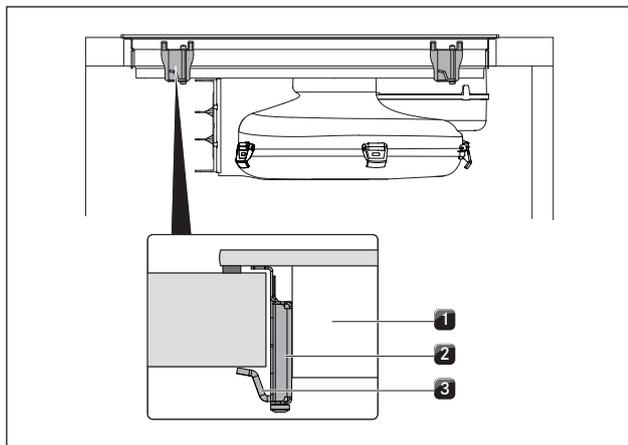


Fig. 6.36 Securing the cooktop

- [1] Cooktop
- [2] Installation clamp
- [3] Fixing bracket

- ▶ Secure the cooktop to the worktop [1] with the fixing bracket [3] on the installation clamp [2].
- Tightening torque: max. 2 Nm

6.7.5 Establishing a connection with the back wall

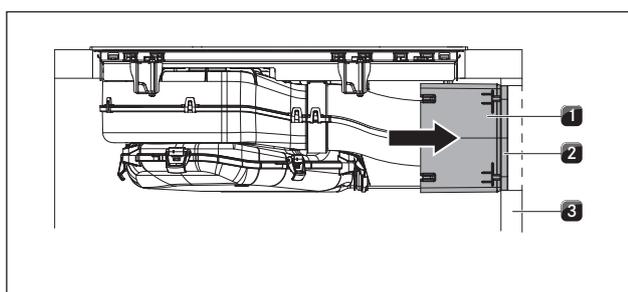


Fig. 6.37 Connection with the back wall

- [1] Telescopic pull-out
- [2] Adhesive tape
- [3] Back wall of unit

- ▶ Push the telescopic pull-out [1] until it is tight up against the back wall of the unit [3].
- With the telescopic pull-out the distance to the back wall of the unit can be flexibly bridged.
- ▶ Check that the telescopic pull-out [1] fits accurately, is flush with the cut-out on the back wall of the unit [3] and closes it off.
- ▶ Secure the telescopic pull-out [1] to the back wall of the unit [3] using the adhesive tape [2]

6.7.6 Inserting the activated charcoal filter

INFO Removing the filter – see Cleaning chapter, Changing the filter

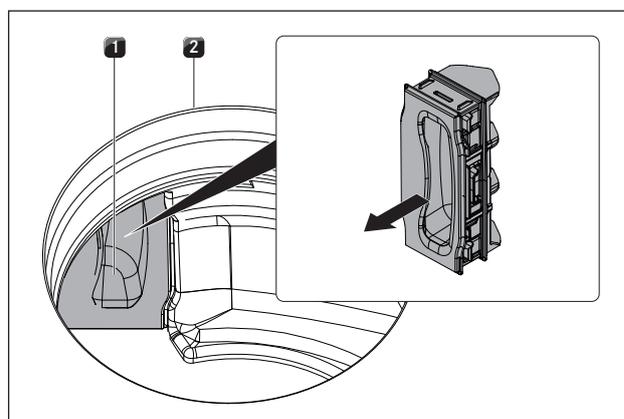


Fig. 6.38 Remove the filter replacement cover

- [1] Filter replacement cover
- [2] Inlet opening

- ▶ Inside the inlet opening [2] pull the filter replacement cover [1] out through the opening in the filter housing.

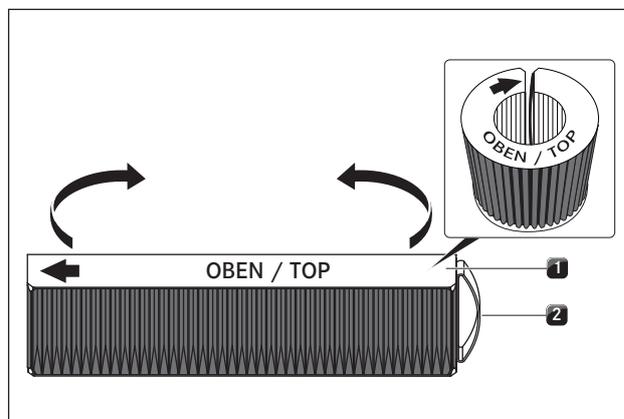


Fig. 6.39 Activated charcoal filter

- [1] Activated charcoal filter
- [2] Grip strap

- ▶ Remove the packaging from the activated charcoal filter [1].
- ▶ Position the activated charcoal filter correctly with the help of the printed symbols (arrow left, grip strap [2] right).
- ▶ Hold the activated charcoal filter at both ends.
- ▶ Bend the activated charcoal filter into a cylindrical shape so that both ends of the filter are opposite each other.

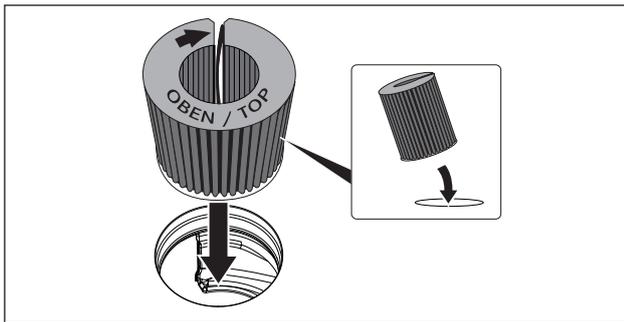


Fig. 6.40 Inserting the activated charcoal filter through the vent opening

- ▶ Tilt the activated charcoal filter towards you slightly and insert it through the inlet opening.
- ▶ Guide the left end of the filter into the opening in the filter housing.

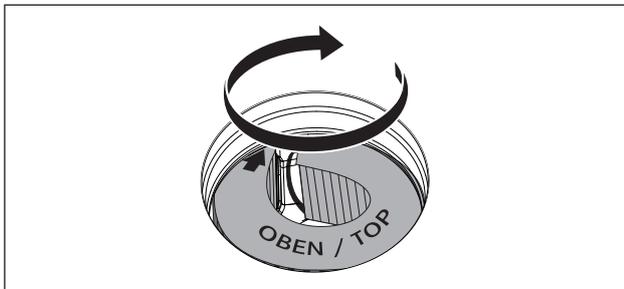


Fig. 6.41 Placing the activated charcoal filter in the end position

- ▶ Push the activated charcoal filter into the filter housing until it will go no further (To do this, you can place one finger between the slats and gradually push the filter into the housing).
- The end position of the activated charcoal filter is reached when the filter has been fully pushed inside the filter housing.

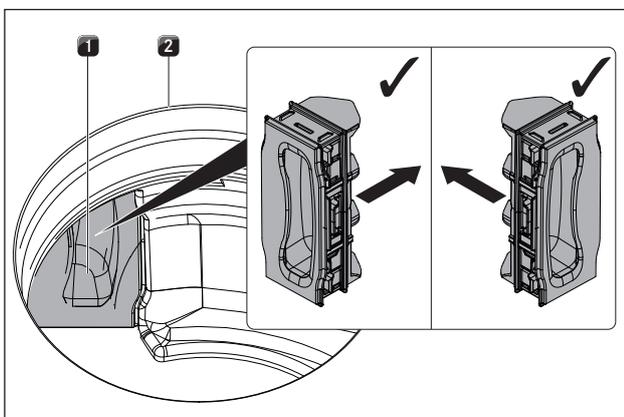


Fig. 6.42 Inserting the filter replacement cover

- [1] Filter replacement cover
- [2] Inlet opening

- ▶ Inside the inlet opening, push the filter replacement cover until it comes to a stop in the filter housing opening.
- ▶ Check that the filter replacement cover is positioned correctly.

6.8 Establishing the power connection

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Observe all national and regional laws and regulations as well as the supplementary regulations of the local utility companies.

INFO The power connection may only be established by certified specialists. The specialist also assumes responsibility for the proper installation and commissioning.

INFO Connections via plug-in contacts (Schuko plugs) are not permitted.

INFO 1-phase connection The device complies with the requirements of IEC 61000-3-12.

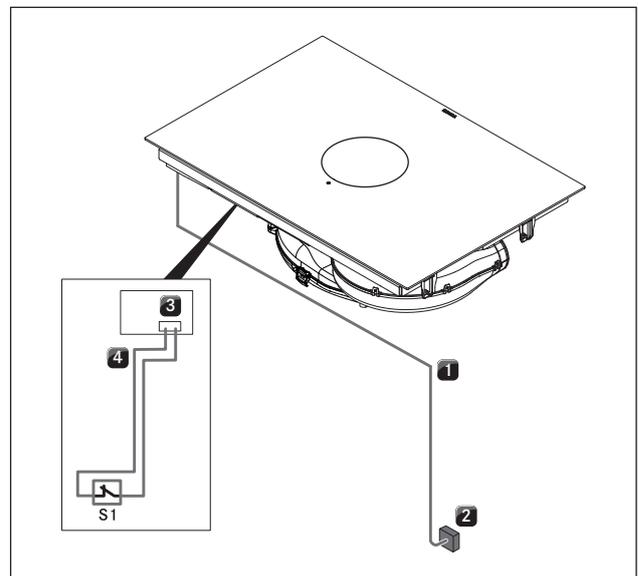


Fig. 6.43 Connection diagram with optional Home In module

- [1] Cooktop and cooktop extractor power supply cable
- [2] Power supply
- [3] Home In module PUHIM (not included in scope of delivery)
- [4] Home In connection cable
- [S1] External switch contact

- ▶ Switch off the main switch/automatic circuit breaker before connecting the cooktop.
- ▶ Secure the main switch/automatic circuit breaker against being switched back on without permission.
- ▶ Make sure the power to the appliance is disconnected.

- ▶ Connect the cooktop exclusively via a fixed connection to an H 05 VV-F power supply cable with corresponding minimum cross-section (see tab. Fuse protection and minimum cross-section).

Connection	Fuse protection	Minimum cross-section
Three-phase connection	3 x 16 A	2.5 mm ²
Two-phase connection	2 x 16 A	2.5 mm ²
One-phase connection	1 x 32 A	4 mm ²

Tab. 6.2 Fuse protection and minimum cross-section

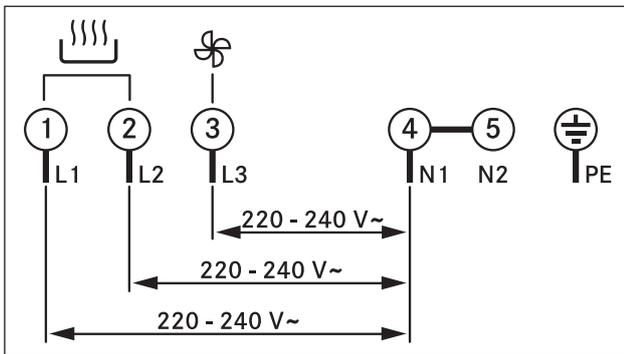


Fig. 6.44 Three-phase connection connection diagram

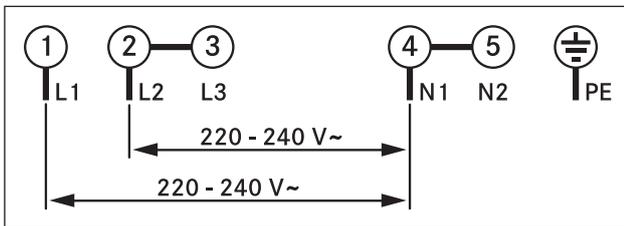


Fig. 6.45 Two-phase connection connection diagram

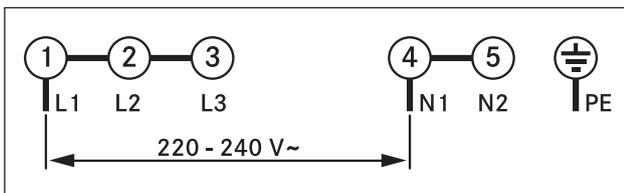


Fig. 6.46 One-phase connection connection diagram

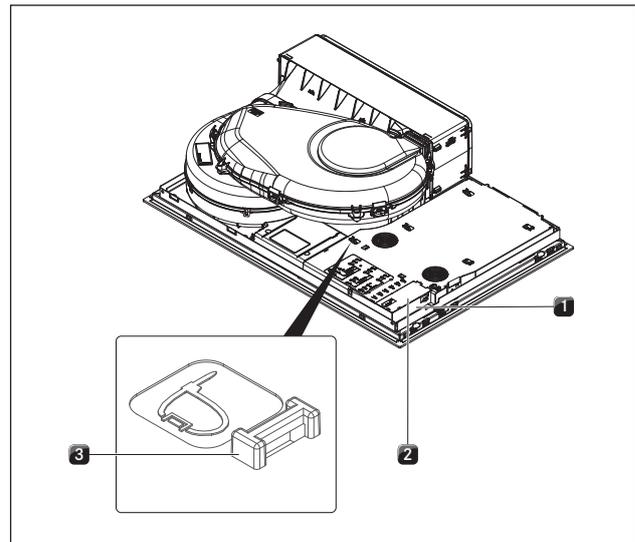


Fig. 6.47 Electrical connections of the cooktop

- [1] Power supply
- [2] Power supply cover
- [3] Mounting eyes

- ▶ Connect the power supply cable to the power supply [1] of the device in accordance with the relevant connection diagram (see Fig. Connection diagram or underside of appliance).
- ▶ For a one-phase or two-phase connection, connect the relevant contacts using the bridge provided (in scope of delivery).
- ▶ Secure the connection cable with the strain relief clamp (in scope of delivery).
- ▶ Close the power supply housing with the power supply cover [2] (in scope of delivery).
- ▶ Lay the connection cable along the mounting eyes [3] with the help of the cable ties (in scope of delivery).
- ▶ Ensure that the cable is not trapped or damaged and is not able to come into contact with any hot hobs.
- ▶ Check that installation has been done correctly.

6.9 Initial operation

INFO During initial operation some basic settings (basic configuration) must be applied using the dealer and service menu.

6.9.1 Dealer and service menu

INFO The dealer and service menu can be called up up to 2 minutes after the appliance has been connected to the power supply.

INFO The system adopts and saves the settings made when you leave the corresponding menu item.

INFO Below you will find explanations on how to use the menu and a description of the most important menu items.

Dealer and service menu overview

Menu item/Description/Selection area	Factory setting
B Extraction system (exhaust air/recirculation system)	Recirculation
C Power management	3
D Demo mode	Off

Tab. 6.3 Menu overview

Calling up the dealer and service menu

► Connect the appliance to the power supply.

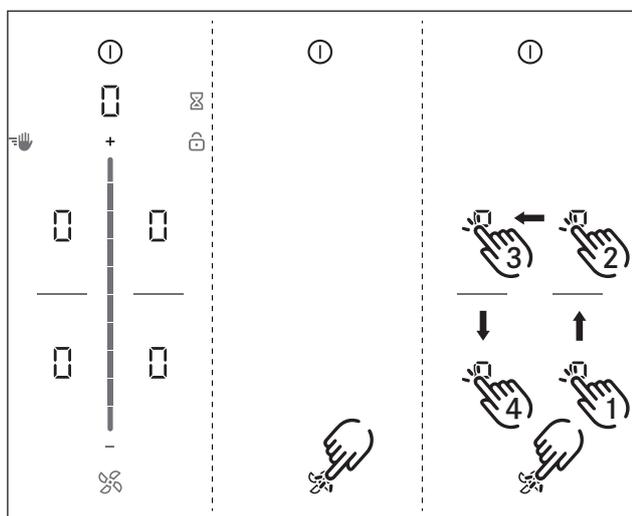


Fig. 6.48 Calling up the dealer and service menu

- The standard display appears and the fan symbol pulses for 2 minutes.
- Long press on the fan button .
- 4 input points □ are shown.
- Keep the fan button pressed and at the same time press the input points □ in the specified order.
- Menu item B is displayed.

Menu item B: Configuration of the extraction system

The extraction system must be configured. There are two operating modes to choose from:

- Operating mode 1: Recirculation system (factory setting)
- Operating mode 2: Exhaust air system

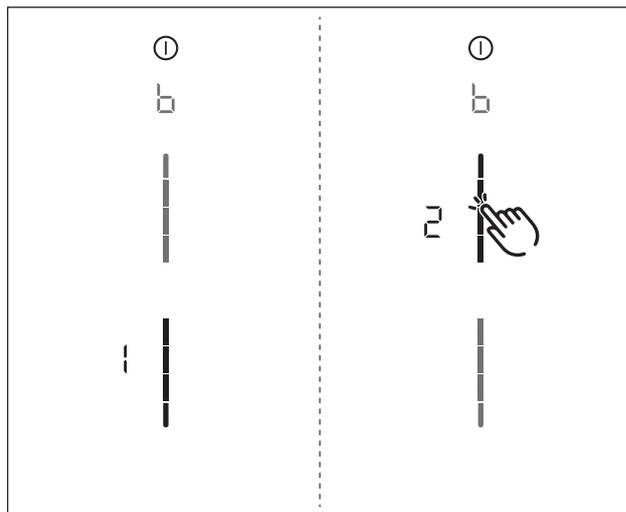


Fig. 6.49 Display Menu item B: Configuring the extraction system

- Select the corresponding operating mode (tap the corresponding segment on the slider).
- Confirm and save the setting by moving to the next menu item (tap the multi-function display/indicator b).

Menu item C: Power management

The total appliance power can be reduced if the required electrical power cannot be provided at the installation site.

INFO The cooking zone power restrictions automatically implemented by the appliance are determined according to the total power set.

There are three operating modes to choose from:

Power management	Connection	Maximum power consumption	Fuse protection
C3	three-phase	7.6 kW	3 x 16 A
C3	two-phase	7.6 kW	2 x 16 A
C3	one-phase	7.6 kW	1 x 32 A
C2	one-phase	4.4 kW	1 x 20 A
C1	one-phase	3.6 kW	1 x 16 A

Tab. 6.4 Power management

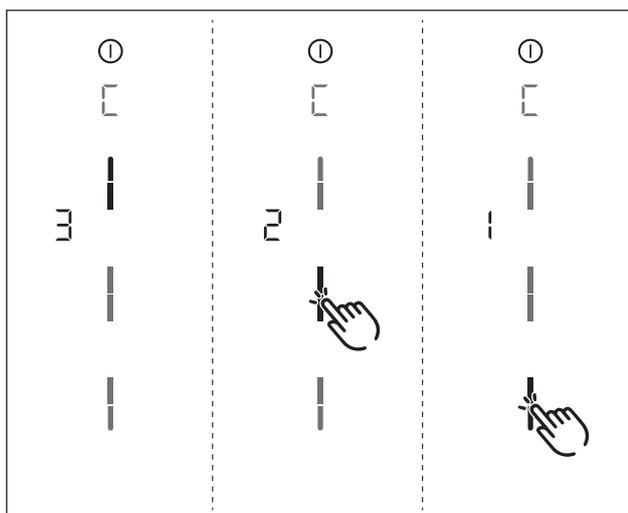


Fig. 6.50 Display Menu item C: Power management

- ▶ Select the corresponding operating mode (tap the corresponding segment on the slider).
- ▶ Confirm and save the setting by moving to the next menu item (tap the multi-function display/indicator ⌂).

Menu item D: Demo mode

The appliance can be set to demo mode, which includes all operating functions, but the heating function of the cooktops is deactivated.

INFO Pan size recognition is deactivated in demo mode.

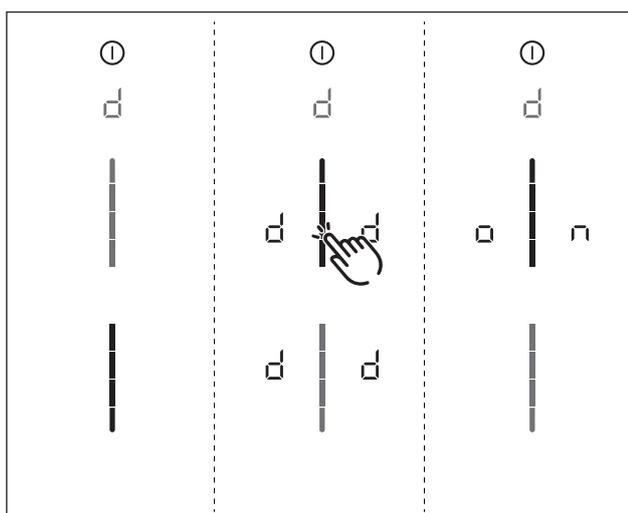


Fig. 6.51 Display Menu item D: Demo mode

- ▶ Tap the top slider segment.
- The demo mode symbol *d* is displayed on all cooking zones for one second.
- *on* is displayed.
- ▶ Confirm and save the setting by moving to the next menu item (tap the multi-function display/indicator *d*).

Closing the dealer and service menu

When you have been through all of the basic configuration menu items:

- ▶ Long press on the multi-function display.
- The standard display appears.

6.9.2 Function test

- ▶ Carry out a thorough function test on all devices.
- ▶ In the event of error messages, see the Troubleshooting chapter.

6.10 Sealing the device

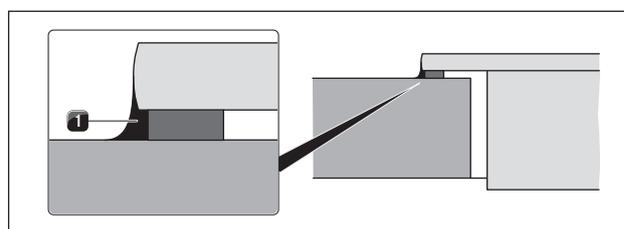


Fig. 6.52 Silicone sealant in surface mounting

- [1] Black, heat-resistant silicone sealant

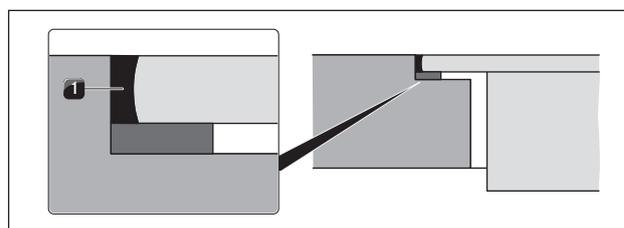


Fig. 6.53 Silicone sealant in flush installation

- [1] Black, heat-resistant silicone sealant

- ▶ Once all of the installation work is complete, seal the device with black, heat-resistant silicone sealant [1].
- ▶ Make sure that no silicone sealant gets under the cooktop.

6.11 Handover to user

Once installation is complete:

- ▶ Explain the main functions to the user.
- ▶ Explain all safety-related aspects of operation and handling to the user.
- ▶ Provide the user with the accessories and operating and installation instructions to be kept in a safe place.

7 Operation

- ▶ Observe all safety and warning information during operation (see Safety chapter).

INFO Do not operate the integrated cooktop extractor with other cooktops.

INFO The cooktop should only be operated when the filter replacement cover, stainless steel grease filter and air inlet nozzle are installed (as well as the activated charcoal filter in the recirculation model).

7.1 General operating instructions

The cooktop extractor and cooktops are operated via a central operating panel. The operating panel is fitted with electronic sensor buttons and display panels. The sensor buttons respond to finger contact (see Appliance description chapter).

You control the appliance by tapping the corresponding sensor button with your finger (touch control) or making a swiping movement with your finger (slider control).

7.2 Touch control

INFO The system recognises different touch commands. It differentiates between a brief touch (tap), a prolonged touch (long press) and vertical sliding movements with your finger (swiping).

Touch commands	applicable to	Time (contact)
Tap	Buttons + slider	0.3 s
Long press	Buttons + slider	1 – 8 s
Swipe	Slider	0.1 – 8 s

Tab. 7.1 Touch control

7.3 Operating the system

7.3.1 Switching on

- ▶ Long press on the power button 
- The switch-on animation is displayed in the slider.
- If start-up is successful, the standard display will appear in the operating panel.

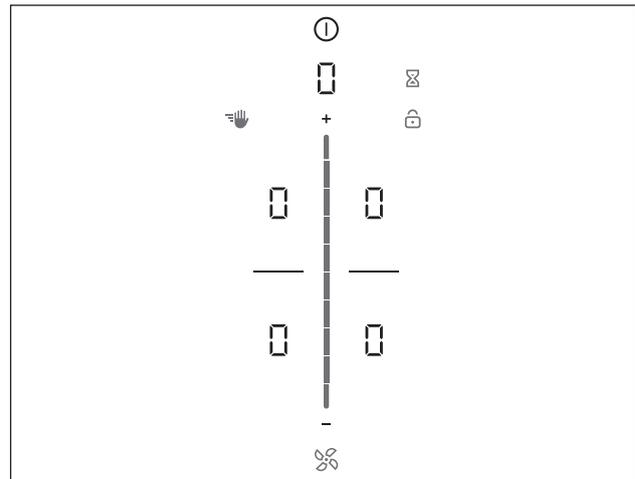


Fig. 7.1 Standard display after switching on

INFO If the childproofing feature is active, the lock button  will light up after system start-up. The standard display will only appear once it has been unlocked (see Childproofing feature).

7.3.2 Switching off

- ▶ Long press on the power button 
- The switching-off animation is displayed.

If the cooktop extractor has been on:

- The fan symbol will light up and the automatic after-run function will start (the automatic after-run animation is displayed).
- The display goes out when the after-run time has lapsed.

If the cooktop has been on:

- The residual heat indicator *H* is displayed for previously active and still hot cooking zones.
- The display goes out when no more residual heat is present.

7.3.3 Control lock

Activating the control lock

- ▶ Long press on the lock button 
- The operating panel display is dimmed.
- The lock button lights up.
- All functions are deactivated except for the power button and the lock button.

INFO If the system is switched off when the control lock is active, the control lock will no longer be active next time the system is switched on.

Deactivating the control lock

- ▶ Long press on the lock button 
- The standard display lights up and the operating panel is reactivated.
- The lock button is dimmed.

7.3.4 Childproofing feature

- After switching on the appliance, the lock symbol  lights up in the operating panel display.

Permanently activating/deactivating the childproofing feature

See 7.6 User menu and 7.6.2 Menu item 2: Childproofing feature

Deactivating the childproofing feature for a cooking session

- ▶ Long press on the lock button .
- ▶ Swipe downwards
- The standard display lights up and the operating panel is reactivated.
- The lock button is dimmed.

7.3.5 Pause function

INFO With the pause function you can briefly pause the cooking session. The cooking session can be paused for a maximum of 10 minutes. If the pause function is not deactivated in this time, all cooking zones are switched off.

Activating the pause function

- ▶ Tap the pause button .
- The pause button lights up, all cooking sessions are paused and an acoustic signal is heard.
- The cooking zone indicators are dimmed.
- The pause timer is started (max. 10 min).

INFO During the pause, fan function is not interrupted. Egg-timer functions are maintained. Active cooking zone timers are stopped.

Deactivating the pause function

- ▶ Long press on the pause button .
- The pause button is dimmed.
- The cooking zone indicators light up.
- All cooking sessions are resumed at the power levels set prior to the pause.
- Active cooking zone timers are resumed.

7.3.6 Short-time timer (egg timer)

Activating the egg timer

- ▶ Tap the egg timer button .
- The time flashes in the 7-segment display above the sliders in minutes (000).
- The cooking zones in the display are dimmed.

Setting the time

- ▶ Select the desired power level:

Command	Increase time	Decrease time
Swipe	 upwards	 downwards
Tap	 (exact to the minute)	 (exact to the minute)

Tab. 7.2 Setting the time

- The egg timer button  starts to flash.

Starting the egg timer

- ▶ Tap the flashing egg timer button .
- The set time starts to count down.
- The operating panel display changes to the standard display and the egg timer button pulses.

Time lapsed

- 10 seconds before the set time lapses, the system flashes the remaining time.
- In the last 5 seconds of the countdown an acoustic signal can be heard every second.
- The time indicator  changes to the fan power level.

Deactivating the egg timer early

- ▶ Long press on the egg timer button .
- The egg timer function is ended.
- The operating panel display changes to the standard display.

INFO If the appliance is switched off, the egg timer will remain active.

7.3.7 Cleaning lock (wipe function)

Activating the cleaning lock

- ▶ Tap the cleaning button .
- The cleaning button lights up and all functions on the operating panel are locked for 10 seconds.
- The timer appears in the multi-function display and automatically counts down.

Deactivating the cleaning lock

- Once the timer has stopped you can use the functions again.

or

- ▶ Long press on the cleaning button .
- The cleaning button is dimmed.

7.4 Operating the cooktop extractor

7.4.1 Setting the fan power level

The fan power levels can be adjusted in 3 different ways.

- ▶ By tapping a certain position on the slider .
- ▶ By swiping until you reach the required power level.
- ▶ By tapping  or .
- The fan symbol lights up and the set fan power level is shown in the multi-function display.

Increasing the power level

- ▶ Tap a higher position on the slider
- or
- ▶ swipe upwards to the required power level
- or
- ▶ tap **+** until the required power level is reached.

Reducing the power level

- ▶ Tap a lower position on the slider
- or
- ▶ swipe downwards to the required power level
- or
- ▶ tap **-** until the required power level is reached.

7.4.2 Fan power setting**Activating the fan power setting**

- ▶ Tap on **+** when power level 9 is active.
- **P** appears in the display.

INFO After 5 minutes, the power setting is automatically switched back to power level 9.

Deactivating the fan power setting

The fan power setting is deactivated early if another power level is set (see Fan power levels).

7.4.3 Automatic extractor control

INFO The automatic extractor function automatically adjusts the extraction performance to the highest power level used on all connected cooking zones. If the cooking zone power level is changed, the extractor power is automatically adjusted.

INFO The extractor power is adjusted after a 20 second delay.

Activating the automatic extractor function:

- ▶ tap the fan button .
- The fan symbol lights up.
- An animation appears on the slider.
- **P** is displayed.

Deactivating the automatic extractor function:

- ▶ Swipe to a fan power level
- or
- ▶ tap the fan button .

7.4.4 Switching the fan off

- ▶ Swipe downwards to power level 0
- or
- ▶ tap **-** until power level 0 is reached.
- or
- ▶ long press on the fan button .
- or

- ▶ long press on the fan power level in the multi-function display.

- The automatic after-run function is started.

7.5 Operating the cooktop**7.5.1 Selecting a cooking zone**

- ▶ Tap on a cooking zone .
- The cooking zone controls are activated for 2 seconds and you can apply settings to the chosen cooking zone.
- The additional cooking zone functions appear.
- ▶ Repeat this process to operate further cooking zones if necessary.

Changing to another cooking zone

- ▶ Tap another cooking zone within 2 seconds.
- The cooking zone lights up in the operating panel display.
- Operation of the second cooking zone is activated.
- The first cooking zone is dimmed in the operating panel display and the previous settings remain active or are adopted.

7.5.2 Setting cooking zone power levels

INFO The cooking zone power levels are shown in the corresponding cooking zone display as a 7-segment font ().

INFO Two seconds after the power level is changed, the operating panel display automatically returns to the standard display.

The cooking zone power levels can be adjusted in 3 different ways:

- ▶ By tapping a certain position on the slider.
- ▶ By swiping until you reach the required power level.
- ▶ By tapping **+** or **-**.

Increasing the power level

- ▶ Tap the required cooking zone
- ▶ Tap a higher position on the slider.
- or
- ▶ swipe upwards to the required power level
- or
- ▶ tap **+** until the required power level is reached.

Reducing the power level

- ▶ Tap the required cooking zone.
- ▶ Tap a lower position on the slider
- or
- ▶ swipe downwards to the required power level
- or
- ▶ tap **-** until the required power level is reached.

7.5.3 Automatic heat up function

INFO The system automatically determines the heating time depending on the power level set.

Activating the automatic heat up function

- ▶ Tap the required cooking zone
- ▶ Adjusting the power level
- ▶ Long press on the slider  at a position lower than power level 9
- The automatic heat up function is activated.
- Whilst the automatic heat up function is active, the power level displayed will flash.
- When the heat up time has ended, the cooking zone will stay on the previously set power level (continuous cooking level).

Deactivating the automatic heat up function early

The automatic heat up function is deactivated early if a lower power level is set.

INFO If the power level of a cooking zone is increased when the automatic heat up function is active, the automatic heat up function remains active. The time is restarted for the new continuous cooking level. If the cooking zone power level is decreased while the automatic heat up function is active, the automatic heat up function is deactivated.

7.5.4 Cooktop power setting

Activating the power setting for a cooking zone

- ▶ Tap on  when power level 9 is active.
- P appears in the cooking zone display.

INFO After 5 minutes, the power setting is automatically switched back to power level 9.

Deactivating the power setting

The power setting is deactivated early if another power level is set (see Setting the power level).

7.5.5 Setting the warming level

Activating the warming level

- ▶ Tap the required cooking zone
- The additional cooking zone functions appear.
- ▶ Tap the warming button 
- The warming level is activated.
- w is displayed in the cooking zone display.
- The warming symbol  is shown next to the cooking zone.

Deactivating the warming function

- ▶ Tap the required cooking zone
 - ▶ Tap the warming button 
 - or
 - ▶ swipe right down to the bottom (power level 0)
 - The warming function is deactivated.
- Selecting a power level also deactivates the warming function.

7.5.6 Setting the variable warming level

INFO There are three warming levels to choose from (also see Appliance description chapter)

Activating the warming level

- ▶ Tap the required cooking zone
- ▶ Tap the warming button 
- The 1st warming level ($-$) is displayed.
- The warming symbol  is shown next to the cooking zone.

Increasing or reducing the warming level

- ▶ Swipe upwards or downwards until the required warming level is reached

or

- ▶ Tap  or  until the required warming level is reached

Deactivating the warming function

- ▶ Tap the cooking zone on which the warming level is activated
- ▶ Swipe downwards
- or
- ▶ Long press on the warming button 
- The warming function is deactivated.
- The residual heat indicator H appears in the cooking zone display if necessary.

7.5.7 Bridging function

INFO When the bridging function is active, the two cooking zones on one side of the cooktop are linked and operated on the same power level.

INFO If both cooking zones are active before the bridging function is activated, the lower power level is adopted. If timers are active on the cooking zones, the lower timer value will be adopted for the bridging timer.

INFO If no suitable cookware is detected (pan size recognition) within 10 seconds with the bridging function active, the bridging function will be disabled and the cooking zones will be deactivated.

Activating the bridging function

- ▶ Tap both cooking zones at the same time.
- The bridging function is now active.
- The light that looks like a hyphen goes out and the additional functions are displayed.
- Zone functions apply to the linked cooking zones (double display).
- Both cooking zone indicators show the same power level.
- Active additional cooking zone functions are adopted.
- Changes to the power level now apply simultaneously to both cooking zones.

Setting power levels when the bridging function is active.

- ▶ Tap a cooking zone with an active bridging function.
- ▶ Set the power level (see Adjusting the power level)

Deactivating the bridging function

- ▶ Long press on one of the two cooking zones with an active bridging function
- or
- ▶ tap the cooking zones with an active bridging function simultaneously.
 - The bridging function is deactivated.
 - The hyphen symbol lights up
 - The power levels are set to 0
 - If a timer was active, it is deactivated.
 - If cookware is only detected on one of the two cooking zones, the bridging function is cancelled after ten seconds and the corresponding cooking zone is deactivated.

7.5.8 Automatic bridging function

INFO If the permanent pan size recognition is switched on (see Customer menu), the automatic bridging function is also activated.

7.5.9 Cooking zone timer

INFO To be able to activate the timer function, a cooking zone power level must first be set.

INFO The timer function can be used for each cooking zone. Several timers can be activated at the same time (multi-timer).

Activating cooking zone timers

- ▶ Tap on a cooking zone
- The additional cooking zone functions are displayed.
- If the chosen cooking zone is not yet active (= power level 0) a power level can now be set.
- ▶ Tap the timer button 
- The time flashes in the multi-function display above the sliders in minutes (000).

Setting the time

- ▶ Select the desired power level:

Command	Increase time	Decrease time
Swipe	 upwards	 downwards
Tap	 (exact to the minute)	 (exact to the minute)

Tab. 7.3 Setting the time

- The timer symbol  starts to flash.

Starting the timer

- ▶ Tap the flashing timer button 
- The set time starts to count down.
- The timer symbol  is shown next to the cooking zone.
- The operating panel display changes to the standard display after 2 seconds.
- 10 seconds before the set time lapses, the system flashes the remaining time.
- In the last 5 seconds of the countdown an acoustic signal can be heard every second.

Showing the remaining time

The cooking zone timer is active and the time counts down:

- ▶ Tap the cooking zone
- The remaining time is shown in the multi-function display.

Changing active timers

- ▶ Tap a cooking zone with an active timer
- The remaining time is displayed.
- ▶ Tap the timer button 
- The timer is stopped.
- The remaining time flashes in the display.
- The system changes to timer editing mode.
- ▶ Change the set time (see “Setting the time”).
- ▶ Confirm the new set time and start the timer (see “Starting the timer”).

Multi-timer

- ▶ Tap on a different cooking zone
- The additional cooking zone functions are displayed.
- If the chosen cooking zone is not yet active (= power level 0) a power level can now be set.
- ▶ Tap the timer button 
- The time flashes in the 7-segment display above the sliders in minutes (000).
- Now the time can be set and the timer started (see “Setting the time” and “Starting the timer” respectively).

Switching the timer off early

- ▶ Tap a cooking zone with an active timer
- The remaining time is displayed.
- ▶ Long press on the timer button 

or

- ▶ long press on the cooking zone with an active timer
- The timer is switched off.
- The system switches to the standard display.
- The cooking zone remains active on the set power level.

Time lapsed

- 10 seconds before the set time lapses, the system flashes the remaining time.
- In the last 5 seconds of the countdown an acoustic signal can be heard every second.
- The time display $\square\square\square$ and the timer button  flash.
- After the end of the set time the cooking zone is automatically deactivated (= power level \square).

7.5.10 Switching off the cooking zone

- ▶ Tap the required cooking zone.
- ▶ Swipe right down to the bottom until \square appears in the cooking zone indicator

or

- ▶ long press on the cooking zone
- \square is displayed in the cooking zone display.
- After 2 seconds, the standard display appears.

or

- ▶ tap  until \square appears in the cooking zone indicator.

7.6 User menu

Certain functions can be set in the user menu.

INFO Below you will find explanations on how to use the menu and a description of the most important menu items.

INFO The menu can only be called up if all cooking zones and the cooktop extractor are inactive. In addition, there must be no residual heat.

Calling up the user menu

- ▶ Switch on the device by pressing the power button .
- If start-up is successful, the standard display will appear in the operating panel.
- ▶ Long press on the multi-function display.
- The menu is called up and the first menu item is displayed.

Closing the user menu

- ▶ Long press on the multi-function display
- The menu is closed and the standard display appears.

Navigating the user menu

- ▶ Tap the multi-function display
- The system moves to the next menu item.
- The system automatically adopts and saves set values when you move to another menu item or close the menu.

User menu overview

Menu item/Description/Selection area	Factory setting
1 Volume of the acoustic signals (0-9)	4
2 Childproofing feature (On/Off)	Off
3 Show and reset filter status	
4 Duration of the automatic after-run function (10, 15, 20 min)	20 min
5 Touch zone reaction speed (1 slow, 2 medium, 3 fast)	2
6 LED test	
7 Permanent pan size recognition	Off
8 Software/hardware version	
9 Safety shut-down (1 long, 2 medium, 3 short)	2
A Super simple mode	Off
0 Reset to factory settings	

Tab. 7.4 User menu overview

7.6.1 Menu item 1: Volume of the acoustic signals

INFO In the event of an error message the acoustic signal is always heard at full volume and cannot be changed.

INFO The acoustic signal when switching on or off is always set to at least volume level 4.

INFO The current set volume is shown in the rear, left-hand cooking zone display when the menu item is called up.

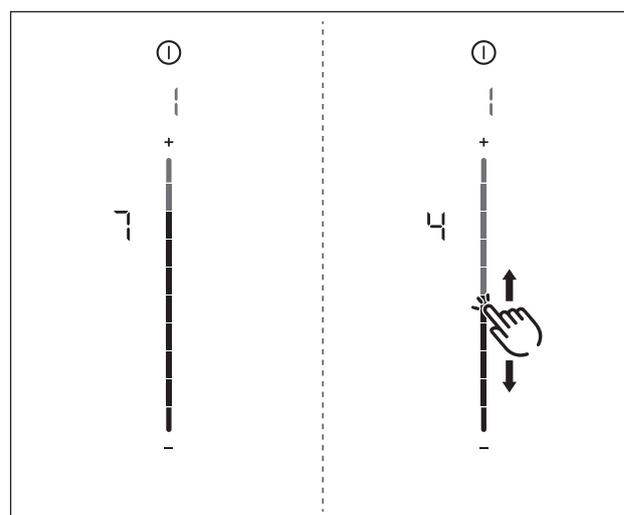


Fig. 7.2 Menu item 1: Volume of the acoustic signals

Setting the acoustic signal volume:

- ▶ Swipe  upwards or downwards until the required volume is reached.
- ▶ Move to another menu item or close the menu.

7.6.2 Menu item 2: Childproofing feature

INFO With menu item 2 the childproofing feature can be permanently switched on or off. This setting is adopted for each new cooking session.

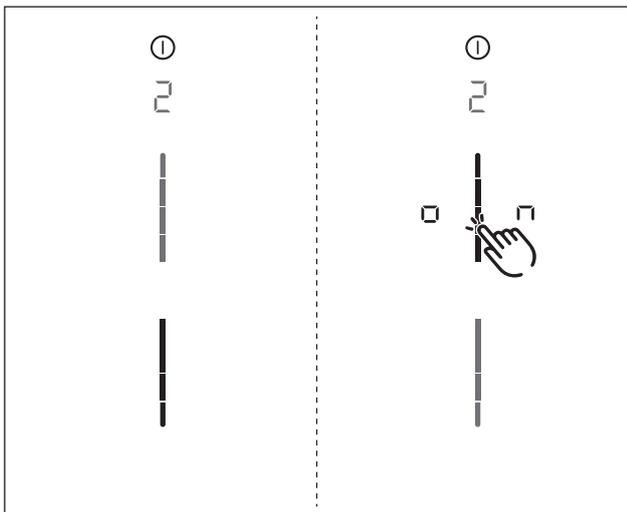


Fig. 7.3 Menu item 2: Childproofing feature

Permanently activating the childproofing feature

- ▶ Tap the top slider segment
- on is displayed.
- ▶ Move to another menu item or close the menu.
- The childproofing feature is permanently activated.

Permanently deactivating the childproofing feature

- ▶ Tap the bottom slider segment
- ▶ Move to another menu item or close the menu.
- The childproofing feature is permanently deactivated.

7.6.3 Menu item 3: Showing and resetting the filter status (only in recirculation mode)

INFO If menu item 3 is called up, the filter status will be automatically shown.

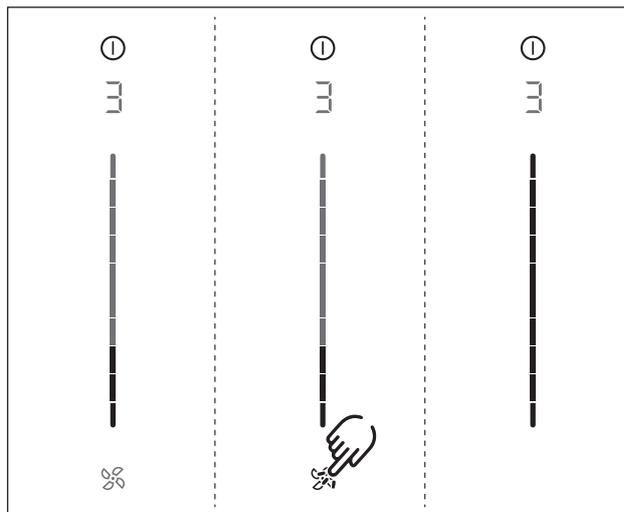


Fig. 7.4 Menu item 3: Show and reset filter status

Resetting the filter status:

- ▶ long press on the fan button
- All slider elements are once again displayed at 100% brightness.
- ▶ Move to another menu item or close the menu.

Menu item 4: Duration of the automatic after-run function

INFO The duration of the automatic extractor function can be set using menu item 4.

There are three times to choose from:

- 20 minutes
- 15 minutes
- 10 minutes

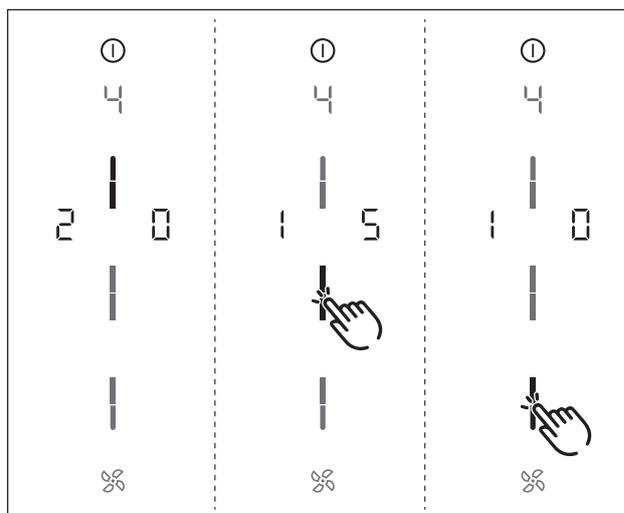


Fig. 7.5 Menu item 4: Duration of the automatic after-run function

- The current duration is displayed for 2 seconds.
- Selecting the duration of the automatic after-run function:**
 - ▶ Tap the corresponding slider segment
 - ▶ Move to another menu item or close the menu.

Menu item 5: Touch zone reaction speed

INFO The reaction speed of the touch zones can be set using menu item 5.

- Reaction speed 1: slow
- Reaction speed 2: medium
- Reaction speed 3: fast

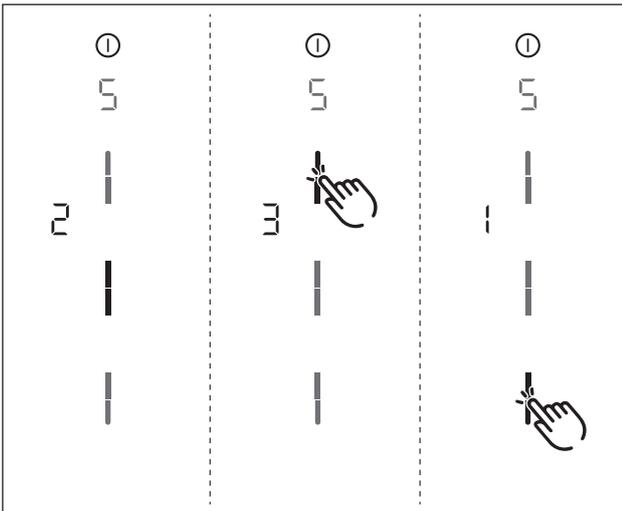


Fig. 7.6 Menu item 5: Reaction speed

- The current reaction speed is displayed.

Selecting the reaction speed:

- ▶ Tap the corresponding slider segment .
- ▶ Move to another menu item or close the menu.

7.6.4 Menu item 6: LED test

INFO With menu item 6 all LEDs in the individual touch zones can be tested to ensure that they are working.

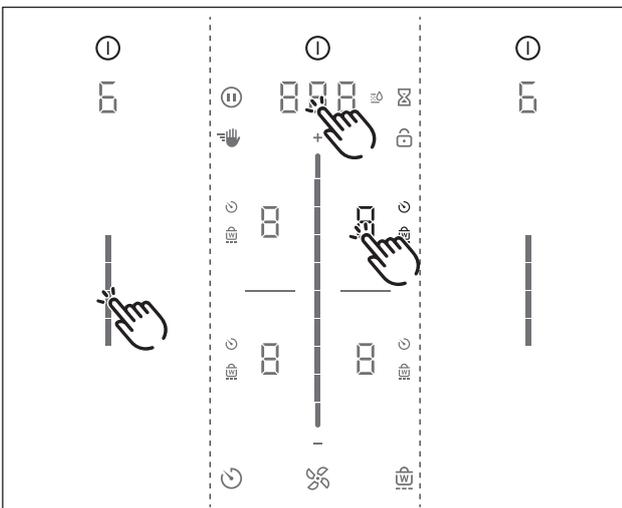


Fig. 7.7 Menu item 6: LED test

Starting the LED test

- ▶ Tap the slider zone .
- All indicators are displayed at 50 % brightness.
- ▶ Tap any indicator you wish.
- The selected indicator will be displayed at 100% brightness for one second.
- Any other indicators can be tested by touch as required.

Ending the LED test

- The LED test will be automatically ended when there has been no activity for 5 seconds.

or

- ▶ long press on the multi-function display.
- The LED test is ended.
- ▶ Move to another menu item or close the menu.

7.6.5 Menu item 7: Permanent pan size recognition

INFO With menu item 7 the permanent pan size recognition can be permanently switched on or off.

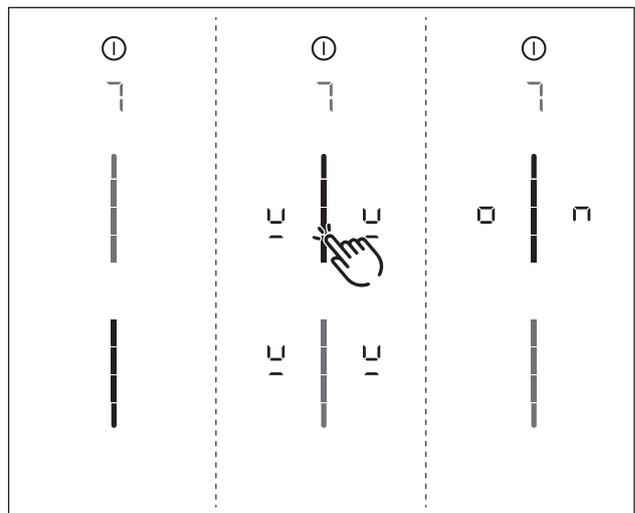


Fig. 7.8 Menu item 7: Permanent pan size recognition

Activating permanent pan size recognition

- ▶ Tap the top slider segment .
- The pan size recognition symbol  is displayed on all cooking zones for one second.
-  is displayed.
- ▶ Move to another menu item or close the menu.

Deactivating permanent pan size recognition

- ▶ Tap the bottom slider segment .
- ▶ Move to another menu item or close the menu.

7.6.6 Menu item 8: Show software/hardware version

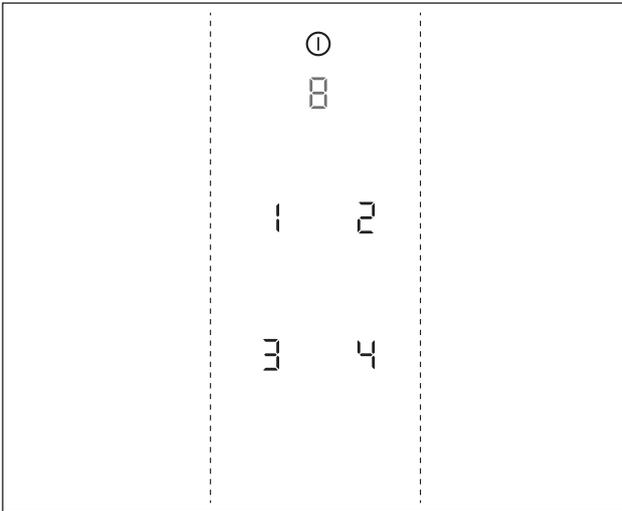


Fig. 7.9 Menu item 8: Software/hardware version

- The software/hardware version is shown via the four 7-segment cooking zone indicators.
- ▶ Move to another menu item or close the menu.

7.6.7 Menu item 9: Safety shut-down

INFO The time span (level) until automatic safety shut-down of the cooking zones can be selected using menu item 9.

- Level 1: long time span until automatic safety shut-down
- Level 2: medium time span until automatic safety shut-down
- Level 3: short time span until automatic safety shut-down

(see Appliance description chapter, Safety shut-down)

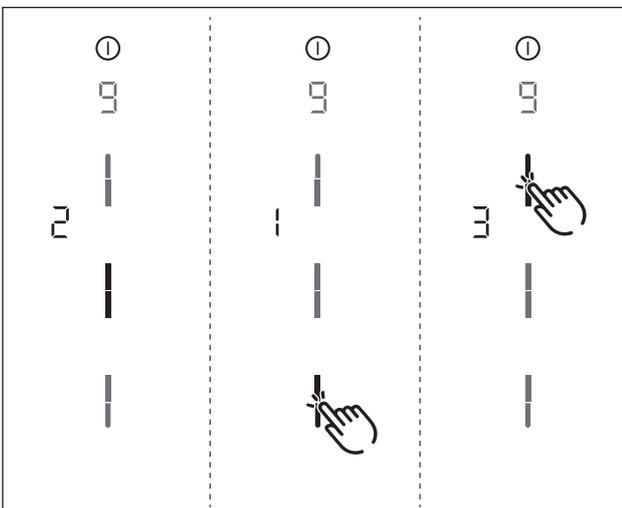


Fig. 7.10 Menu item 9: Safety shut-down

- The current level is displayed.

Selecting the level:

- ▶ Tap the corresponding slider segment .
- ▶ Move to another menu item or close the menu.

7.6.8 Menu item A: Super simple mode

INFO In super simple mode certain additional functions are deactivated and their indicators are faded out.

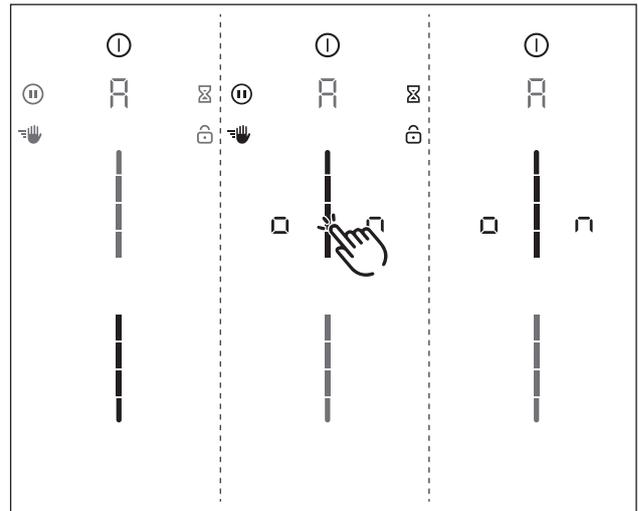


Fig. 7.11 Menu item A: Super simple mode

Activating super simple mode

- ▶ Tap the top slider segment .
- The additional function indicators, which were deactivated, flash and fade.
-  is displayed.
- ▶ Move to another menu item or close the menu.
- The additional functions are permanently deactivated and are not displayed.

7.6.9 Menu item 0: Reset to factory settings

INFO Menu item 0 enables all settings in the customer menu to be reset to the factory settings.

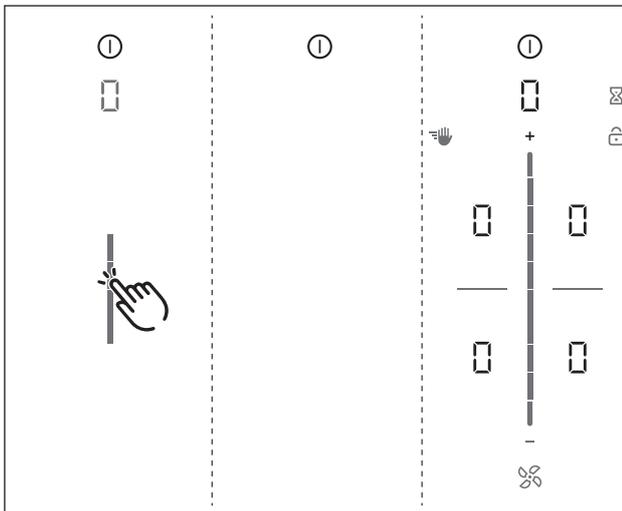


Fig. 7.12 Menu item 0: Factory settings

Resetting to factory settings

- ▶ Long press on the slider zone 
- The reset is started
- The device is restarted.
- The reset is complete when the standard display appears.

8 Cleaning and Maintenance

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Follow the enclosed manufacturer's information.
- ▶ When conducting scheduled cleaning and maintenance, ensure that the cooktop and cooktop extractor are fully switched off and cooled so as to prevent injury (see the Operation chapter).
- Regular cleaning and maintenance ensures long service life of the product and optimal function.
- ▶ Adhere to the following cleaning and maintenance cycles:

Component	Cleaning cycle
Operating panel	Immediately after every soiling
Cooktop	Clean with conventional glass ceramic detergents immediately after soiling and on a weekly basis
Cooktop extractor	Weekly
Air inlet nozzle and stainless steel filter	After cooking very greasy dishes; at least once a week, when the fan level indicator shows F clean by hand or in the dishwasher (at 65 °C max.); clean the stainless steel surfaces in the polishing direction only!
Air guiding housing	Every 6 months or when replacing the activated charcoal filter
Activated charcoal filter (with recirculation only)	Replace if odours have built up, extraction power is dwindling or the fan power level indicator shows F

Tab. 8.1 Cleaning cycles

8.1 Cleaning agents

INFO Due to the use of aggressive cleaning agents and abrasion caused by the pot bases the surface will become damaged and dark stains will occur.

To clean the cooktop, you need a special glass ceramic scraper and suitable cleaning agents.

- ▶ Never use steam cleaners, abrasive sponges, scouring pads or chemically aggressive cleaning agents (e.g. oven cleaner spray).
- ▶ Make sure that the cleaning agent does not contain any sand, soda, acids, lyes or chloride.

For air inlet nozzle and grease filter

- ▶ Do not use any aggressive cleaning agents or agents containing acid or lye.

8.2 Cooktop and extractor care

- ▶ Never use the cooktop as a work or storage surface.
- ▶ Do not push or pull cookware over the cooktop.
- ▶ Always lift pots and pans.
- ▶ Keep the cooktop and extractor clean.
- ▶ Remove any dirt immediately.
- ▶ Only use cookware suitable for glass ceramic cooktops (see Appliance description chapter).

8.3 Cleaning the cooktop

INFO When the cooktop extractor is in use the air inlet nozzle must be fitted so that no small or light objects such as fabric or paper cleaning cloths can be sucked in.

- ▶ Make sure that the cooktop is switched off (see the Operation chapter).
- ▶ Wait until all cooking zones are cold.
- ▶ Remove all coarse dirt and food residues from the cooktop using a glass ceramic scraper.
- ▶ Apply the cleaning agent to the cold cooktop.
- ▶ Spread the cleaning agent using kitchen roll or a clean cloth.
- ▶ Wipe the cooktop clean with a damp cloth.
- ▶ Dry the cooktop with a clean cloth.

If the cooktop is hot:

- ▶ Remove stubborn residues of plastic, aluminium foil, sugar or sweet dishes from the hot cooking zone immediately using a glass ceramic scraper to prevent burning.

Heavy soiling

- ▶ Remove heavy soiling and marks (limescale marks, mother-of-pearl-like shiny marks) using cleaning products while the cooktop is still warm.
- ▶ Wipe off food that boils over with a damp cloth.
- ▶ Remove any remaining dirt with the glass ceramic scraper.
- ▶ Always remove any seeds, crumbs or similar that fall onto the cooktop during cooking immediately to prevent the surface getting scratched.

Any changes in colour or glossy spots are not damage to the cooktops. They do not affect the functionality of the cooktop or the stability of the glass ceramic panel. Changes in the colour of the cooktop are the result of residues which have not been removed and have burnt on.

Glossy spots are the result of wear by the pan base, especially if aluminium-based cookware or unsuitable cleaning agents are used. These are difficult to remove.

8.4 Cleaning the cooktop extractor

The air inlet nozzle and stainless steel grease filter absorb the greasy particles from cooking vapours.

- ▶ Make sure that the cooktop and cooktop extractor are switched off (see the Operation chapter).
- ▶ Wait until the fan indicator shows .
- ▶ Clean the cooktop extractor in accordance with the cleaning cycles.
- ▶ Clean the surfaces of the extraction system using a soft, damp cloth, detergent or a mild window cleaning agent.
- ▶ Soften dried on dirt using a damp cloth (do not scrape it off!).

8.4.1 Removing the components

Removing the X Pure air inlet nozzle

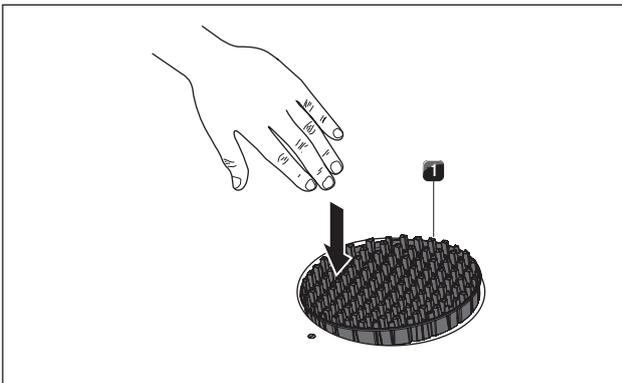


Fig. 8.1 Removing air inlet nozzle PUXA, PUXU

[1] Air inlet nozzle

Prerequisite:

The fan level indicator shows .

- ▶ Tilt the air inlet nozzle [1] from its horizontal position.
- ▶ Remove the air inlet nozzle [1] with your other hand.

Removing the Pure air inlet nozzle

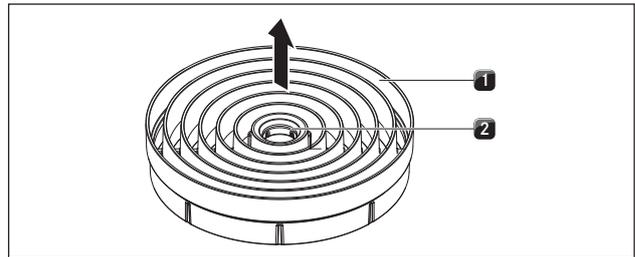


Fig. 8.2 Removing air inlet nozzle PURA, PURU

[1] Air inlet nozzle

[2] Access opening

Prerequisite:

The fan level indicator shows .

- ▶ Reach into the access opening [2] of the air inlet nozzle [1] with your finger.
- ▶ Pull the air inlet nozzle [1] up and out.

Removing the stainless steel grease filter

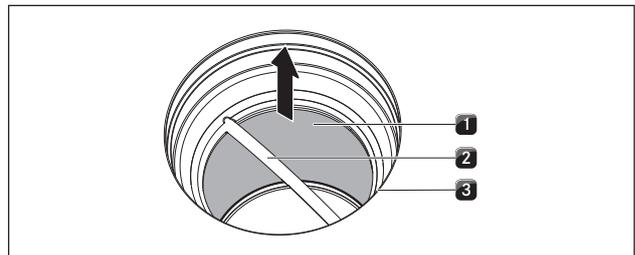


Fig. 8.3 Removing the stainless steel grease filter

[1] Stainless steel grease filter

[2] Handle

[3] Inlet opening

- ▶ Take hold of the stainless steel grease filter by the handle [2].
- ▶ Pull the stainless steel grease filter [1] up and out of the suction opening [3].

8.4.2 Cleaning the air inlet nozzle and stainless steel grease filter

INFO If it is no longer possible to clean the stainless steel grease filter completely, it must be replaced – see Accessories chapter).

Manual cleaning

- ▶ Use a cleaner and degreaser in one.
- ▶ Rinse the air inlet nozzle and stainless steel grease filter with hot water.
- ▶ Use a soft brush to clean the air inlet nozzle and stainless steel grease filter.
- ▶ After cleaning, rinse the air inlet nozzle and stainless steel grease filter well.

Cleaning in the dishwasher

- ▶ Remove coarse food residues from the stainless steel filter
- ▶ Rinse the air inlet nozzle and stainless steel grease filter with a rinsing program at maximum 65 °C.

8.4.3 Fitting the components

Inserting the stainless steel grease filter

- ▶ Take hold of the stainless steel grease filter by the handle [2].
- ▶ Insert the stainless steel grease filter [1] in the inlet opening [3]. A lock is not provided or necessary.

Inserting the air inlet nozzle

- ▶ Insert the air inlet nozzle in the inlet opening.
- ▶ Make sure it is positioned correctly.

8.4.4 Removing liquids from the device

Any liquids that flow into the device through the inlet opening are caught by the stainless steel grease filter (up to 150 ml) and in the air guiding housing. Do the following:

- ▶ Switch off the fan and deactivate the after-run function (see Operation chapter).
- ▶ Remove the air inlet nozzle and stainless steel grease filter (see Cleaning and Maintenance chapter).
- ▶ Empty the stainless steel grease filter.
- ▶ Check whether any liquid has gathered in the base of the air guiding housing.
- ▶ If necessary, wipe the liquid up from the housing base from above through the inlet opening using a sponge or cloth.
- ▶ Clean the air guiding housing (see Cleaning and Maintenance chapter, air guiding housing).
- ▶ To dry the odour filter and duct parts respectively, switch on the cooktop extractor at a minimum power level of 5.
- After 120 minutes the cooktop extractor will automatically switch to the automatic after-run function (see Device Description chapter).

8.5 Cleaning the air guiding housing

Grease particles and limescale residues from cooking vapours can settle on the surface of the air guiding housing. For this reason, regular cleaning is essential. The air guiding housing can be found on the bottom of the cooktop inside the floor unit.

8.5.1 Opening the air guiding housing.

- ▶ Make sure that the cooktop and cooktop extractor are switched off (see the Operation chapter).
- ▶ Wait until the fan level indicator shows □.
- ▶ Remove the air inlet nozzle and stainless steel grease filter.

- ▶ Inside the inlet opening pull the filter replacement cover out of the filter housing opening (To remove the filter replacement cover see Fig. 8.5).

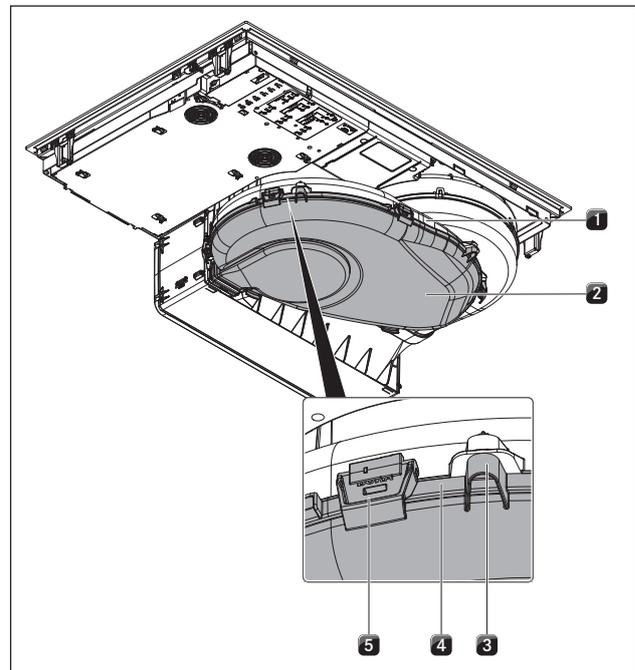


Fig. 8.4 Air guiding housing

- [1] Air guiding housing
- [2] Housing base
- [3] Spigot
- [4] Sealing groove
- [5] Lock

- ▶ Hold the housing base [2] with one hand.
- ▶ Release the 6 locks [5] around the edge of the base.
- ▶ Remove the housing base [2].

- ▶ Clean the air guiding housing [1] and the housing base [2] with a mild cleaning agent.

8.5.2 Closing the air guiding housing

- ▶ Position the housing base [2] under the air guiding housing [1] with the help of the 3 spigots [1].
- ▶ Push the housing base [2] upwards into the sealing groove [4].
- ▶ Close the 6 locks [5].
- ▶ Check that the housing base is positioned correctly.
- ▶ Inside the inlet opening push the filter replacement cover until it comes to a stop in the filter housing opening (To insert the filter replacement cover see Fig. 8.11).
- ▶ Check that the filter replacement cover is positioned correctly.
- ▶ Insert the stainless steel grease filter and the air inlet nozzle.

8.6 Replacing the activated charcoal filter

An activated charcoal filter will only be fitted with the stainless steel grease filter if the cooktop extractor is used in recirculation mode. The activated charcoal filter absorbs cooking odours that arise during cooking.

INFO The activated charcoal filter must be replaced when the fan indicator shows *F* (Filter service indicator). You can obtain the activated charcoal filter PUAKE from your specialist supplier or by contacting BORA via the website at www.bora.com/filter.

- ▶ Make sure that the cooktop and cooktop extractor are switched off (see the Operation chapter).
- ▶ Wait until the fan power level indicator shows \square .

8.6.1 Removing the activated charcoal filter

- ▶ Remove the air inlet nozzle and stainless steel grease filter.

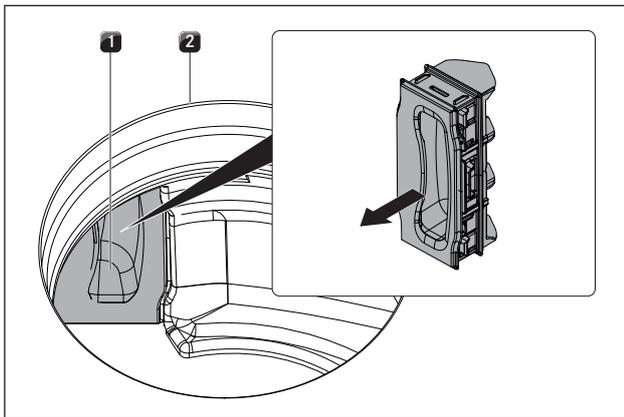


Fig. 8.5 Remove the filter replacement cover

- [1] Filter replacement cover
- [2] Inlet opening

- ▶ Inside the inlet opening [2] pull the filter replacement cover [1] out through the opening in the filter housing.

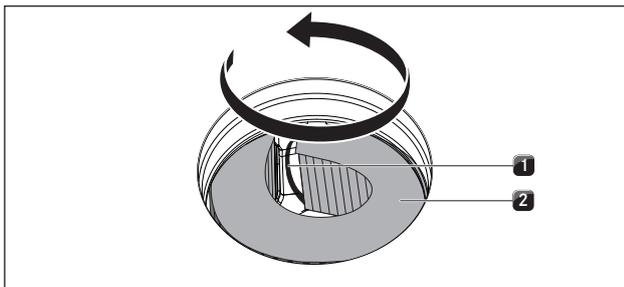


Fig. 8.6 Removing the activated charcoal filter from the filter housing

- [1] Grip strap
- [2] Activated charcoal filter

- ▶ Take hold of the activated charcoal filter [2] by the grip strap [1] and pull it out as far as possible through the filter housing opening.

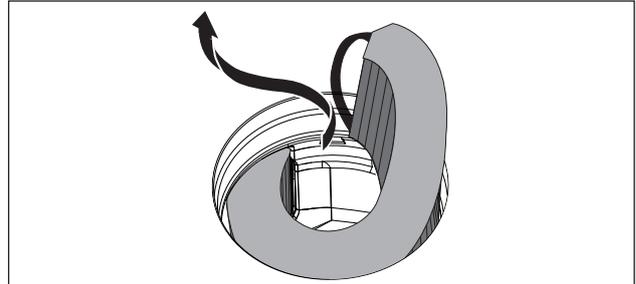


Fig. 8.7 Removing the activated charcoal filter through the inlet opening

- ▶ Take hold of the end of the activated charcoal filter and pull upwards and towards the left until it is completely out of the inlet opening.

8.6.2 Inserting the activated charcoal filter

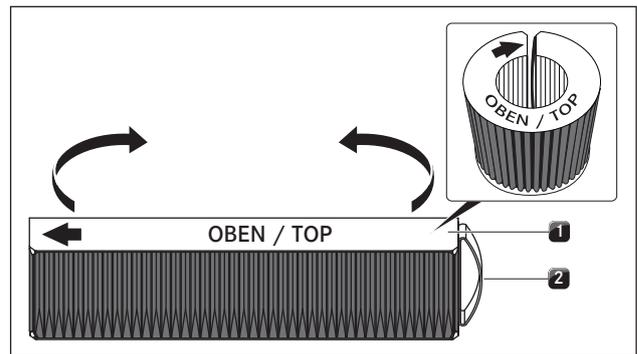


Fig. 8.8 Activated charcoal filter

- [1] Activated charcoal filter
- [2] Grip strap

- ▶ Remove the packaging from the activated charcoal filter [1].
- ▶ Position the activated charcoal filter correctly with the help of the printed symbols (arrow left, grip strap [2] right).
- ▶ Hold the activated charcoal filter at both ends.
- ▶ Bend the activated charcoal filter into a cylindrical shape so that both ends of the filter are opposite each other.

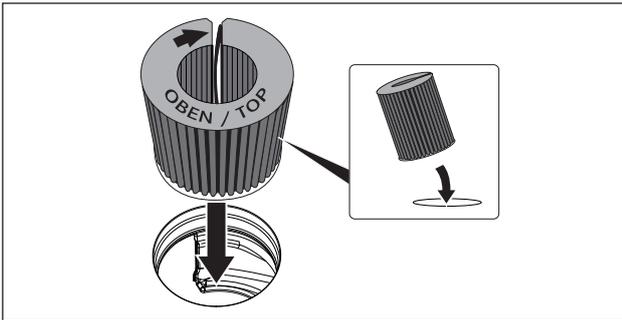


Fig. 8.9 Inserting the activated charcoal filter through the vent opening

- ▶ Tilt the activated charcoal filter towards you slightly and insert it through the inlet opening.
- ▶ Guide the left end of the filter into the opening in the filter housing.

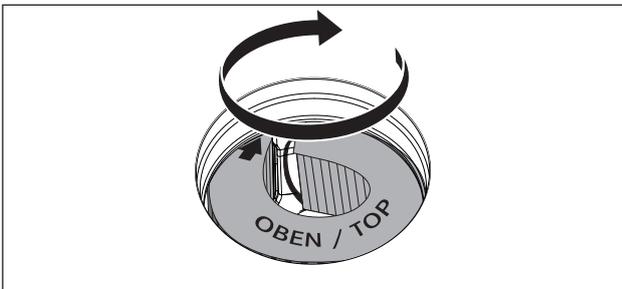


Fig. 8.10 Placing the activated charcoal filter in the end position

- ▶ Push the activated charcoal filter into the filter housing until it will go no further (To do this, you can place one finger between the slats and gradually push the filter into the housing).
- The end position of the activated charcoal filter is reached when the filter has been fully pushed inside the filter housing.

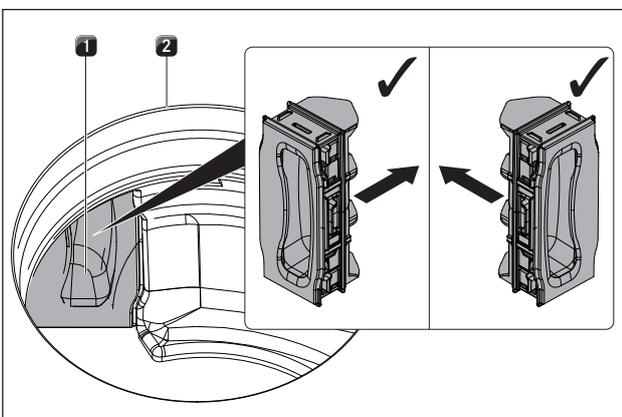


Fig. 8.11 Inserting the filter replacement cover

- [1] Filter replacement cover
- [2] Inlet opening

- ▶ Inside the inlet opening, push the filter replacement cover until it comes to a stop in the filter housing opening.
- ▶ Check that the filter replacement cover is positioned correctly.
- ▶ Insert the stainless steel grease filter and the air inlet nozzle.
- ▶ Reset the filter status indicator (see the Operation chapter, customer menu).

9 Troubleshooting

INFO You can often resolve faults and errors that can occur in day-to-day operation yourself. That way you save time and money as you don't need to call out customer services.

► Observe all safety and warning information (see the Safety chapter).

Operating situation	Cause	Remedy
The cooktop or the fan cannot be switched on	The fuse or automatic circuit breaker of the electrical wiring system in the apartment and/or house is defective	Replace the fuse Switch the automatic circuit breaker back on
	The fuse/automatic circuit breaker trips several times	Contact the BORA Service team
	The power supply is disconnected	Have a specialist electrician inspect the power supply
Build-up of odours when new cooktop extractor is in operation	This is normal on brand-new appliances	Odours stop forming after a few operating hours
☐ is displayed in the cooking zone display	No or unsuitable cookware on the cooking zone	Use suitable cookware. Select the cookware size depending on the cooking zone (see the Appliance Description chapter)
The lock symbol is brighter than the other indicators	The childproofing feature is activated	Switch off the childproofing feature (see the Operation chapter).
A cooking zone or the entire cooktop switches off automatically	The maximum cooking zone operating time has been exceeded	Put the cooking zone back into operation (see the Operation chapter)
The power setting is automatically shut off prematurely	The overheating protection has tripped	(see the Appliance Description chapter)
The cooktop cooling fan continues to run when the cooktop has been switched off	The cooling fan runs until the cooktop has cooled	Wait until the cooling fan switches off automatically
The extraction performance of the cooktop extractor has decreased	The grease filter is extremely dirty	Clean or replace the grease filter
	The activated charcoal filter is extremely dirty (only with PUXU, PURU)	Replace the activated charcoal filter
	There is an object in the air guiding housing (e.g. cleaning cloth)	Remove the object
E is shown in the fan display	Home-In not authorised	Open the window
	The safety device is defective	Contact the BORA Service team
E2 is shown in the cooking zone	The overheating protection has tripped	(see the Appliance Description chapter)
E03 is displayed	Object on the operating panel	Remove the object from the operating panel
E is displayed in the fan display	The operating panel is dirty	Clean the operating panel
03 is displayed in the rear cooking zones		
EB is shown in the fan display	Use of a phase-separating window contact switch	Open the window
	The cooktop extractor is defective or a cable connection has become loose	Contact the BORA Service team
F is shown in the fan display (only with PUXU, PURU)	End of activated charcoal filter service life reached	Fit a new activated charcoal filter (see Cleaning and Maintenance chapter)

Tab. 9.1 Resolving a fault

Faults and errors not covered:

- Switch off the appliance.
- Contact the BORA Service Team (see Warranty, technical service and spare parts chapter) and enter the error number displayed and the appliance type.

10 Decommissioning, disassembly and disposal

- ▶ Observe all safety and warning information (see the Safety section).
- ▶ Follow the enclosed manufacturer's information.

10.1 Decommissioning

Decommissioning is understood as final shutdown and disassembly. Following decommissioning, the device can either be installed into other units, sold on privately or disposed of.

INFO Electricity and gas connections may only be disconnected by qualified specialists.

- ▶ To decommission, switch the device off (see Operation section)
- ▶ Disconnect the device from the power supply.

10.2 Disassembly

For removal, the device must be accessible for disassembly and disconnected from the power supply.

- ▶ Undo the mounting brackets.
- ▶ Remove any other accessories.
- ▶ Dispose of the old device and any contaminated accessories as described under "Environmentally-friendly disposal".

10.3 Environmentally-friendly disposal

Disposal of transport packaging

INFO The packaging protects the device from damage in transport. The packaging materials have been selected from environmental and disposal perspectives and are therefore recyclable.

Returning the packaging to the materials cycle saves resources and reduces waste volumes. Your specialist supplier will take the packaging back.

- ▶ Give the packaging to your specialist supplier or
- ▶ Dispose of the packaging properly in line with local regulations.

Disposal of old appliance



Electrical devices marked with this label may not be disposed of in domestic waste at the end of their service life. They must be disposed of at a collection point for the recycling of old electrical or electronic devices. You can find information from your city or district council.

Many electrical and electronic devices still contain valuable materials. But they also contain damaging materials which were necessary for them to function properly and safely. These can damage human health or the environment if disposed of improperly or incorrectly handled.

- ▶ Never put your old appliance in domestic waste.
- ▶ Take the old appliance to a regional collection point for return and recycling electrical and electronic components and other materials.

11 Warranty, technical service, spare parts, accessories

- Observe all safety and warning information (see the Safety chapter).

11.1 BORA manufacturer's warranty

BORA provides its end customers with a 2-year manufacturer's warranty for its products. The end customer is entitled to this warranty in addition to the statutory claims for defects against the sellers of our products.

The manufacturer's warranty applies to all BORA products sold by authorised BORA dealers with the European Union, with the exception of products labelled by BORA as Universal products or accessories.

The manufacturer's warranty starts as soon as the BORA product is handed over to the end customer by an authorised BORA dealer and is valid for 2 years. By registering on www.bora.com/registration the end customer has the possibility of extending the manufacturer's warranty.

The manufacturer's warranty requires expert (in accordance with the valid BORA ventilation handbook and operating instructions at the time of installation) installation of the BORA products by an authorised BORA dealer. During use, the end customer is to adhere to the specifications and instructions in the operating manual. In order to file a warranty claim, the end customer is to notify their dealer or BORA of the fault and must present the receipt. Alternatively, the end customer can provide proof of purchase by registering on www.bora.com. BORA guarantees that all BORA products are free from material and product defects. The defect must exist prior to delivery of the product to the end customer. In the event that a warranty claim is filed, the warranty shall not commence anew.

BORA will correct defects in BORA products at its own discretion by repairing or replacing the product. All costs for the correction of defects under the manufacturer's warranty shall be assumed by BORA.

Expressly not covered by the BORA manufacturer's warranty are:

- BORA products that were not sold by authorised BORA dealers
- Damage caused by non-adherence to the operating instructions (including product care and cleaning) This represents improper use.
- Damage caused by normal use, e.g. traces of usage on the cooktop

- Damage caused by external influences (such as transport damage, ingress of condensation, damage caused by the elements such as a lightning strike)
- Damage caused by repairs or attempts to repair not made by BORA or persons authorised by BORA
- Damage to the glass ceramic
- Voltage fluctuations
- Secondary damage or claims for damages beyond the defect
- Damage to plastic parts

Legal claims, particularly statutory claims for defects or product liability are not limited by the warranty.

If a defect is not covered by the manufacturer's warranty, the end customer can employ the services of the BORA technical service, however, they must cover the costs themselves.

The laws of the Federal Republic of Germany apply to these warranty conditions.

You can contact us by:

- Telephone: +49 800 7890 0987 Monday to Thursday from 08:00-18:00 and Friday from 08:00-17:00
- Email: info@bora.com


11.1.1 Warranty extension

You can extend the guarantee by registering at www.bora.com/registration.

11.2 Service

BORA Service:

see reverse side of operating and assembly instructions



- In the case of faults you cannot fix yourself, contact your BORA specialist supplier or the BORA Service Team.

The BORA Service Team will require the type designation and serial number of your device (FD number).

Both values are indicated on the rate plate in the warranty insert and the underside of the device.

11.3 Spare parts

- Only use original spare parts for repairs.
- Repairs may only be carried out by the BORA Service Team.

INFO Spare parts can be obtained from your BORA dealer, the BORA online service website at www.bora.com/service or by calling the service number provided.

11.4 Accessories

Accessories	PUXA	PUXU	PURA	PURU
Activated charcoal filter PUAKE		✓		✓
Stainless steel grease filter PUEF	✓	✓	✓	✓
Air inlet nozzle PUXED	✓	✓		
Air inlet nozzle black PUED			✓	✓
Air inlet nozzle greige PUEG			✓	✓
Air inlet nozzle red PUEDR			✓	✓
Air inlet nozzle jade green PUEJ			✓	✓
Air inlet nozzle orange PUEO			✓	✓
Air inlet nozzle blue PUEB			✓	✓
Side frame USL515	✓	✓	✓	✓
Side frame All Black USL515AB	✓	✓	✓	✓
Cooktop frame BKR830	✓	✓		
Cooktop frame BKR760			✓	✓
Glass ceramic scraper UGS	✓	✓	✓	✓
Home In module PUHIM	✓		✓	
Window contact switch UFKS	✓		✓	
Air cleaning box PULB (for conversion to recirculation)	✓		✓	
Air purification box telescopic pull-out PULBTA		✓		✓

Fig. 11.1 Accessories X Pure, Pure

Germany:

BORA Lüftungstechnik GmbH
Rosenheimer Str. 33
83064 Raubling
Germany
T +49 (0) 8035 / 9840-0
F +49 (0) 8035 / 9840-300
info@bora.com
www.bora.com

Austria:

BORA Vertriebs GmbH & Co KG
Innstraße 1
6342 Niederndorf
Austria
T +43 (0) 5373 / 62250-0
F +43 (0) 5373 / 62250-90
mail@bora.com
www.bora.com

Europe:

BORA Holding GmbH
Innstraße 1
6342 Niederndorf
Austria
T +43 (0) 5373 / 62250-0
F +43 (0) 5373 / 62250-90
mail@bora.com
www.bora.com

Australia - New Zealand:

BORA APAC Pty Ltd
100 Victoria Road
Drummoyne NSW 2047
Australia
T +61 2 9719 2350
F +61 2 8076 3514
info@boraapac.com.au
www.bora-australia.com.au

