


## **EN** BORA Classic 2.0 system installation instructions

Cooktop extractor and cooktops

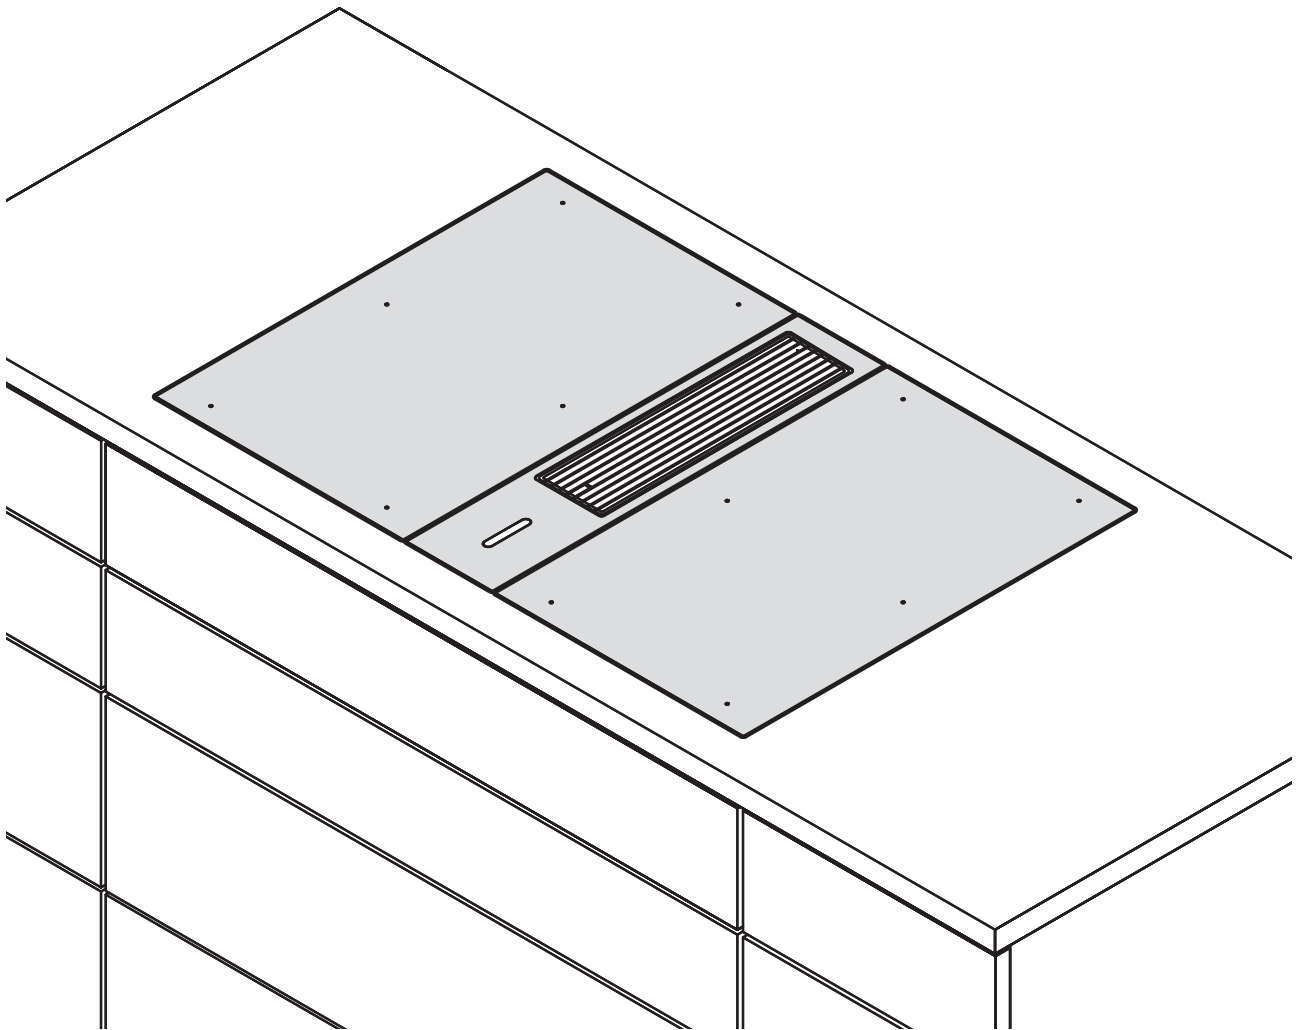

000078-10007

# Table of Contents

<b>1</b>	<b>General information</b>	<b>3</b>	<b>4.11</b>	<b>Installing the cooktops</b>	<b>25</b>
1.1	Liability	3	4.11.1	Fitting and positioning the cooktops	25
1.2	Validity of the operating and installation instructions	3	4.11.2	Securing the cooktop extractor	26
1.3	Product conformity	3	4.11.3	Securing the cooktops	26
1.4	Data protection	3	4.12	Connecting external switch contacts	27
1.5	Presentation of information	3	4.13	Establishing communication and power connection	29
<b>2</b>	<b>Safety</b>	<b>4</b>	4.13.1	Establishing contact between the cooktop extractor and cooktops	29
2.1	Use as intended	4	4.13.2	Fitting split ferrite sleeves	29
2.2	General safety instructions	4	4.13.3	Establishing contact between the operating unit and control unit	30
2.3	Safety instructions for installation	5	4.13.4	Connecting fans to the control unit	30
2.4	Safety instructions – repairs, servicing and spare parts	6	4.13.5	Positioning the control unit	30
2.5	Safety instructions – disassembly and disposal	7	4.13.6	Connecting to the mains	30
<b>3</b>	<b>Technical data</b>	<b>8</b>	4.14	Gas installation (only in the case of gas cooktop CKG)	31
3.1	CKA2/CKA2AB	8	4.14.1	Ventilation	31
3.2	CKFI	9	4.14.2	Gas connection	31
3.3	CKI	10	4.14.3	Connecting the gas supply	31
3.4	CKIW	11	4.14.4	Additional installation notes for Australia and New Zealand (AU/NZ)	31
3.5	CKCH	12	4.14.5	Gas connection AU/NZ	31
3.6	CKCB	13	4.14.6	Changing the gas type	32
3.7	CKG	14	4.14.7	Gas configuration	34
3.8	CKT	15	4.15	Initial operation	34
<b>4</b>	<b>Installation</b>	<b>16</b>	4.15.1	Configuration	34
4.1	General installation information	16	4.15.2	Function test	35
4.1.1	Operating the cooktop extractor with a fireplace that depends on the air in the room	16	4.16	Sealing the devices	35
4.2	Checking the delivery	17	4.17	Handover to user	36
4.2.1	Scope of delivery of the cooktop extractor CKA2/CKA2AB	17	<b>5</b>	<b>Decommissioning, disassembly and disposal</b>	<b>37</b>
4.2.2	Scope of delivery of the cooktops	17	5.1	Decommissioning	37
4.3	Tools and aids	17	5.2	Disassembly	37
4.4	Assembly instructions	17	5.3	Environmentally-friendly disposal	37
4.4.1	Safety clearances	17	<b>6</b>	<b>Notes</b>	<b>38</b>
4.4.2	Worktop and kitchen units	17			
4.4.3	Recirculation when using the cooktop extractor as a recirculation system	18			
4.4.4	Special assembly instructions for gas cooktop CKG	18			
4.4.5	Adjustments to the unit for the gas connection (only 800-mm unit)	19			
4.5	Cut-out dimensions	19			
4.5.1	Flush installation	20			
4.5.2	Surface mounting	20			
4.6	Installation dimensions	21			
4.7	Installation options	22			
4.8	Assembling the extraction system	22			
4.8.1	Assembling cooktop extractor CKA2/CKA2AB	22			
4.9	Installing the cooktop extractor	23			
4.9.1	Fitting and positioning the cooktop extractor	23			
4.10	Installing the duct system	24			
4.10.1	Fitting the duct system to cooktop extractor CKA2/CKA2AB	24			
4.10.2	Installing the additional fan	25			

# 1 General information

These instructions contain important information to protect you from injury and prevent damage to the appliance. Please read these instructions carefully before installing or using the appliance for the first time.

Other documents apply alongside these instructions. Please by all means adhere to all documents that form part of the scope of delivery.

Assembly and installation may only be carried out by trained specialists and taking into account the applicable laws, regulations and standards. All safety and warning information as well as the handling instructions in the accompanying documents must be observed.

## 1.1 Liability

BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH – hereinafter referred to as BORA – does not assume any liability for damage arising from disregard for or non-adherence to the documents included in the scope of delivery!

Furthermore, BORA shall not be held liable for damage caused by improper installation or failure to observe the safety and warning instructions!

## 1.2 Validity of the operating and installation instructions

**i** These instructions describe the BORA Classic 2.0 system with software version 03.00.

These instructions apply to several appliance versions. It is therefore possible that some of the features described do not apply to your appliance. The details of the figures contained herein may differ from some appliance versions and are to be understood as schematic diagrams.

## 1.3 Product conformity

### Directives

The appliances meet the following EU/EC directives:

2014/30/EU EMC Directive  
2014/35/EU Low Voltage Directive  
2009/125/EC Ecodesign Directive  
2011/65/EU RoHS Directive

### Regulations

Gas appliances meet the following EU directives:  
(EU) 2016/426 regulation on appliances burning gaseous fuels

## 1.4 Data protection

During operation your cooktop extractor saves pseudonymised data such as menu settings entered by you, operating hours

of the individual technical units and the number of functions selected. Furthermore, your cooktop extractor documents errors in combination with the number of operating hours.

Data can only be read out manually via your cooktop extractor. This decision is therefore your responsibility.

These saved data then enable a rapid error search and troubleshooting in the event of servicing.

## 1.5 Presentation of information

We use standard formatting, numbering, symbols, safety instructions, terms and abbreviations so that you can work quickly and safely when using this manual.

The term “appliance” is used to refer to cooktops, cooktop extractors or cooktops with integrated cooktop extractor.

**Instructions** are indicated with an arrow.

► Always follow all instructions in the prescribed order.

**Enumerations** are indicated with a bullet point at the start of the line:

- Enumeration 1
- Enumeration 2

**i** Information notes point to special features that must be taken into account.

### Safety and warning instructions

The safety and warning instructions in this manual are emphasised with symbols and signal words.

Safety and warning instructions are structured as follows:

### **! WARNING SYMBOL AND SIGNAL WORD!**



#### Type and source of danger

#### Results of non-compliance

#### ► Measures to minimise risk

Please note:

- warning symbols draw attention to a high risk of injury.
- The signal word indicates the severity of that risk.

Warning symbol	Signal word	Risk
	<b>Danger</b>	Indicates an immediate, hazardous situation which causes death or serious injury if not respected.
	<b>Warning</b>	Indicates a potentially hazardous situation which can cause death or serious injury if not respected.
	<b>Caution</b>	Indicates a potentially hazardous situation which can cause minor injury or damage to property if not respected.

Tab. 1.1 Meaning of the warning symbols and signal words

## 2 Safety

The appliance complies with the stipulated safety requirements. The user is responsible for the safe use of the appliance, cleaning and maintenance. Improper use can lead to personal injury and damage to property.

### 2.1 Use as intended

The appliance is solely intended for preparing food in private households.

#### This appliance is not intended for:

- outdoor use
- heating rooms
- cooling, ventilating or dehumidifying rooms
- use in mobile installation sites such as motor vehicles, ships or aeroplanes
- use with an external timer or a separate remote control system (except for emergency shutdown)
- use at altitudes of over 2,000 m (metres above sea level)

Any other use or any use that goes beyond that which is described here is classed as unintended.

- i** BORA does not assume any liability for damages caused by improper use or incorrect operation.

**All misuse is prohibited!**

### 2.2 General safety instructions

#### **⚡ DANGER!**

##### **Packaging components are a choking hazard**

Packaging components (e.g. film, polystyrene) can be life-threatening for children.

- ▶ Store all packaging components out of reach of children.
- ▶ Dispose of the packaging properly and immediately.

#### **⚡ DANGER!**

##### **Risk of electric shock or injury from damaged surfaces**

The underlying electronics can be exposed or damaged due to fissures, fractures or cracks in appliance surfaces (e.g. damaged glass), particularly in the vicinity of the operating unit. This can cause an electric shock. Furthermore, a damaged surface can cause injuries.

- ▶ Do not touch the damaged surface.
- ▶ If there are any cracks, fissures or fractures, switch the appliance off immediately.
- ▶ Safely disconnect the appliance from the mains using the LS switch, fuses, automatic circuit breakers or contactor.
- ▶ Contact BORA Service.

#### **⚡ WARNING!**

##### **Risk of injury from damaged components**

Damaged components that cannot be removed without tools can cause injuries.

- ▶ Try not to repair or replace damaged components yourself.
- ▶ Contact BORA Service.

#### **⚡ WARNING!**

##### **Risk of injury or damage due to incorrect components or unauthorised modifications**

Incorrect components can lead to personal injury or damage to the appliance. Modifications, additions or alterations to the appliance can lead to safety risks.

- ▶ Only use original components.
- ▶ Do not make any modifications, additions or alterations to the appliance.

#### **CAUTION!**

##### **Appliance components can cause injury if dropped**

Appliance components (e.g. pan supports, operating controls, covers, grease filters, etc.) can cause injury if dropped.

- ▶ Place any appliance components that have been removed in a safe place near the appliances.
- ▶ Ensure that no components removed from the appliances can fall on the floor.

**CAUTION!****Risk of injury from heavy lifting**

If not handled correctly, carrying and installing appliances can cause injury to the limbs or torso.

- ▶ If necessary, carry and install the appliance with another person.
- ▶ Use appropriate aids to prevent damage or injury.

**CAUTION!****Damage from improper use**

The appliance surfaces must not be used as work or storage surfaces. This can damage the appliances (particularly in the case of hard and sharp objects). Never use the appliances as work or storage surfaces.

- ▶ Keep hard or sharp objects away from the appliance surfaces.

**Faults and errors**

- ▶ In the case of faults and errors, follow the instructions in the “Troubleshooting” chapter.
- ▶ In the event of any faults or errors that are not mentioned, switch the appliance off and contact BORA Service.

**Pets**

- ▶ Keep pets away from the appliance.

## 2.3 Safety instructions for installation

- i** The appliance must only be installed and assembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.
- i** During installation maintain the minimum clearance stated in the “Installation” (“Safety clearances”) chapter.
- i** Work on electrical components must only be conducted by trained electrical personnel.
- i** The appliance may only be installed with the power disconnected.

The electrical safety of the appliance is only guaranteed if it is connected to a protective

conductor system that has been installed in line with regulations. Ensure that this basic safety precaution is met.

The appliance must be suitable for the regional voltage and frequency.

- ▶ Check the information on the identification plate and in the event of deviations, do not connect the appliance.
- ▶ Conduct all work extremely attentively and conscientiously.
- ▶ Do not connect the appliance to the mains until the duct system has been installed or the recirculation filter has been fitted.
- ▶ Only use the connection cables supplied. Where necessary these are included in the scope of delivery.
- ▶ Do not use the appliance until installation is complete. This is the only way to ensure safe operation.

**⚡ DANGER!****Risk of electric shock from damaged appliance**

A damaged appliance can cause an electric shock.

- ▶ Check the appliance for visible damage prior to installation.
- ▶ Do not install or connect any damaged appliances.
- ▶ Do not operate any damaged appliances.

### 2.3.1 Safety instructions – cooktop extractor installation

**⚡ DANGER!****Risk of electric shock from residual charge**

Electrical components in the appliance can contain residual charge and cause an electric shock.

- ▶ Do not touch any exposed contacts.

**⚡ DANGER!****Risk of electric shock from incorrect stripping of cables**

Incorrect stripping of the connection cable to external switching devices results in a risk of electric shock.

- ▶ Ensure that the connection cable is secured with the strain relief clamp within the control unit.
- ▶ Ensure that the stated stripping lengths are adhered to.

**⚡ WARNING!****Risk of injury due to moving fan wheel**

There is a risk of injury while the fan is turning.

- ▶ Only install the device with the power disconnected.
- ▶ Connect both sides of the fan to the duct system before commissioning.

**Special safety instructions for the planning of extractor systems****⚡ DANGER!****Risk of smoke inhalation**

When the cooktop extractor is used in exhaust air mode, it draws in air from the room it is installed in and from neighbouring rooms. If there is insufficient air supply, low pressure will occur. When used at the same time as a fireplace that is dependent on the air in the room, noxious gases can be sucked into the living areas from the chimney or outlet shaft.

- ▶ Make sure that there is always a sufficient air supply.
- ▶ Only use reliable, tried-and-tested switching devices, (e.g. window contact switch, low pressure warning device) and have them approved by a qualified expert (certified chimney sweep).

**Ducting connected to wall sleeves**

In the case of straight ducting and a distance < 900 mm between the fan and wall sleeve, a safety guard must be provided for (available as an accessory).

**2.3.2 Safety instructions for cooktop installation****⚡ DANGER!****Risk of electric shock from incorrect mains connection**

Connecting the appliance to the mains incorrectly poses a risk of electric shock.

- ▶ Make sure that the appliance has a fixed connection to the mains voltage.
- ▶ Make sure that the appliance is connected to a properly installed protective conductor system.
- ▶ Make sure that technical equipment is provided to enable all of the appliance's poles to be disconnected from the mains with a contact opening width of at least 3 mm (LS switch and automatic circuit breakers, fuses, contactor).

**⚡ DANGER!****Risk of electric shock from damaged power supply cable**

If the power supply cable is damaged (e.g. during installation or by coming into contact with hot cooking surfaces), this can cause an (lethal) electric shock.

- ▶ Make sure that the power supply cable does not become trapped or damaged.
- ▶ Make sure that the power supply cable does not come into contact with hot cooking surfaces.

**Special safety instructions for the installation of gas cooktops**

**i** Gas installation, appliance installation and replacing the gas nozzles, as well as changing the gas type and pressure, may only be carried out by reliable trained specialists, who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

- ▶ Observe the special instructions on changing the gas type and pressure and the specifications for changing the gas nozzles in the nozzle table (see Operating instructions).

BORA gas cooktops must only be used with BORA cooktop extractors.

**⚡ DANGER!****Risk of explosion and asphyxiation from gas**

Leaking gas can lead to an explosion and result in severe injuries and property damage, or asphyxiation.

- ▶ Keep sources of ignition (naked flames, electric fires) away and do not operate any light switches, or switches on electrical appliances.
- ▶ Do not remove plugs from sockets (risk of sparking).
- ▶ Close the gas supply immediately and turn off the mains supply.
- ▶ Ensure there is a good supply of fresh air (open doors and windows).
- ▶ Plug any leaks immediately.

**2.4 Safety instructions – repairs, servicing and spare parts**

**i** The appliance must only be repaired and serviced by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.



**i** Work on electrical components must only be conducted by trained electrical personnel.

- ▶ Before any repair work, safely disconnect the appliance from the mains supply.

### **⚡ WARNING!**

#### **Risk of injury or damage from improper repairs**

Incorrect components can lead to personal injury or damage to the appliance. Modifications, additions or alterations to the appliance can lead to safety risks.

- ▶ Only use original spare parts for repairs.
- ▶ Do not make any modifications, additions or alterations to the appliance.

**i** A damaged power supply cable must be replaced by a suitable power supply cable. This may only be done by an authorised member of the After Sales Service team.

### **Special safety instruction for the disassembly of gas cooktops**

**i** The gas connection must only be worked on by reliable trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

## **2.5 Safety instructions – disassembly and disposal**

**i** The appliance must only be disassembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

**i** Work on electrical components must only be conducted by trained electrical personnel.

- ▶ Before disassembly, safely disconnect the appliance from the mains supply.

### **⚡ DANGER!**

#### **Risk of electric shock from incorrect disconnection**

Incorrectly disconnecting the appliance from the mains results in a risk of electric shock.

- ▶ Safely disconnect the appliance from the mains using LS switches, fuses, automatic circuit breakers or contactors.
- ▶ Use an authorised measuring device to ensure that there is no power to the appliance.
- ▶ Do not touch exposed contacts on the electronic unit as they may contain residual charge.

## 3 Technical data

### 3.1 CKA2/CKA2AB

Parameter	Value
Supply voltage	220 - 240 V
Frequency	50/60 Hz
Power consumption (including external BORA Universal article fans)	max. 550 W
Fuse protection (internal)	TR 3.15 A
Dimensions (width x depth x height)	439 x 515 x 190 mm
Weight (incl. accessories/packaging)	7.5 kg
Surface material	SSG glass/1.4301 stainless steel and plastic
<b>Cooktop extractor</b>	
Power levels	1 - 5, P
Connection on the exhaust side	BORA Ecotube

Tab. 3.1 Technical data CKA2/CKA2AB

#### Device dimensions CKA2/CKA2AB

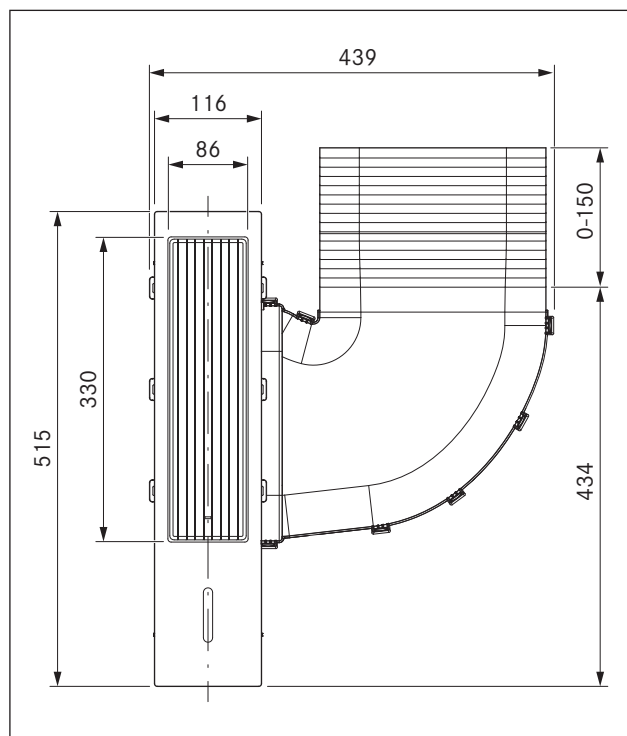


Fig. 3.1 CKA2/CKA2AB device dimensions top view

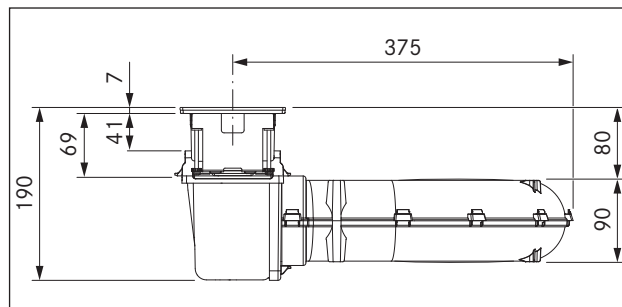


Fig. 3.2 CKA2/CKA2AB device dimensions front view

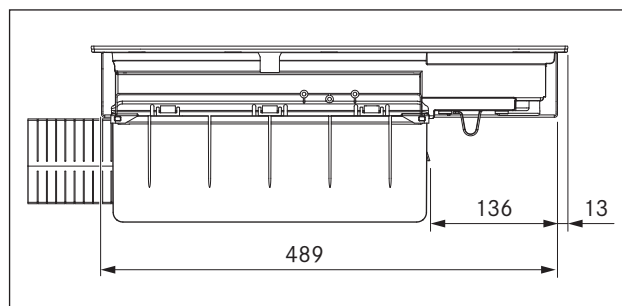


Fig. 3.3 CKA2/CKA2AB device dimensions side view

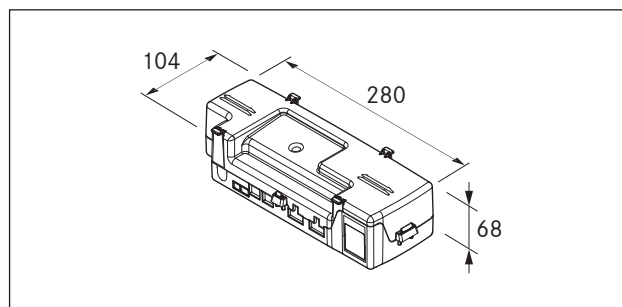


Fig. 3.4 Device dimensions control unit




### 3.2 CKFI


Parameter	Value	
Supply voltage	220 - 240 V	
Frequency	50/60 Hz	
Power consumption	3.68 kW	
Fuse protection	1 x 16 A	
Dimensions (width x depth x height)	327 x 515 x 58 mm	
Weight (incl. accessories/packaging)	7.9 kg	
<b>Cooktop</b>		
Power levels	1 - 9, P	
Warming levels	3	
Front cooking zone (zone 1) power setting	230 x 230 mm	2100 W 3680 W
Rear cooking zone (zone 2) power setting	230 x 230 mm	2100 W 3680 W
<b>Cooktop energy consumption</b>		
Front cooking zone (zone 1)	230 x 230 mm	182.8 (Wh/kg)
Rear cooking zone (zone 2)	230 x 230 mm	181.1 (Wh/kg)
Cooking zones bridged	230 x 460 mm	207.0 (Wh/kg)
Total (average)		190.3 (Wh/kg)

Tab. 3.2 Technical data CKFI


## Device dimensions CKFI

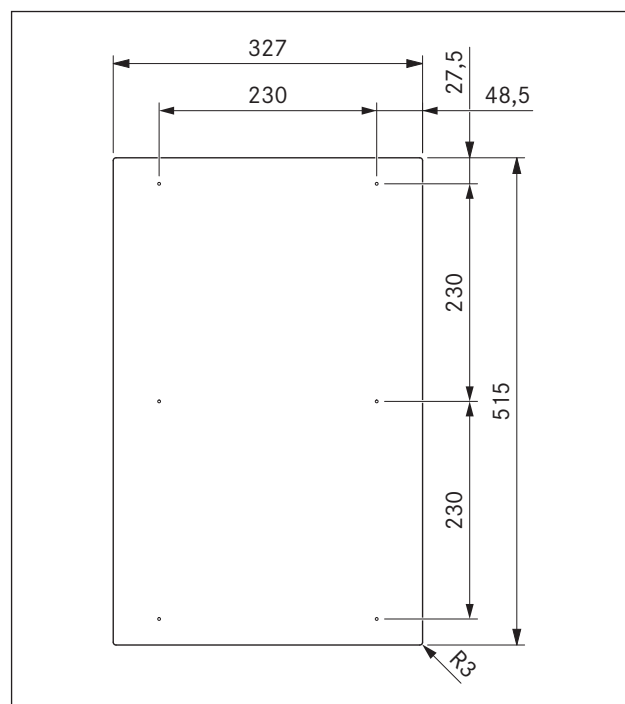

**Fig. 3.5** CKFI device dimensions top view

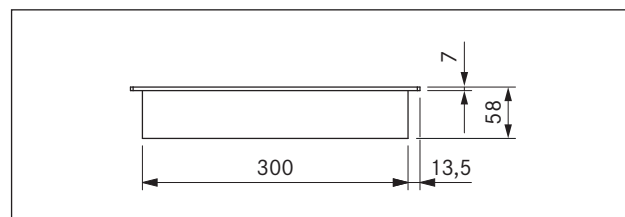

**Fig. 3.6** CKFI device dimensions front view

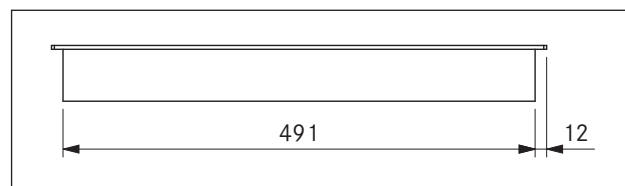

**Fig. 3.7** CKFI device dimensions side view

### 3.3 CKI

Parameter	Value
Supply voltage	220 - 240 V
Frequency	50/60 Hz
Power consumption	3.68 kW
Fuse protection	1 x 16 A
Dimensions (width x depth x height)	327 x 515 x 58 mm
Weight (incl. accessories/packaging)	7.6 kg
<b>Cooktop</b>	
Power levels	1 - 9, P
Warming levels	3
Front cooking zone (zone 1) power setting	Ø 230 mm      2300 W 3680 W
Rear cooking zone (zone 2) power setting	Ø 165 mm      1400 W 2200 W
<b>Cooktop energy consumption</b>	
Front cooking zone (zone 1)	Ø 230 mm      180.5 (Wh/kg)
Rear cooking zone (zone 2)	Ø 165 mm      178.7 (Wh/kg)
Total (average)	179.6 (Wh/kg)

Tab. 3.3 Technical data CKI

Device dimensions CKI

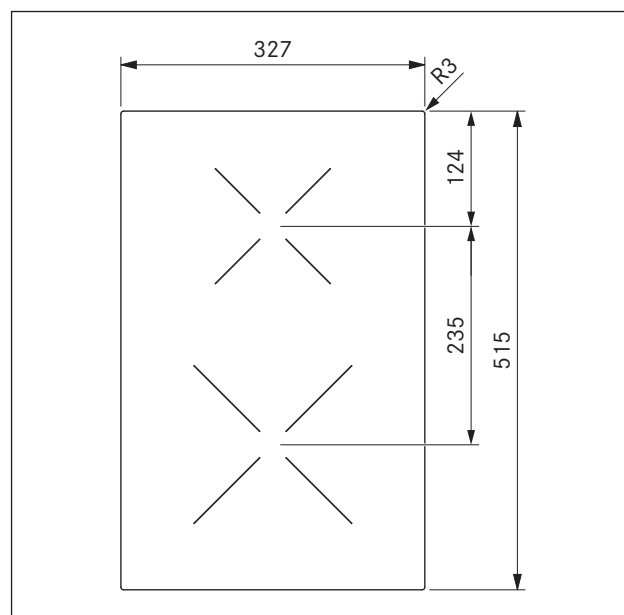


Fig. 3.8 CKI device dimensions top view

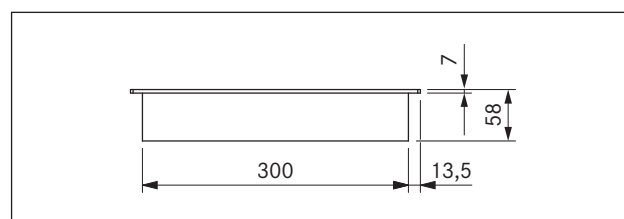


Fig. 3.9 CKI device dimensions front view

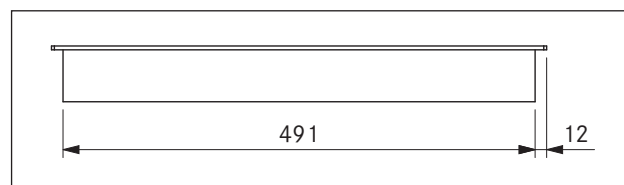


Fig. 3.10 CKI device dimensions side view

### 3.4 CKIW

Parameter	Value
Supply voltage	220 - 240 V
Frequency	50/60 Hz
Power consumption	3.0 kW
Fuse protection	1 x 16 A
Dimensions (width x depth x height)	327 x 515 x 116 mm
Weight (incl. accessories/packaging)	9.8 kg
<b>Cooktop</b>	
Power levels	1 - 9, P
Warming levels	3
Cooking zone power setting	Ø 250 mm      2400 W 3000 W

Tab. 3.4 Technical data CKIW

#### Device dimensions CKIW

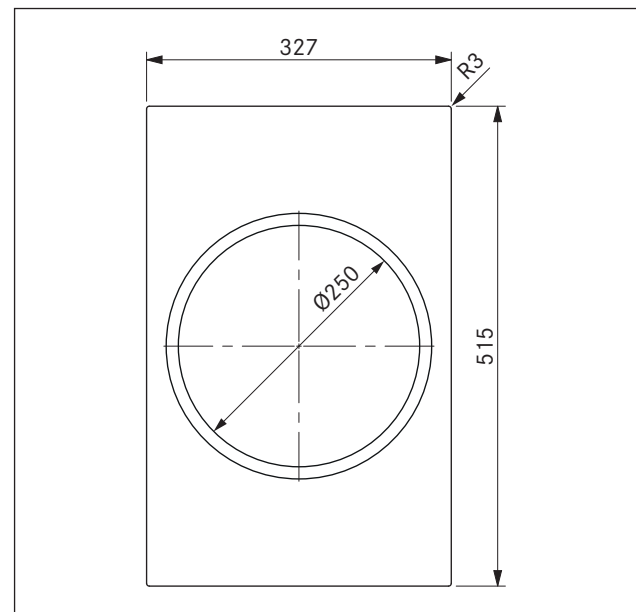


Fig. 3.11 CKIW device dimensions top view

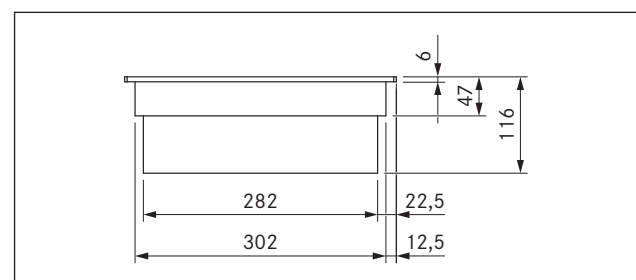


Fig. 3.12 CKIW device dimensions front view

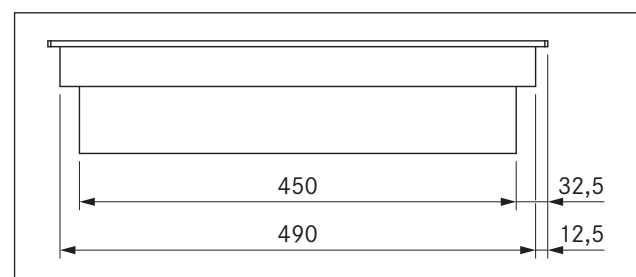


Fig. 3.13 CKIW device dimensions side view

### 3.5 CKCH

Parameter	Value
Supply voltage	220 - 240 V
Frequency	50/60 Hz
Power consumption	3.68 kW
Fuse protection	1 x 16 A
Dimensions (width x depth x height)	327 x 515 x 75 mm
Weight (incl. accessories/packaging)	7.2 kg
<b>Cooktop</b>	
Power levels	1-9, P, 2-ring additional switching
Warming levels	3
Front cooking zone (zone 1) power setting	Ø 215 mm      2100 W 3000 W
Rear cooking zone (zone 2)	Ø 120 mm      600 W
2-ring connection	Ø 180 mm      1600 W
<b>Cooktop energy consumption</b>	
Front cooking zone (zone 1)	Ø 215 mm      191.3 (Wh/kg)
Rear cooking zone (zone 2)	Ø 120/180 mm      197.6 (Wh/kg)
Total (average)	194.5 (Wh/kg)

Tab. 3.5 Technical data CKCH

Device dimensions CKCH

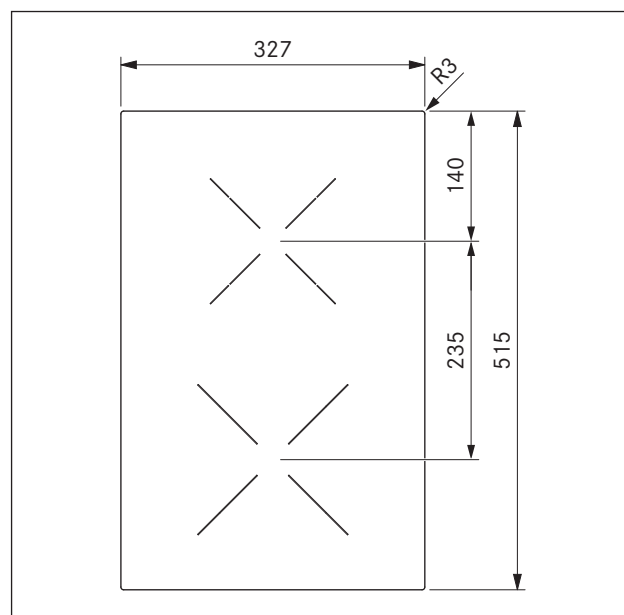


Fig. 3.14 CKCH device dimensions top view

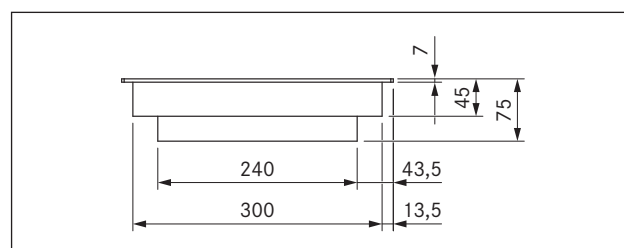


Fig. 3.15 CKCH device dimensions front view

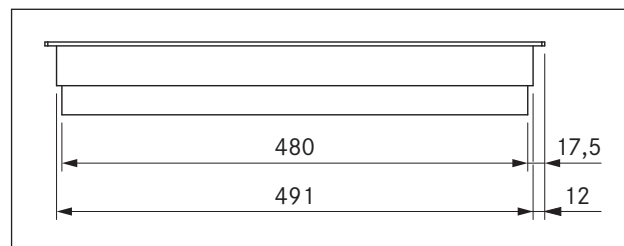


Fig. 3.16 CKCH device dimensions side view

### 3.6 CKCB

Parameter	Value
Supply voltage	220 - 240 V
Frequency	50/60 Hz
Power consumption	3.68 kW
Fuse protection	1 x 16 A
Dimensions (width x depth x height)	327 x 515 x 75 mm
Weight (incl. accessories/packaging)	7.4 kg
<b>Cooktop</b>	
Power levels	1-9, 2-ring connection, roaster cooking zone connection
Warming levels	3
Front cooking zone (zone 1)	Ø 180 mm 1600 W
Rear cooking zone (zone 2)	Ø 120 mm 600 W
2-ring connection, roaster cooking zone connection	Ø 180 mm 1600 W
	Ø 180 x 410 mm 3680 W
<b>Cooktop energy consumption</b>	
Front cooking zone (zone 1)	Ø 180 mm 193.4 (Wh/kg)
Rear cooking zone (zone 2)	Ø 120/180 mm 195.5 (Wh/kg)
	Ø 180 x 410 mm
Total (average)	194.4 (Wh/kg)

Tab. 3.6 Technical data CKCB

Device dimensions CKCB

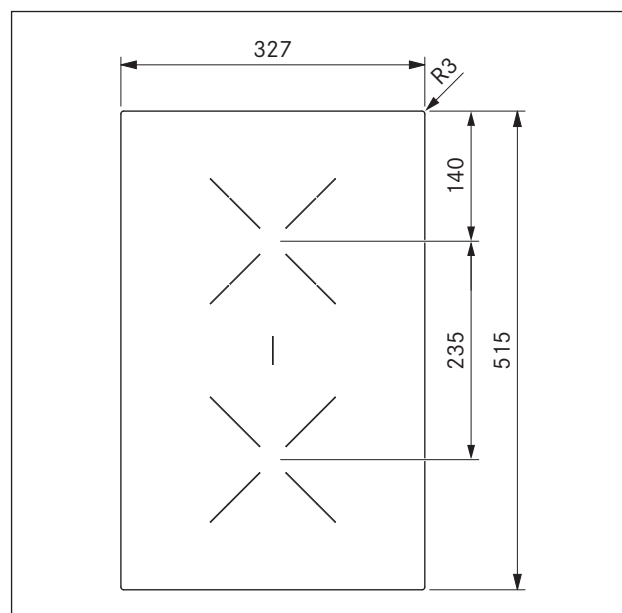


Fig. 3.17 CKCB device dimensions top view

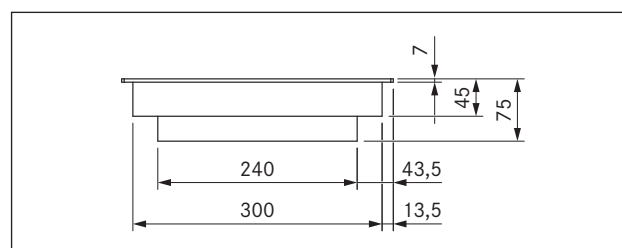


Fig. 3.18 CKCB device dimensions front view

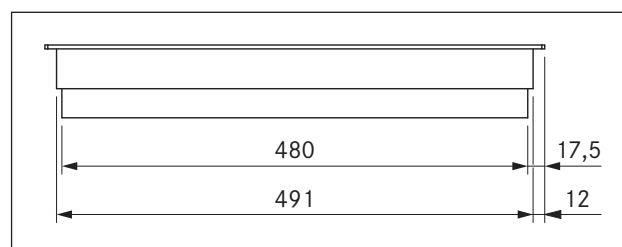


Fig. 3.19 CKCB device dimensions side view

### 3.7 CKG

Parameter	Value
Supply voltage	220-240 V
Frequency	50/60 Hz
Total burner output	5.0 kW
Power rating	20 W
Fuse protection	1 x 0.5 A
Gas connection	1/2" internal thread
Dimensions (width x depth x height)	327 x 515 x 73 mm
cooktop pan support high-power burner	270 x 270 x 25/50 mm
pan support normal burner	235 x 235 x 25/50 mm
Weight (incl. accessories/packaging)	11.5 kg
<b>Cooktop</b>	
Power levels	1 - 9, P
Warming levels	3
High-power front burner	800 - 3000 W
Normal rear burner	550 - 2000 W
Total nominal connection values G20/20 mbar:	5.00 kW 0.449 m <sup>3</sup> /h
<b>Cooktop energy consumption G20/20 mbar</b>	
<b>Category I2H 20 mbar</b>	
<b>(measurement taken without cooktop extractor)</b>	
High-power front burner	800 - 3000 W 63.3 %
Normal rear burner	550 - 2000 W 61.3 %
Total (average)	62.3 %

Tab. 3.7 Technical data

#### Additional technical data for Australia and New Zealand (AUS/NZS):

Total nominal connection values for natural gas/  
1.0 kPa test point pressure: 19.5 MJ/h

Cooktop energy consumption AUS/NZS natural gas/  
1.00 kPa test point pressure:

High power front burner 12.0 MJ/h  
Normal back burner 7.5 MJ/h

#### Device dimensions CKG

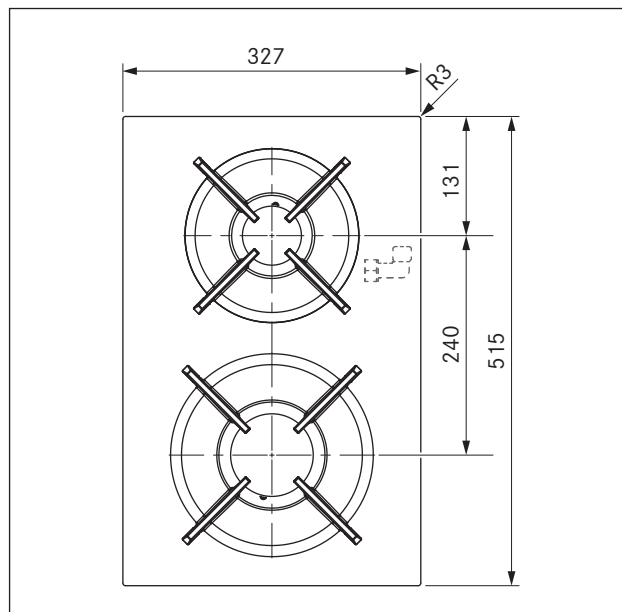


Fig. 3.20 CKG device dimensions top view

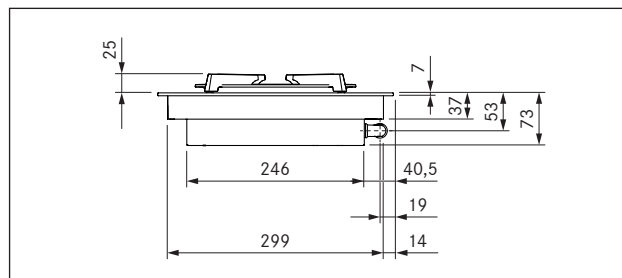


Fig. 3.21 CKG device dimensions front view

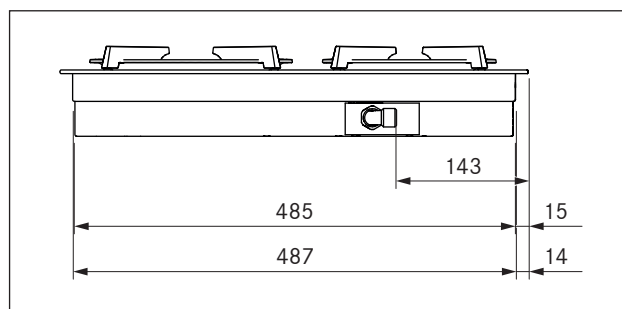


Fig. 3.22 CKG device dimensions side view

### 3.8 CKT

Parameter	Value
Supply voltage	220 - 240 V
Frequency	50/60 Hz
Power consumption	3.5 kW
Fuse protection	1 x 16 A
Dimensions (width x depth x height)	327 x 515 x 73 mm
Weight (incl. accessories/packaging)	13.6 kg
<b>Cooktop</b>	
Temperature control (power levels)	150 - 230 °C, 250 °C (1-9, P)
Warming levels	3
Front cooking zone (zone 1)	250 x 220 mm 1750 W
Rear cooking zone (zone 2)	250 x 220 mm 1750 W
Temperature control range	70 - 250 °C

Tab. 3.8 Technical data CKT

#### Device dimensions CKT

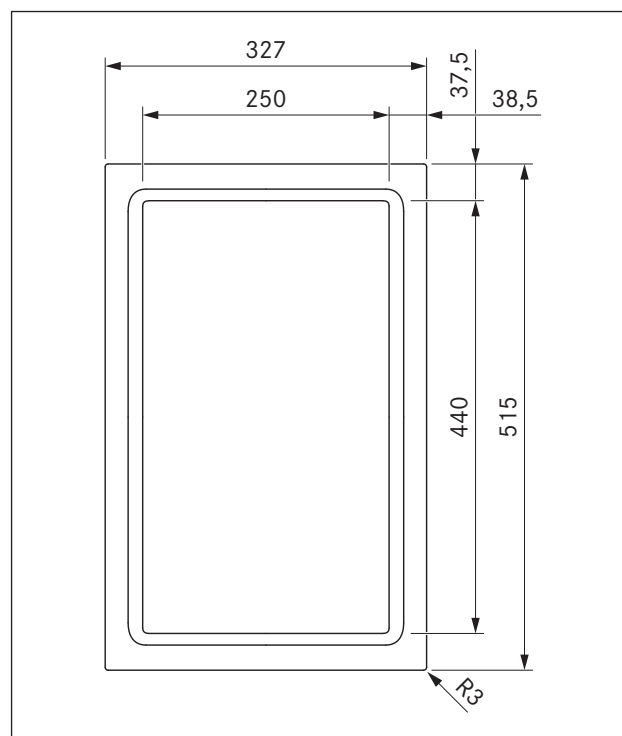


Fig. 3.23 CKT device dimensions top view

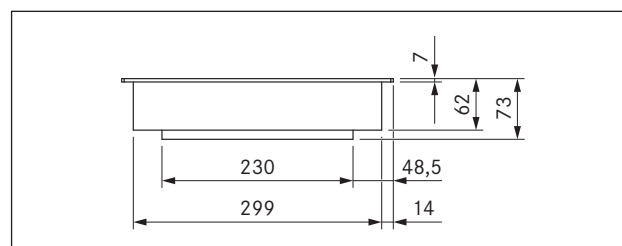


Fig. 3.24 CKT device dimensions front view

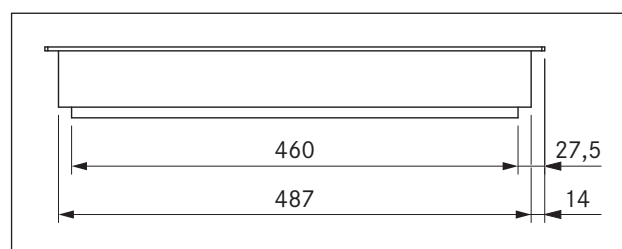


Fig. 3.25 CKT device dimensions side view



## 4 Installation

- Observe all safety and warning information (see „2 Safety“).
- Follow the enclosed manufacturer's information.

### 4.1 General installation information

- i** The appliances must not be installed above cooling devices, dishwashers, stoves, ovens, washing machines or dryers.
- i** The contact surfaces of the worktops and wall sealing strips must be made of a heat-resistant material (up to approx. 100 °C).
- i** Worktop cut-outs must be moisture-sealed using suitable means and, where necessary, fitted with a thermal insulator.
- i** External devices may only be connected to the cooktop extractor connections provided.
- i** Extremely bright lights aimed directly at the appliances can cause colour variations in the appliances and are thus to be avoided.

#### General installation information for cooktops

- i** To ensure that the cooktops perform optimally at all times, there must be sufficient ventilation beneath the cooktops.
  - i** The performance of the cooktops is affected or the cooktops overheat if the warm air beneath the cooktops cannot escape.
  - i** If a cooktop overheats, the power is automatically reduced or the cooktop is switched off completely (see operating instructions).
  - i** If cable protection (false floor) is planned beneath the appliance, this must be fitted so it does not obstruct ventilation.
- Make sure that the area below the cooktop has a sufficient air supply.

#### Additional installation notes for Australia and New Zealand (AU/NZ):

- i** The gas hose must be inspected every 5 years and replaced if necessary. The gas hose must meet the requirements of AS/NZS 1869.

#### 4.1.1 Operating the cooktop extractor with a fireplace that depends on the air in the room

- i** The state and regional laws and regulations must be observed with regard to the exhaust duct design.
- i** A sufficient air supply must be ensured.

Fireplaces that depend on the air in the room (e.g. gas, oil, wood or coal-fired heaters, continuous-flow water heaters, instantaneous water heaters) draw in air from the room in which they are installed and release the exhaust fumes into the outside air via an exhaust system (e.g. chimney).

If the cooktop extractor is used in exhaust mode, it draws in air from the room in which it is installed as well as from neighbouring rooms. Without sufficient air, there will be a drop in air pressure. Toxic gases could be drawn out of the chimney or extraction ducting and back into the room.

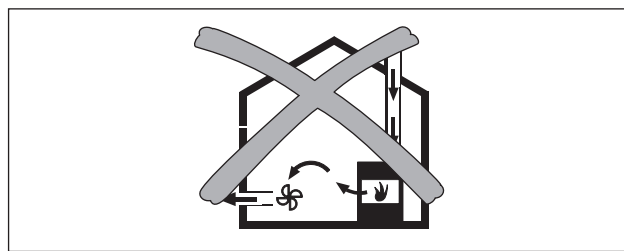


Fig. 4.1 Exhaust air installation – not permitted

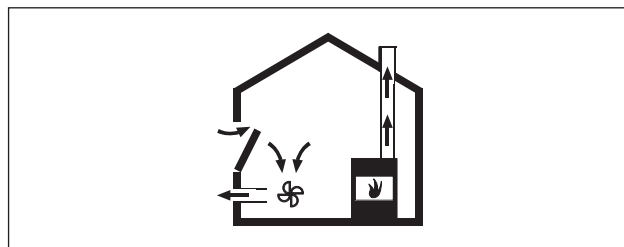


Fig. 4.2 Exhaust air installation – correct

- If simultaneously operating both a fireplace and the cooktop extractor in the same room, ensure that...
  - ...the maximum low pressure is 4 Pa (4 x 10<sup>-5</sup> bar);
  - ...a safety device (e.g. window contact switch, low pressure warning device) is used to ensure that a sufficient supply of fresh air is guaranteed;
  - ...when using a window contact switch, only devices will be installed which meet the requirements of standard IEC 60730-1:2013 + AMD1:2015 or EN 60730-1:2016 (or a more recent IEC update or EN standard) for type 2 control units and devices (e.g. BORA window contact switch UFKS).
  - ...the exhaust air is not be ducted into a chimney that is used for exhaust gases of devices operated with gas or other combustibles;
  - ...the installation is checked and approved by an authorised certified engineer (e.g. heating engineer).

- i** No window contact switches may be installed that separate the control unit from the power supply (phase separation). Only the Home In interface is to be used.

## 4.2 Checking the delivery

- Make sure the delivery is complete and check it for damage.
- If there are any missing or damaged parts, please notify BORA After Sales Service.
- Do not under any circumstances install parts which are damaged.
- Dispose of transport packaging in the proper manner (see „5 Decommissioning, disassembly and disposal“).

### 4.2.1 Scope of delivery of the cooktop extractor CKA2/CKA2AB

Scope of delivery CKA2/CKA2AB	Quantity
Installation instructions	1
Operating instructions	1
Extractor base module (CKA2GM)	1
Air inlet nozzle (CKA2ED/CKAEDAB)	1
Grease filter unit (CKA2FFE)	1
Control unit (CKA2SB)	1
Power supply cable (country-specific)	1
Flexible module (CKA2MF)	1
Ferrite sleeve (UFK)	1

Tab. 4.1 Scope of delivery of the cooktop extractor

### 4.2.2 Scope of delivery of the cooktops

Scope of delivery CKFI, CKI, CKIW, CKCH, CKCB, KKG, CKT	Quantity
Cooktop	1
Mounting brackets	4
Height adjustment plate set	1
<b>Additional scope of delivery CKFI, CKI, CKIW, CKCH, CKCB</b>	
Glass ceramic cleaning instructions	1
<b>Additional scope of delivery KKG</b>	
Cast-iron grate	2
Nozzle set G20/20 mbar natural gas PKGDS2020	1
Cylindrical/conical transition piece	1
Seal	1
Glass ceramic cleaning instructions	1
<b>Special scope of delivery for Australia and New Zealand:</b>	
Gas regulator 1,00 kPa with test point for natural gas (NG)	1
Test point adapter for liquid gas (LPG)	1
Flexible gas connection hose, length 500 mm, 1/2" external thread(EN14800)	1
Nozzle set G20/10 mbar (NG/1.0 kPa) – pre installed	1
Nozzle set G31/27,5 mbar (ULPG/2.75 kPa)	1
<b>Additional scope of delivery CKT</b>	
Tepan spatula	1

Tab. 4.2 Scopes of delivery of the cooktops

## 4.3 Tools and aids

The following special tools are required to correctly install the system:

- Screwdriver/Torx screwdriver 20
- Black, heat-resistant silicone sealant
- Fine saw

## 4.4 Assembly instructions

### 4.4.1 Safety clearances

- Maintain the following safety clearances:

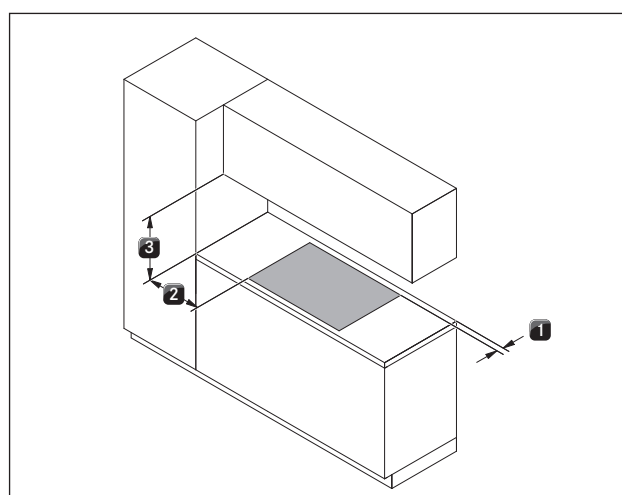


Fig. 4.3 Minimum distance

- [1] Minimum clearance of 50 mm at the front and back from the worktop cut-out to the edge of the worktop.
- [2] Minimum clearance of 300 mm from the left and right of the worktop cut-out to the adjacent cabinet or wall.
- [3] Minimum clearance of 600 mm between the worktop and cabinet above (650 mm in the case of gas devices).

### 4.4.2 Worktop and kitchen units

- Create the worktop cut-out taking into account the specified cut-out dimensions.
- Make sure that the cut surfaces of the worktops are properly sealed.
- Comply with the instructions of the worktop manufacturer.
- Cross bars on the kitchen unit in the area of the worktop cut-out may need to be removed.
- No false floor is necessary below the cooktop. If cable protection (false floor) is planned, the following must be taken into account:
  - It must be fitted in such a way that it can be removed for maintenance work.
  - To ensure sufficient cooktop ventilation, a minimum distance of 15 mm to the bottom edge of the cooktop extractor is to be observed.
- The drawers and/or shelves in the floor unit must be removable.
- For correct installation, the slide-in units of the base cabinet must be shortened depending on the installation situation.

#### 4.4.3 Recirculation when using the cooktop extractor as a recirculation system

In the case of recirculation systems there must be a return flow aperture in the kitchen units:

- > 500 cm<sup>2</sup> (per air cleaning box) in combination with cooktops CKFI, CKI, CKIW, CKCH, CKCB and CKT
- > 1000 cm<sup>2</sup> (per air cleaning box) in combination with gas cooktop CKG

- i** If several extractor systems are operated in recirculation mode, the return flow aperture for each air cleaning box must be calculated correspondingly. Example:  
2 recirculation systems = 2 x (> 500 cm<sup>2</sup>) or  
2 x (> 1,000 cm<sup>2</sup>) in the case of gas appliances

For recirculation, the necessary return flow aperture can be created using a shortened plinth. A slatted plinth with at least the minimum opening cross-section can also be used.

- Ensure that the return flow aperture is large enough.

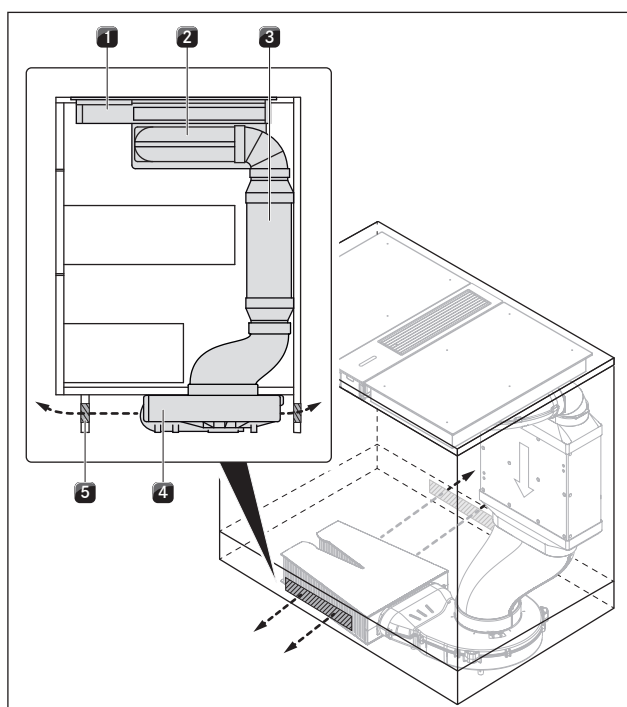


Fig. 4.4 Recirculation design example (kitchen island + cooktop + CKA2/ /CKA2AB + air cleaning unit)

- [1] Cooktop
- [2] Cooktop extractor CKA2/CKA2AB (recirculation)
- [3] Air cleaning unit (ULB1, ULB3, ULBF)
- [4] BORA plinth fan EC (ULS)
- [5] Recirculation return flow aperture  
(Total opening cross section per air cleaning unit  $\geq 500$  cm<sup>2</sup> or  $\geq 1000$  cm<sup>2</sup> in the case of gas cooktop CKG)

- i** If the gas flame goes out, is excessively affected by the extractor and/or the flame is not as it should be (e.g. soot production, flame blowback, etc.), the return flow aperture must be enlarged.

#### 4.4.4 Special assembly instructions for gas cooktop CKG

- Please note the local regulations and connection requirements applicable to gas cooktops.  
► Before connecting the appliance, check that the appliance settings comply with local connection requirements (gas type and pressure).

- i** If a gas cooktop CKG is installed to the right of the extractor, we recommend using a 900-mm unit.

- i** Minimum requirement for operating gas cooktop CKG: System software 03.00 (or higher)

- If necessary, retrieve the installed software version (see operating instructions).  
► Update the system software if necessary (see operating instructions).

- i** Minimum clearance of 650 mm between the worktop and wall unit in the case of gas devices.

- i** On recirculation systems, a return flow aperture of at least 1,000 cm<sup>2</sup> must be provided for each air cleaning unit.

- i** Ensure sufficient ventilation.

- i** Taking into account the applicable valid regulations, the cooktop must be connected to the gas line with an upstream stopcock.

- i** The hose connection must be laid in such a way that it is not subject to deformation, buckling or abrasion.

- i** The stopcock and gas supply pipe connections must be accessible.

- i** The pressure regulator must correspond to the set gas type and set gas pressure and must meet local and legal requirements.

- i** The gas connection hose line must not come into contact with smoke or the flue outlet of an oven.

- i** The hose line must not come into contact with hot surfaces on the cooktop or other devices.

- i** If the gas cooktop is used in a model with two cooktop extractors, it is to be installed at the side. If installed between the cooktop extractors, the pull of air on both sides may affect the flames.

#### Positioning the gas cooktop CKG with two cooktop extractors

If the gas cooktop is used in a model with two cooktop extractors, it is to be installed at the side. If installed between the cooktop extractors, the pull of air from both sides may affect the flames.

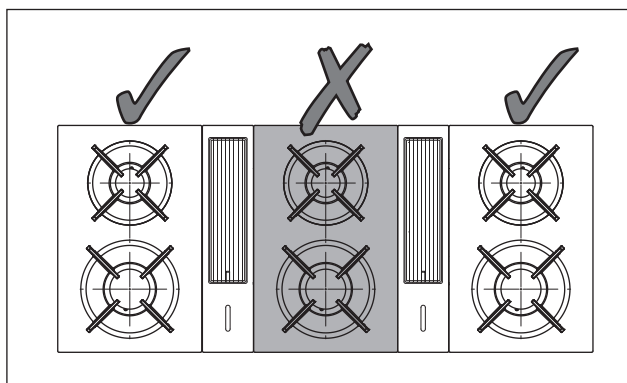


Fig. 4.5 Positioning the CKG with two cooktop extractors

#### Air supply to gas cooktop CKG

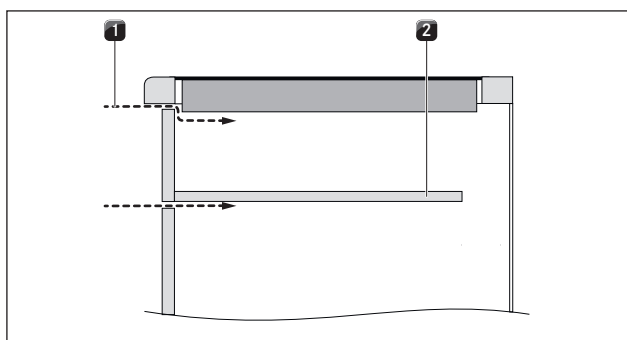


Fig. 4.6 Air supply at front of the body

- [1] Air supply via the front of the body (opening cross-section  $\geq 50 \text{ cm}^2$ )
- [2] Optional cable protection (shortened)

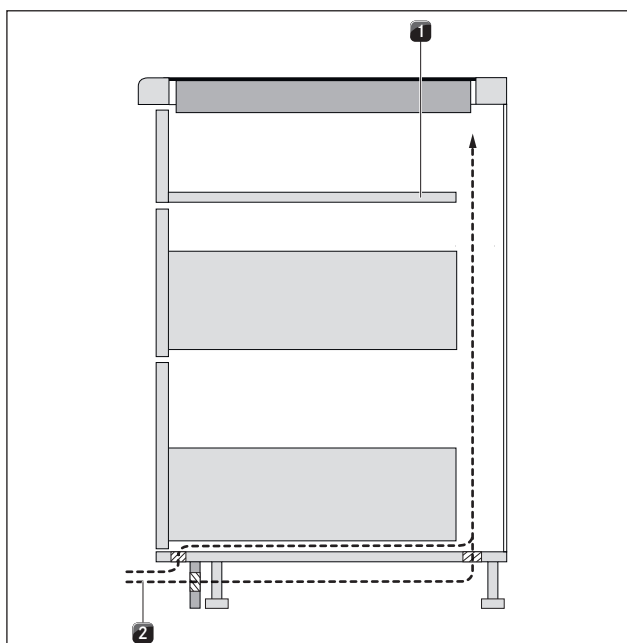


Fig. 4.7 Plinth area air supply

- [1] Optional cable protection (shortened)
- [2] Air supply via the plinth area (opening cross-section  $\geq 150 \text{ cm}^2$ )

- i** To ensure a sufficient air supply, an opening cross-section of at least  $50 \text{ cm}^2$  is recommended in the front of the kitchen unit, or an opening cross-section of at least  $150 \text{ cm}^2$  in the plinth area.

- Make sure that the area below the cooktop has a sufficient air supply.

#### 4.4.5 Adjustments to the unit for the gas connection (only 800-mm unit)

If a gas cooktop is installed to the right of cooktop extractor CKA2, this can cause space problems in an 800-mm wide unit. Therefore, the right panel of the unit must be removed, as shown in Fig. 4.8 and Fig. 4.9.

- i** For worktops with a thickness of more than 40 mm, it may be necessary to make recesses in the gas connection area.
- i** The elbow fitting and the coupling nut of the gas connection must not come into contact with the unit, etc. and must not be subjected to a mechanical load.

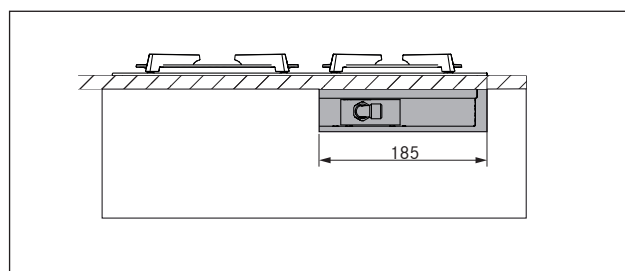


Fig. 4.8 Side cut-out for the gas connection

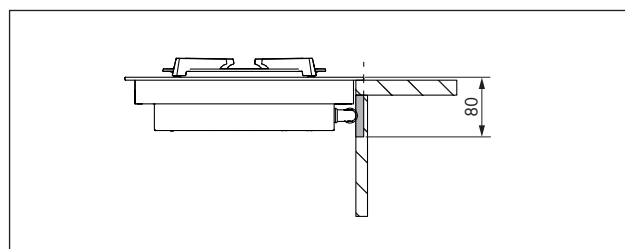


Fig. 4.9 Side cut-out for the gas connection (front view)

#### 4.5 Cut-out dimensions

- i** The minimum distance of 50 mm from the front edge of the worktop to the worktop cut-out is a recommendation from BORA.

- Comply with the instructions of the worktop manufacturer.
- Create the worktop cut-out taking into account the specified cut-out dimensions.
- Make sure that the cut surfaces of the worktops are properly sealed.

### 4.5.1 Flush installation

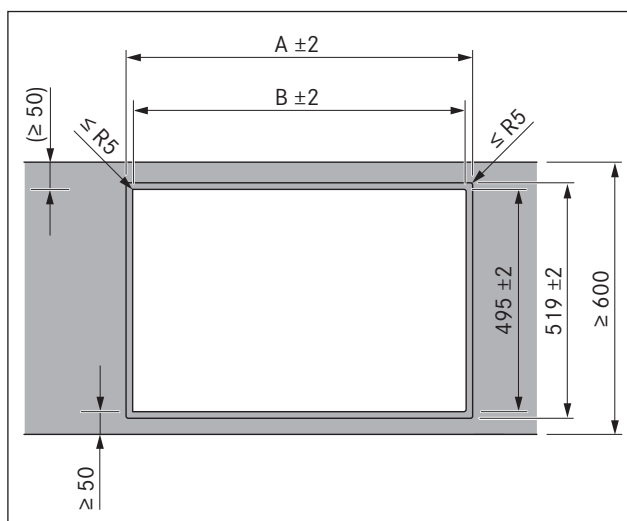


Fig. 4.10 Cut-out dimensions for flush installation








Fig. 4.11 Groove dimensions for flush installation

Cooktops/cooktop extractor	A in mm	B in mm
	1/1 448	424
	2/1 776	752
	3/2 1221	1197
	4/2 1549	1525

Tab. 4.3 Cut-out dimensions of the appliance combinations in the case of flush installation
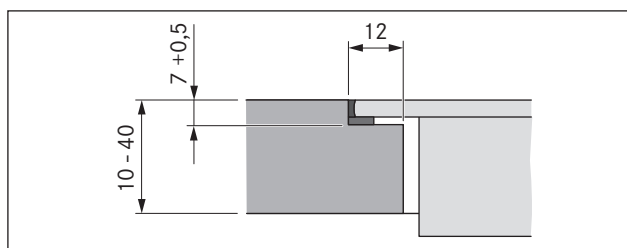
### 4.5.2 Surface mounting

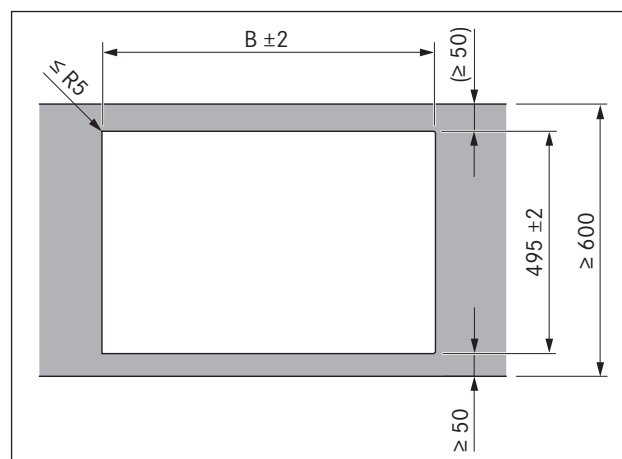


Fig. 4.12 Cut-out dimensions for surface mounting








Fig. 4.13 Dimension of support for surface mounting

Cooktops/cooktop extractor	B in mm
	1/1 424
	2/1 752
	3/2 1197
	4/2 1525

Tab. 4.4 Cut-out dimensions of the appliance combinations in the case of surface mounting
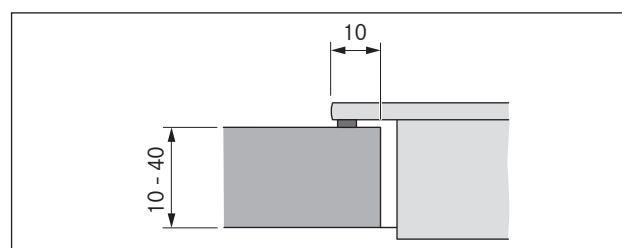
## 4.6 Installation dimensions

### Minimum installation dimensions

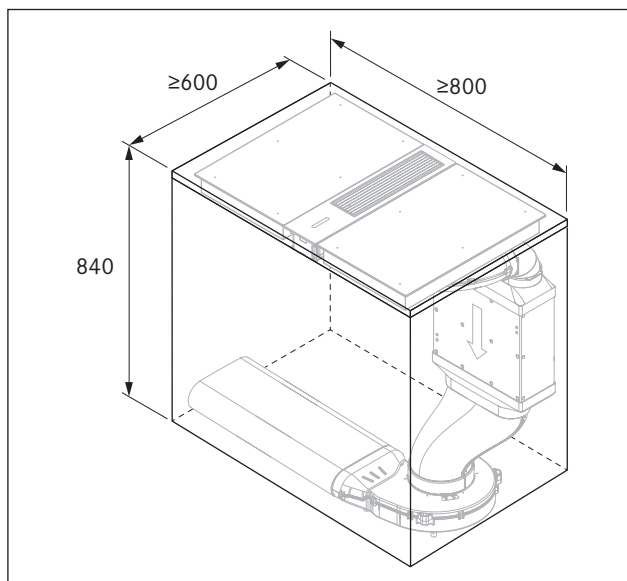


Fig. 4.14 Minimum installation dimensions with shallow silencer USDF


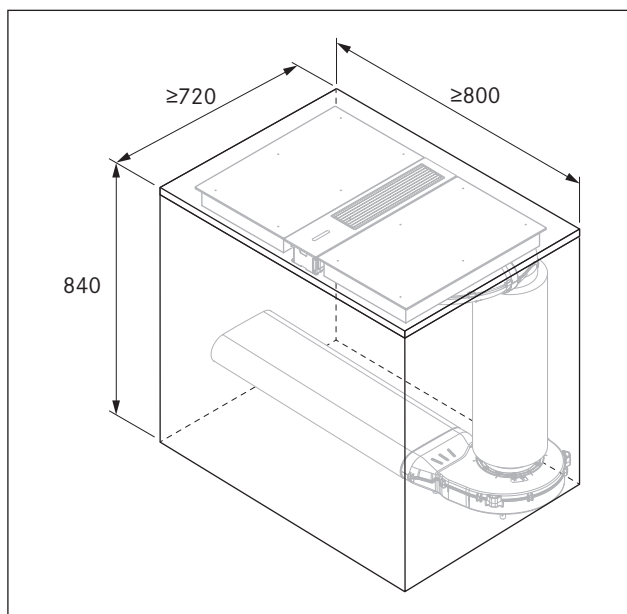


Fig. 4.15 Minimum installation dimensions with round silencer USDR50


### Appliance installation dimensions

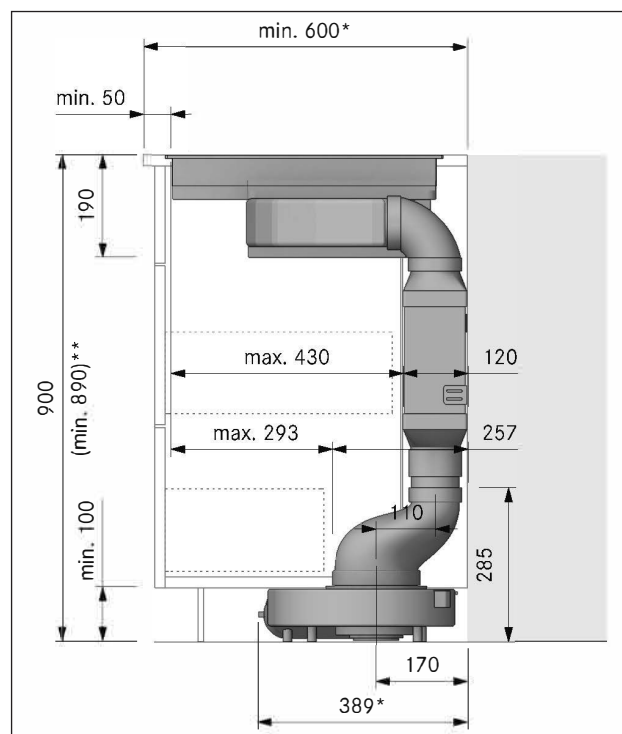

\* ULS plinth fan with air release to the left

\*\* without duct connection EFV 840 mm


Fig. 4.16 Appliance installation dimensions with shallow silencer USDF, duct connection flat EFV and transition, flat round offset EFRV110 (kitchen counter 600)

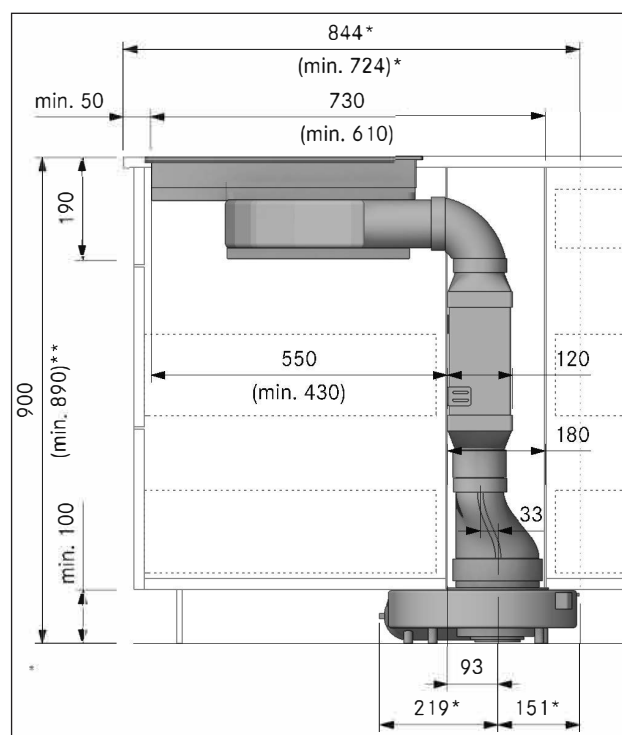

\* ULS plinth fan with air release to the left

\*\* without duct connection EFV 840 mm


Fig. 4.17 Appliance installation dimensions with shallow silencer USDF, duct connection flat EFV and bridge flat round straight EFRG (kitchen island)

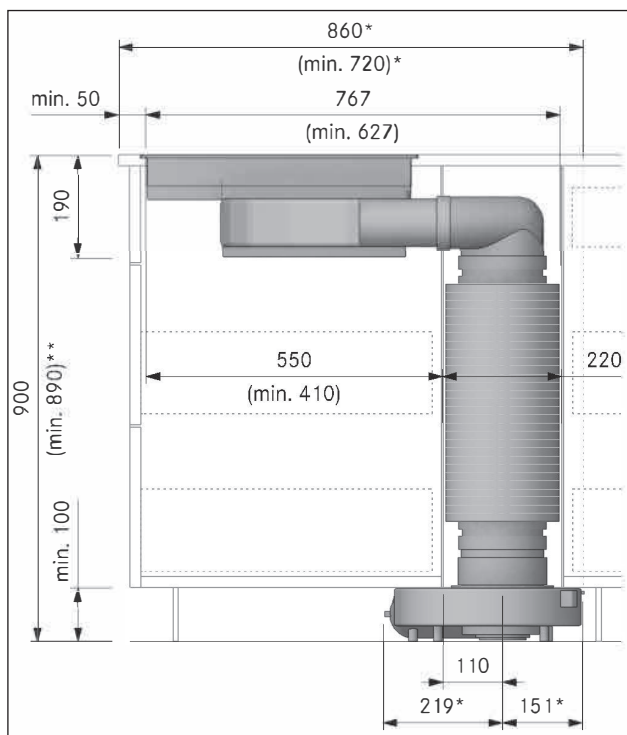


\* ULS plinth fan with air release to the left

\*\* without duct connection EFV 840 – 890 mm

**Fig. 4.18** Appliance installation dimensions with duct sound absorber USDR50 and duct connection round ERV (kitchen island)

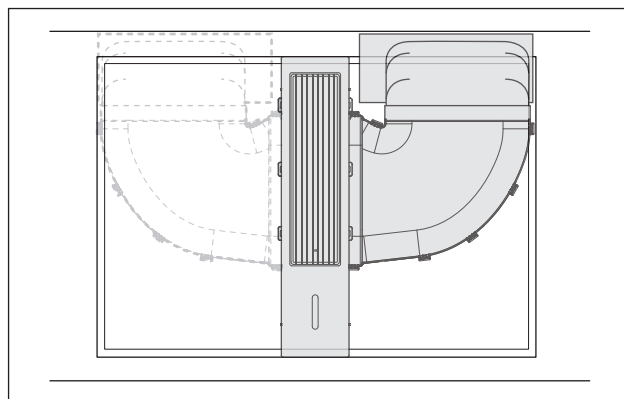

**Fig. 4.19** Airflow towards the rear (right or left)

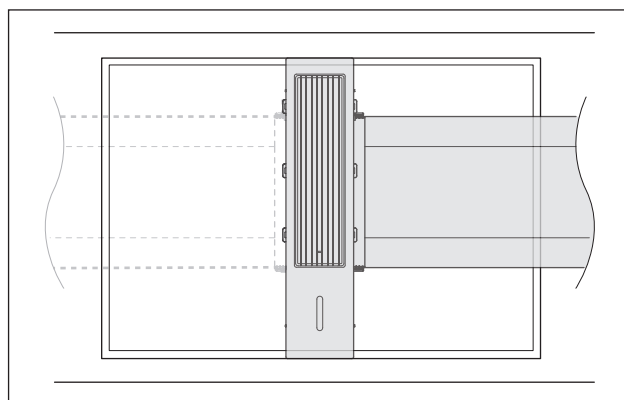

**Fig. 4.20** Straight airflow towards the side (right or left)

## 4.7 Installation options

**i** The BORA Classic 2.0 system offers different installation options. It is necessary to decide which installation option is to be implemented prior to installation.

- ▶ Please ensure prior to installation that you have made the correct preparations for the corresponding installation.
- ▶ In the event of any queries regarding the planned installation option, please contact your kitchen planner.

### Installation option overview

**i** The installation options shown below can be fitted on the right or left-hand side.

The following airflow options can be implemented with the BORA Classic 2.0 system:

## 4.8 Assembling the extraction system

**i** Cooktop extractor CKA2/CKA2AB is delivered as individual parts which must be assembled prior to or during installation.

**i** The individual components must be assembled according to the installation option.

**i** All individual components are built in such a way that they can be assembled without any difficulty. The parts can only be assembled correctly and without applying force if they are aligned correctly.

- ▶ Assemble the individual parts as required for the planned installation option.
- ▶ Make sure that the parts are aligned correctly.
- ▶ Do not force the parts together.
- If not aligned correctly, the parts cannot be assembled easily (solve this by turning or rotating the part).
- ▶ Make sure that all locks click into place.

### 4.8.1 Assembling cooktop extractor CKA2/CKA2AB

There are two different models of cooktop extractor CKA2/CKA2AB, depending on the planned airflow:



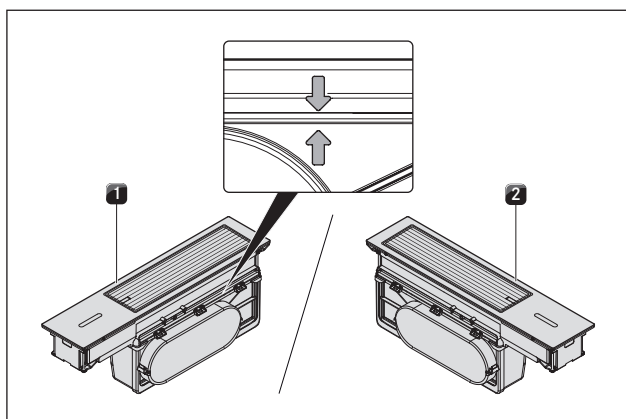


Fig. 4.21 Assembled cooktop extractor CKA2/CKA2AB

- [1] Cooktop extractor CKA2/CKA2AB for airflow towards the right
- [2] Cooktop extractor CKA2/CKA2AB for airflow towards the left

- i** If the adapter panel is fitted correctly, the duct connection will always be at the front on both models (facing the user).
- i** You can check that the adapter panel has been fitted correctly by looking at the arrow markings on the panel and the base module. These must be correctly aligned.

#### Assembling the individual components

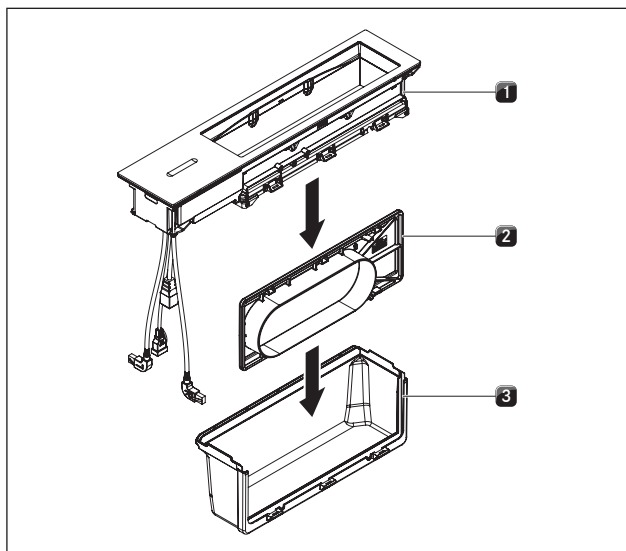


Fig. 4.22 Assembling the individual components on cooktop extractor CKA2/CKA2AB

- [1] Extractor base module
- [2] Adapter panel with O-ring seal
- [3] Connection module

#### Assemble the adapter panel:

- Position the connection module [3] facing the left or right depending on the planned installation option.
- Check that the adapter panel [2] seal is positioned correctly.
- Position the adapter panel [2] in such a way that the duct connection is facing left or right as required.

- Insert the adapter panel [2] into the connection module [3] from above.
- To do this, slide the adapter panel into the slots on the connection module [3].
- Do not use force to assemble the parts.
- Ensure that the lock clicks into place.

#### Assemble the base module:

- Place the base module [1] on top of the connection module [3] with its adapter panel [2] already fitted.
- Do not use excessive force to assemble the parts.
- Ensure that the lock clicks into place.
- Check that all components are positioned correctly.
- Check that the clearance inside the extractor is even.

## 4.9 Installing the cooktop extractor

- i** Clearance of one millimetre should be planned between the appliances.
- i** In the case of flush installation, a clearance of two millimetres should be planned around the appliances.

- Cross bars on the kitchen unit in the area of the worktop cut-out may need to be removed.
- The drawers and/or shelves in the floor unit must be removable for maintenance and cleaning purposes.
- Make sure that the area at the front of the floor unit is sufficiently ventilated with clean air.
- Make sure that the floor unit is not soiled by the ventilation openings.

### 4.9.1 Fitting and positioning the cooktop extractor

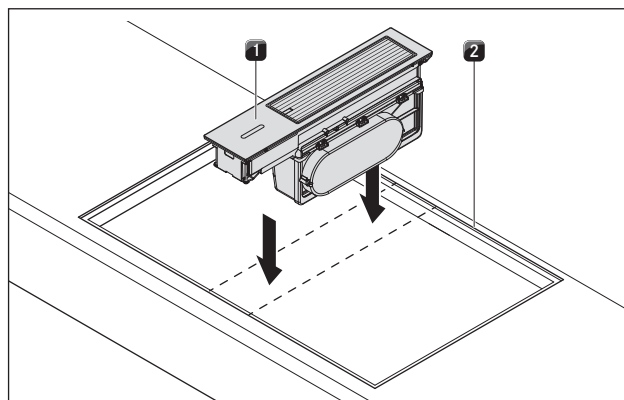


Fig. 4.23 Insert the cooktop extractor in the worktop cut-out.

- [1] Cooktop extractor
- [2] Worktop cut-out

- Place the cooktop extractor [1] in the middle of the worktop cut-out [2].
- Position the cooktop extractor [1] with precision.

### Adjusting the installation height (only in the case of flush installation)

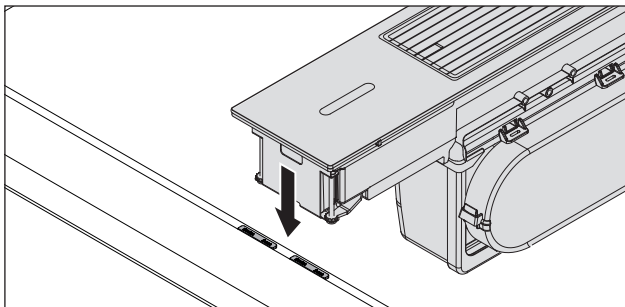


Fig. 4.24 Height adjustment plates for flush installation

- [1] Height adjustment plate
- [2] Cooktop extractor

► In flush installation, if necessary, lay height adjustment plates [1] underneath in order to adapt the installation height of the cooktop extractor [2] to the rebate depth.

### Adapting the 90° bend:

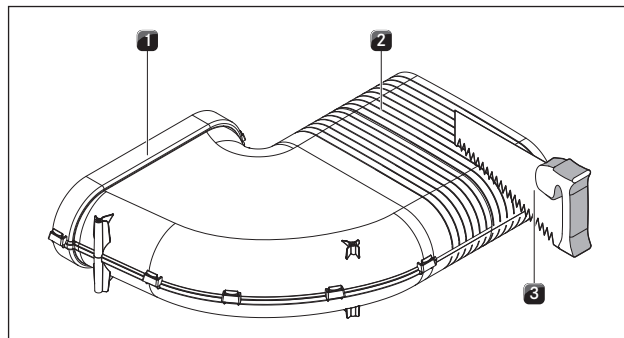


Fig. 4.25 Shortening the 90° bend

- [1] 90° bend
- [2] Cut marks
- [3] Fine saw

► Adapt the 90° bend [1] to the depth of the worktop if necessary by shortening it accordingly at the cut marks [2] using a fine saw [3].

## 4.10 Installing the duct system

- i** The duct system must be fitted to the cooktop extractor free of load and with the power supply switched off.
- i** Please bear in mind that for correct installation, the slide-in units of the base cabinet can be shortened depending on the installation situation.
- The maximum exhaust air duct length with a fan is 6 m with 6 installed 90° bends.
- The minimum cross-section of the air ducts must be 176 cm<sup>2</sup>, which equates to a round pipe with a diameter of 150 mm or the BORA Ecotube duct system.
- Use only BORA Ecotube duct parts.
- Do not use flexible or fabric hoses.

### 4.10.1 Fitting the duct system to cooktop extractor CKA2/CKA2AB

- i** The floor unit must not be supported on the plinth fan housing. The plinth fan must be installed free of load and with the power supply switched off.
- i** The plinth fan must only be installed horizontally.
- i** Position the plinth fan and control unit in such a way that they cannot be easily accessed by the user under normal operating conditions (e.g. behind the plinth panel).

#### Preparations

- Adjust the ducting parts to the height of the worktop.
- Saw out the necessary cut-outs for the ducting in the rear panel of the floor unit.
- Depending on the installation situation, adjust the levelling feet on the floor unit as necessary.

### Attaching the shallow seal


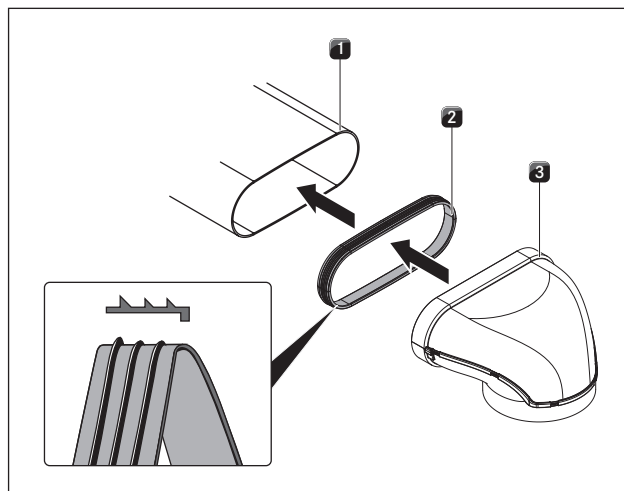


Fig. 4.26 Assembly of the duct system

- [1] BORA Ecotube duct part/component without sleeve
- [2] BORA Ecotube seal
- [3] BORA Ecotube duct part/component with sleeve

- Pull the seal [2] onto the duct part/component without a sleeve [1]. To do this, the seal [2] will need to be stretched slightly.
- Push the connecting duct part/component with a sleeve [3] onto the duct part with the seal.
- Ensure that the seal [2] is not displaced.

### Example of a standard set-up

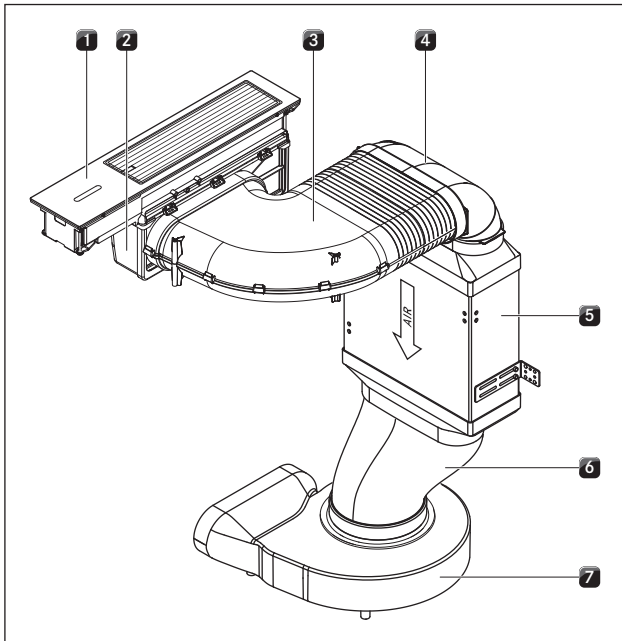

**Fig. 4.27** Cooktop extractor CKA2/CKA2AB standard set-up

- [1] Cooktop extractor CKA2/CKA2AB
- [2] Connection module with built-in adapter panel
- [3] 90° bend
- [4] BORA Ecotube shallow, vertical 90° bend EFBV90
- [5] BORA shallow silencer USDF
- [6] BORA Ecotube flat duct connection EFV (optional)
- [7] BORA Ecotube shallow duct (optional)
- [8] BORA Ecotube shallow, round, offset transition piece EFRV
- [9] BORA plinth fan ULS

**i** The installation height can be extended between the Ecotube shallow, round, offset transition piece EFRV [8] and the shallow silencer USDF [5]. This requires the Ecotube shallow duct connection EFV [6] and a length-adjusted Ecotube shallow duct [7].

- ▶ Ensure that suitable BORA Ecotube seals have been attached to all connections and that they are airtight.
- ▶ Attach the 90° bend [3] to the connection module with a built-in adapter panel [2].
- ▶ Position the plinth fan ULS [9].
- To facilitate positioning, the inlet nozzle on the plinth fan can be removed. To do this, please see the assembly instructions for the BORA plinth fan.
- ▶ Connect the plinth fan ULS [9] to the Ecotube shallow, round, offset transition piece EFRV [8].
- ▶ Connect the Ecotube shallow, round, offset transition piece EFRV [8] to the shallow silencer USDF [5].
- ▶ Connect the shallow silencer USDF [5] to the BORA Ecotube shallow, vertical 90° bend EFBV90 [4].
- ▶ Connect the BORA Ecotube shallow, vertical 90° bend EFBV90 [4] to the 90° bend [3].
- ▶ Secure the shallow silencer using the mounting brackets included.
- Securing the shallow silencer prevents forces from being applied to the cooktop extractor and the duct system.

### 4.10.2 Installing the additional fan

**i** The maximum exhaust air duct length with a fan is 6 m.

- ▶ Install an additional fan in the exhaust duct if necessary.
- ▶ Ensure that a minimum clearance of 3 m is maintained between the fan units.
- ▶ Use only BORA Universal fans.

#### If additional fans are installed at a later date:

- ▶ When installing additional fans at a later date, carry out the initial operation procedure (see „4.15 Initial operation“).
- In the basic configuration, any fans installed at a later date are automatically recognised provided that they have been connected correctly. The system configuration is adjusted accordingly.

### 4.11 Installing the cooktops


**i** Clearance of one millimetre should be planned between the appliances.

**i** In the case of flush installation, a clearance of two millimetres should be planned around the appliances.

**i** Before the CKG can be installed, the gas supply must be connected to the appliance (see „4.14 Gas installation (only in the case of gas cooktop CKG)“).

- Cross bars on the kitchen unit in the area of the worktop cut-out may need to be removed.
- The drawers and/or shelves in the floor unit must be removable for maintenance and cleaning purposes.
- In the case of induction appliances, make sure that the area below the cooktop is sufficiently ventilated. There should be an opening cross-section  $> 50 \text{ cm}^2$  at the front side and in the false floor for ventilation.

#### 4.11.1 Fitting and positioning the cooktops

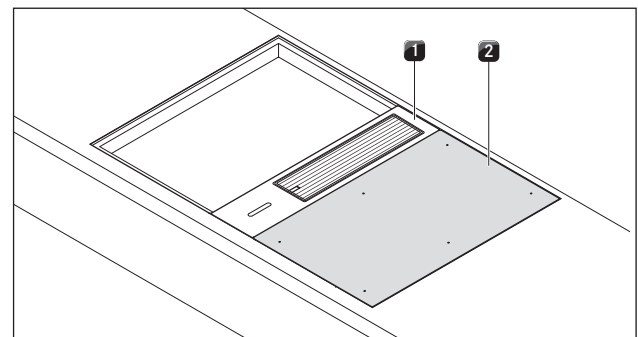

**Fig. 4.28** Cooktop fitted next to the cooktop extractor

- [1] Cooktop extractor
- [2] Cooktop

- ▶ Place the cooktop [2] next to the centrally-positioned cooktop extractor [1].
- ▶ Align the cooktop [2] exactly.
- ▶ Push the cooktop [2] right up to the cooktop extractor [1].

- When the cooktop is pushed up against the side of the cooktop extractor, spacers automatically provide the prescribed 1 mm clearance.

#### Adjusting the installation height (only in the case of flush installation)

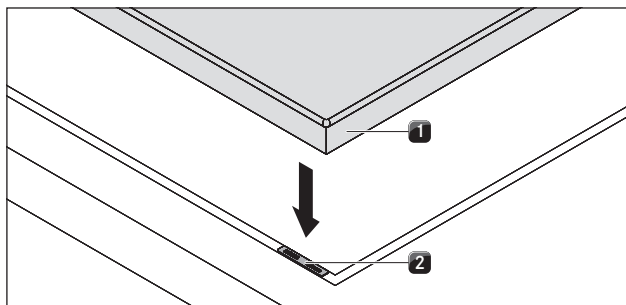


Fig. 4.29 Cooktop and height adjustment plates

- [1] Cooktop  
[2] Height adjustment plates

- ▶ Adapt the cooktop [1] installation height to the level of the cooktop extractor using the height adjustment plates [2].

- i** When installing the cooktops it must be taken into account that the appliances only have 4 support points and the height adjustment plates must be positioned accordingly. This particularly applies to the Tepan stainless steel grill CKT.

#### 4.11.2 Securing the cooktop extractor

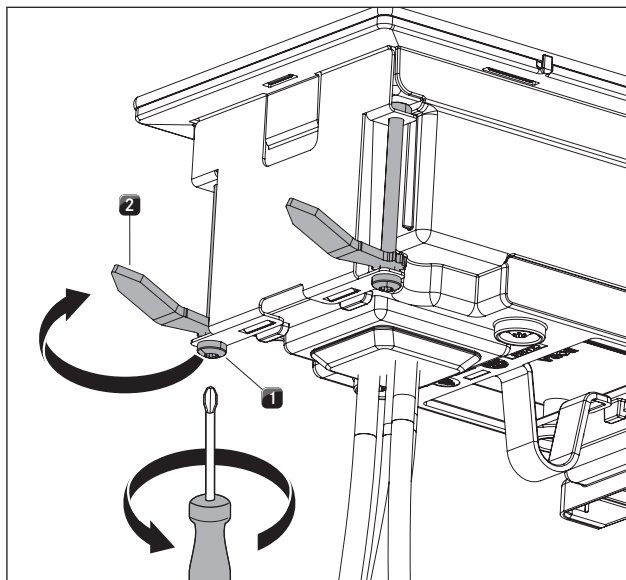


Fig. 4.30 Securing the cooktop extractor

- [1] Tensioning screw  
[2] Fixing bracket
- ▶ Turn the four fixing brackets [2] under the worktop.
  - The fixing brackets are secured against slipping by a ratchet mechanism.
  - ▶ Tighten the tensioning screws [1] with max. 2 Nm.

- ▶ Do not use a cordless screwdriver or similar electrical device to secure the cooktop extractor.
- ▶ Check that the cooktop extractor is positioned correctly.

#### 4.11.3 Securing the cooktops

##### Cooktops CKFI, CKI, CKIW, CKCH, CKCB, CKG

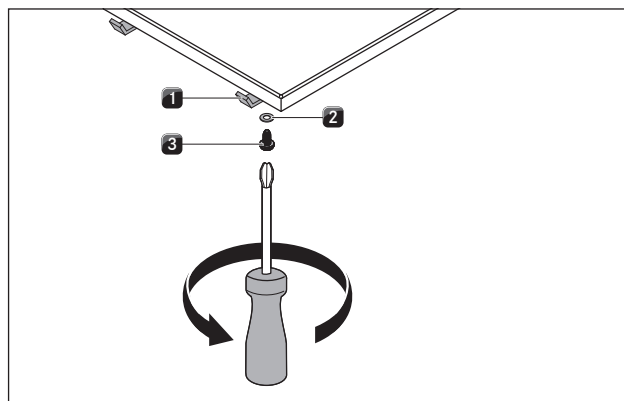


Fig. 4.31 Securing the cooktops

- [1] Mounting bracket  
[2] Washer  
[3] Screw

- ▶ Secure the cooktop using the four mounting brackets [1].
- ▶ To do this, tighten the mounting brackets with a screw [3] using the washers [2] with max. 2 Nm.
- ▶ Do not use a cordless screwdriver or similar electrical device to secure the cooktops.
- ▶ Check that the alignment and installation height are correct.

##### Tepan stainless steel grill CKT

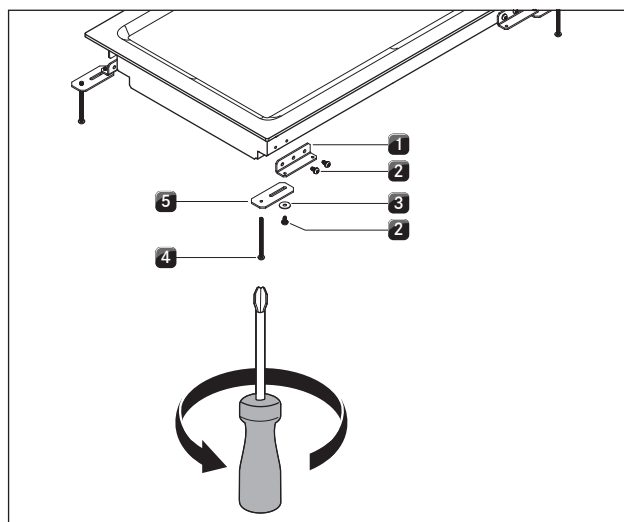


Fig. 4.32 Securing the Tepan stainless steel grill

- [1] Angled plate  
[2] Screws  
[3] Washer  
[4] Screw (60 mm)  
[5] Mounting bracket

**i** Before the Tepan stainless steel grill can be laid in the cut-out, the 4 angled plates [1] must be fitted.

- ▶ Secure the cooktop using the four mounting brackets [5].
- ▶ To do this, tighten the mounting brackets with the screws [2] and [4] using the washer [3] with max. 2 Nm.
- ▶ Do not use a cordless screwdriver or similar electrical device to secure the Tepan stainless steel grill
- ▶ Check that the alignment and installation height are correct.

## 4.12 Connecting external switch contacts

**i** The Home In and Home Out external connections must only be connected by a certified specialist. The specialist also assumes responsibility for the proper installation and commissioning.

**i** The electronic unit can contain residual charge. You must therefore be careful not to touch the exposed contacts on the electronic unit.

When using Home In and Home Out, you will require the relevant documents for the external switch devices in order to ensure safe device connection and operation.

The following switch contacts can be used:

Contact	Function	Connection
Home In	Cooktop extractor on/off connection for external switch contact (contact closed: cooktop extractor on)	12 V DC 100 mA
Home Out	Electrically isolated contact for controlling external installations depending on the operating status of the cooktop extractor (cooktop extractor on: contact closed)	maximum 250 V AC/ 30 V DC, 5 A

Tab. 4.5 Switch contacts

**i** The Home In contact can be used for external safety devices (e.g. window contact switches). If the switch is open, the cooktop extractor is off.

**i** No window contact switches may be installed that interrupt the control unit power supply (phase separation). Only the built-in interface is to be used.

## Preparing the control unit

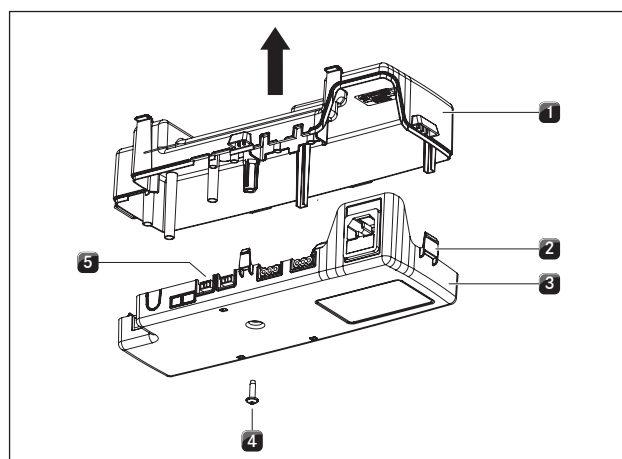


Fig. 4.33 Opening the control unit housing cover

- [1] Housing cover
- [2] Locks
- [3] Housing subshell
- [4] Screw
- [5] Electronic unit

- ▶ Ensure that the control unit is disconnected from the power supply.
- ▶ Loosen the screw [4] on the housing cover [1].
- ▶ Carefully release all locks [2] with a slotted screw driver.
- ▶ Remove the housing cover [1] from the housing subshell [3] by lifting it up.
- ▶ Do not touch the electronic unit [5].

## Preparing connection cables for external switching equipment

Use connection cables of the following types to connect external switching equipment.


Contact	Connection cable
Home In	H03VV-F 2x 0.5 mm <sup>2</sup>
Home Out	H05VV-F 2x 1 mm <sup>2</sup>

Tab. 4.6 Connection cable

**i** The connection cable is only intended for internal use in buildings, private households, kitchens or offices!

**i** The overall length of the connection cable for external switching equipment must not exceed 10 m!

- ▶ Prepare the connection cable in accordance with the prescribed stripping lengths.

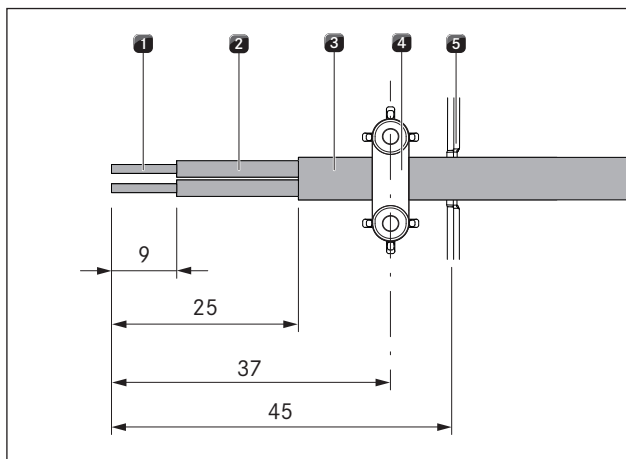

**Fig. 4.34** Stripping lengths and installation position of the connection cable


- [1] Stripped wire end
- [2] Insulated wire
- [3] Jacketed cable
- [4] Strain relief clamp
- [5] Cable feed snap-out element

- Please adhere to the maximum stripping length of the individual wires of 9 mm on the stripped wire end [1].
- Please adhere to the maximum stripping length of the outer sheath of 25 mm on the insulated wire [2].

### Installing the external switch device

Depending on the type of switch device, connect the connection cables to either the Home In or the Home Out connection clamp.

- Adhere to the connection diagram when connecting Home In and Home Out.

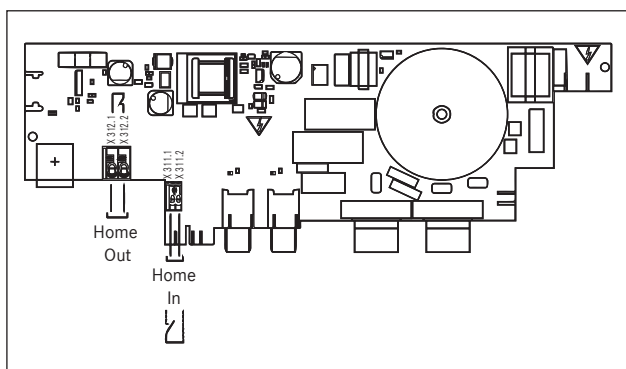


**Fig. 4.35** Connection diagram for the external switch contacts

- Connect the cable for the relevant contact to the switch contact clamp in accordance with the connection diagram.
- In order to connect the Home In interface, the installed bridge must be removed.


**i** The Home In contact must be bridged if this is not used (bridged on delivery).

**i** For connections to the Home In connection clamp, no ferrules may be used.

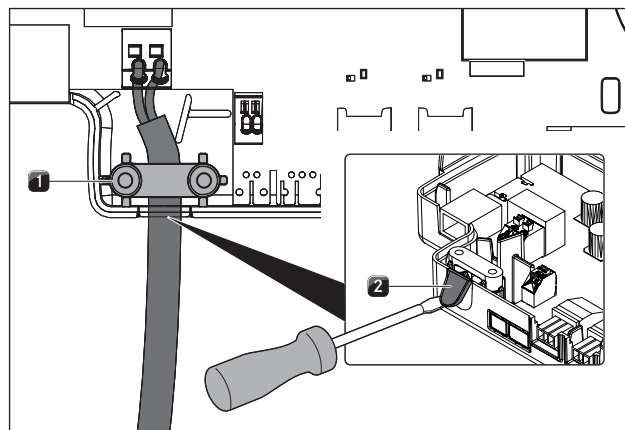

**Fig. 4.36** Home Out contacts with strain relief

- [1] Strain relief clamp
- [2] Snap-out element for cable feed

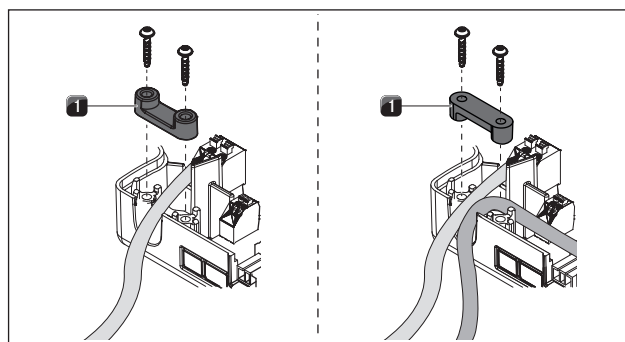

**Fig. 4.37** Fitting the strain relief clamp

- [1] Strain relief clamp

- Remove the snap-out element [2] required for the cable feed from the plastic housing of the control unit.
- Clamp the connection cable in the strain relief clamp [1] provided in accordance with the wire cross section or number of cables used.

**i** Any production residues on the cable clamp (e.g. protruding nibs) must be removed in order to guarantee a proper fit.

**i** If external switching devices are connected both to the Home In and Home Out interfaces, both cables should be secured with the strain relief clamp.

- Check the correct installation, as well as the firm positioning of the connection cables.
- Close and secure the control unit cover.
- Screw down the lid with the screw provided (max. 2 Nm).
- Make sure that the cable is not damaged or trapped.



## 4.13 Establishing communication and power connection

- i** The cooktops of the BORA Classic 2.0 system can only be operated with the central operating unit of the cooktop extractor CKA2/CKA2AB.
- i** The communication link between the cooktop extractor and cooktops is established via the control lines of the central operating unit.
- i** The cooktops have their own electricity supply. This must be connected during installation.
- i** The central operating unit is supplied with electricity by the communication cable.

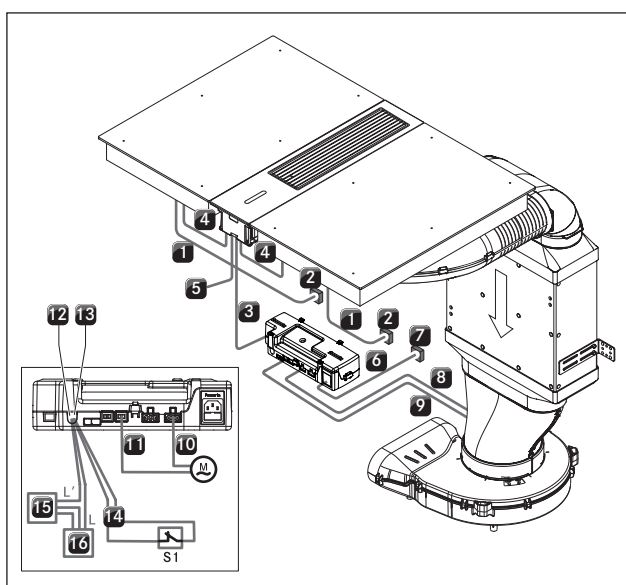


Fig. 4.38 Connection diagram for cooktop extractor CKA2/CKA2AB

- [1] Cooktop mains cable
- [2] Power supply per cooktop
- [3] CAT 5e communication cable
- [4] CAT 5e cooktop communication cable
- [5] USB interface
- [6] Control unit mains cable (country-specific)
- [7] Control unit power supply
- [8] Fan 1 mains cable
- [9] Fan 1 control cable
- [10] Fan 2 mains cable
- [11] Fan 2 control cable
- [12] Home Out connection
- [13] Home In connection
- [14] Home In connection cable
- [15] External device
- [16] Power supply cable for external device
- [M] Fan 2
- [S1] External switch contact

### 4.13.1 Establishing contact between the cooktop extractor and cooktops

- Only use the cables supplied in the scope of delivery.

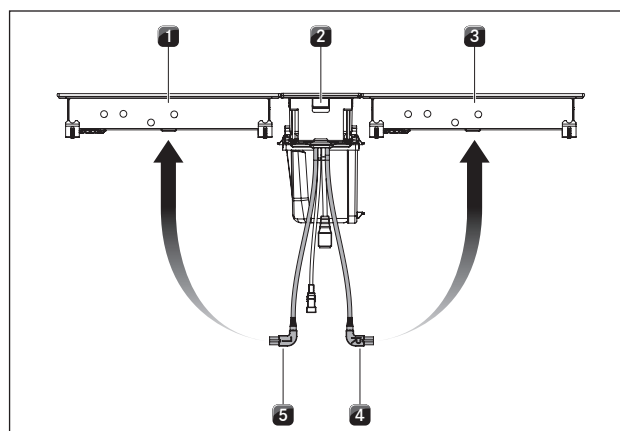


Fig. 4.39 Connecting the control cables to the cooktops

- [1] Left cooktop
- [2] Cooktop extractor
- [3] Right cooktop
- [4] Right cooktop control cable (R)
- [5] Left cooktop control cable (L)

- Connect the cooktop extractor control cables to the adjacent cooktops.
- Ensure that each cable is connected to the correct socket.
- The right angle connectors of the control cables are labelled L (left) and R (right).

### 4.13.2 Fitting split ferrite sleeves

- i** The cooktop extractor connection cable must be filtered with a ferrite sleeve for reasons of electromagnetic compatibility.

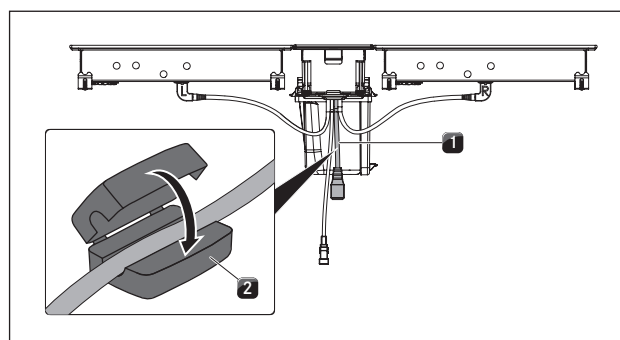


Fig. 4.40 Fitting split ferrite sleeves

- [1] Connection cable
- [2] Split ferrite sleeve

- Fit the split ferrite sleeve [2] provided in the scope of delivery to the connection cable [1].



### 4.13.3 Establishing contact between the operating unit and control unit

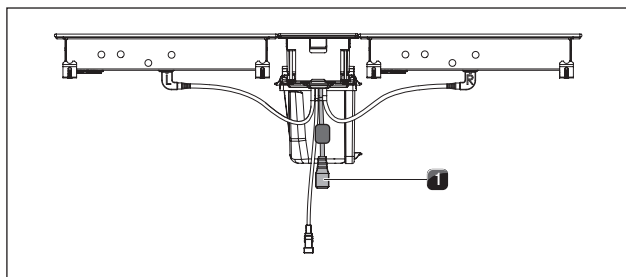


Fig. 4.41 Socket for the CAT 5e communication cable on the operating unit

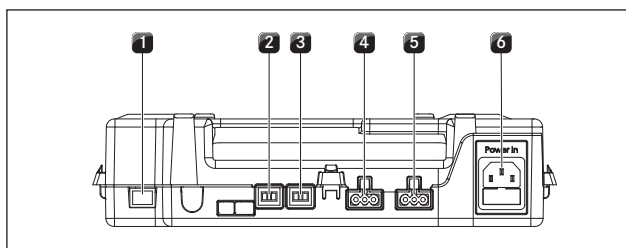


Fig. 4.42 Control unit connections

- [1] CAT 5e communication cable socket
- [2] Control unit socket for fan 2
- [3] Control unit socket for fan 1
- [4] Mains cable socket for fan 2
- [5] Mains cable socket for fan 1
- [6] Mains cable socket with micro fuse

- Using the CAT 5e communication cable (included in the scope of delivery) link the connections [1] on the operating unit to the control unit.

- i** The operating unit is controlled by and receives its power supply via the CAT 5e communication cable.

### 4.13.4 Connecting fans to the control unit

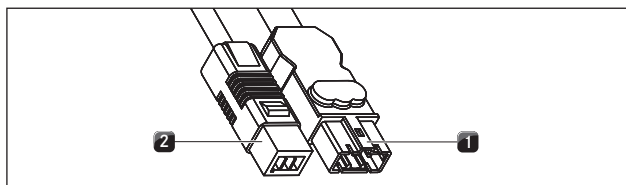


Fig. 4.43 Fan connection plug

- [1] Fan mains cable connection plug
- [2] Fan control cable connection plug

- Connect the fan control cable [2] to the control unit.
- Connect the fan mains cable [1] to the control unit.
- When connecting the fan control cable and mains cable it does not matter if you use socket 1 or 2 on the control unit.

### 4.13.5 Positioning the control unit

- i** The control unit must be placed inside the kitchen unit.
- i** Position the control unit inside the kitchen unit in such a way that it cannot be freely accessed by the user (e.g. behind the plinth panel).

#### Permitted positions inside the kitchen unit:

- loose on a false floor
- loose on the shallow duct
- mounted on the kitchen unit

- i** When positioning the control unit please observe the length of the mains cable (1 m).

### 4.13.6 Connecting to the mains

- Observe all safety and warning information (see „2 Safety“).
- Observe all national and regional laws and regulations as well as the supplementary regulations of the local utility companies.

- i** The power connection may only be established by certified specialists. The specialist also assumes responsibility for the proper installation and commissioning.

#### Special information for CKT:

- i** The Classic Tepan stainless steel grill CKT is intended to be operated on a supply network with an impedance  $Z_{max}$  at the transfer point (mains connection) of 0.1385 ohms maximum. The user is to ensure that the appliance is only operated on a mains supply network which meets this requirement. If necessary, ask the local energy supply company about the system impedance.

### Cooktop power connection

The mains cable to be used (pre-assembled) must be at least Type H05V2V2-F.

Connection	Fuse protection	Minimum cross-section
1-phase connection	1 x 16 A	1.5 mm <sup>2</sup>

Tab. 4.7 Fuse protection and minimum cross-section

- i** A damaged mains cable must be replaced by another suitable mains cable. This may only be done by an authorised member of the After Sales Service team.

- Switch off the main switch/automatic circuit breaker before connecting the cooktop.
- Secure the main switch/automatic circuit breaker against being switched back on without permission.
- Make sure the power to the appliance is disconnected.
- Only connect the cooktop using a fixed mains connection.

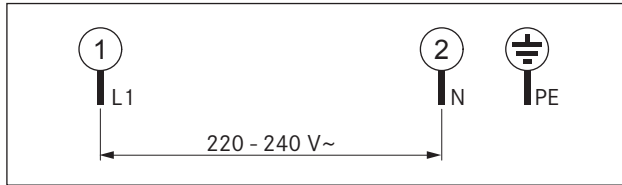


Fig. 4.44 Connection diagram 1-phase connection cooktop

#### Connecting the control unit to the power supply

- ▶ Connect the mains cable for the control unit to the mains.
- ▶ Check that installation has been carried out correctly.
- ▶ Switch on the main switch/automatic circuit breaker.

### 4.14 Gas installation (only in the case of gas cooktop CKG)

- i** Assembly, installation and commissioning must always occur in line with national laws, regulations and standards.
- i** The work must be performed by qualified specialists who know and comply with the additional regulations of the local energy supply companies.
- i** The gas must be connected before the cooktop is installed in the worktop.

#### 4.14.1 Ventilation

This appliance is not connected to a flue gas evacuation device. It must be positioned and connected in accordance with the applicable installation conditions. Suitable ventilation measures must be adhered to in particular.

- ▶ Always ensure sufficient ventilation during operation (of the appliance).

#### 4.14.2 Gas connection

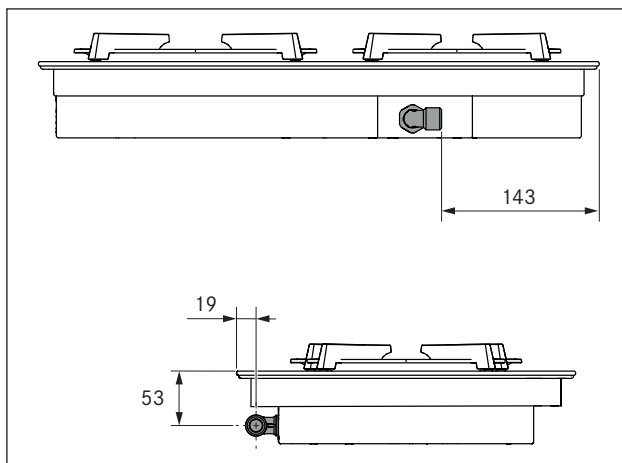


Fig. 4.45 Position of gas connection

The gas supply is connected to the appliance using a pre-installed elbow fitting with a 1/2" cylindrical internal thread. If,

due to national regulations, a conical connection is required, the cylindrical/conical transition piece (provided) is to be used.

#### 4.14.3 Connecting the gas supply

- ▶ Turn off the gas supply.
- ▶ Switch off the main switch/automatic circuit breaker before connecting the cooktop.
- ▶ Secure the main switch/automatic circuit breaker against being switched back on without permission.
- ▶ Make sure the power to the appliance is disconnected.
- ▶ Check the gas type and gas pressure of the gas supply pipe.
- ▶ Ensure that the appliance is equipped with the correct nozzle type in order to guarantee a correct burner flame and safe operation.
- ▶ Remove the protective cap from the elbow fitting.
- ▶ Connect the appliance to the gas supply.
- ▶ Once the cooktop has been installed, use suitable testing equipment to check all of the connections between the cooktop and the gas connection. There must not be any leaks.
- ▶ Create a leak test record and give this to the user.

#### 4.14.4 Additional installation notes for Australia and New Zealand (AU/NZ)

- i** Observe the requirements on the installation of the appliance pursuant to AS/NZS 5601.1: minimum clearance of the gas burner head from flammable surfaces.

- i** Installation must only be carried out by authorized personnel.

- ▶ Please note all previous information in this section.
- ▶ In addition, adhere to the requirements of the currently applicable version of the regulations and AS/NZS 5601.1 .

#### 4.14.5 Gas connection AU/NZ

Further technical requirements are considered:  
AS/NZS 5263.1.1 Gas appliances - Domestic gas cooking appliances (AU/NZS ).

- ▶ Check the different scope of delivery (see scope of delivery of the cooktops)

#### Create the gas connection

- The connection to a rigid and bend-resistant pipe must be established as specified in AS/NZS 5601.1.
- Pursuant to AS/NZS 1869 (certified to AS/NZS 1869), the connection to a hose for gas must have a diameter of 10 mm, a class B or D classification in accordance with AS/NZS 1869 and a maximum length of 1,200 mm in accordance with AS/NZS 5601.1.
- ▶ Connect the appliance as follows:
- ▶ Switch off the main switch/automatic circuit breaker before connecting the cooktop.
- ▶ Secure the main switch/automatic circuit breaker against being switched back on without permission.
- ▶ Make sure the power to the appliance is disconnected.

- ▶ Check the gas type and gas pressure of the gas supply pipe.
- ▶ Ensure that the appliance is equipped with the correct nozzle type in order to guarantee a correct burner flame and safe operation.

### Natural gas (NG)

If the cooktop is connected to a natural gas (NG) supply, a gas regulator must be installed with a test point. The gas regulator comes with the appliance.

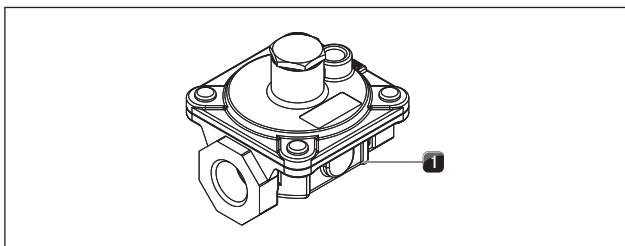


Fig. 4.46 Connection with gas regulator (NG)

[1] Gas regulator

- ▶ Attach the gas regulator [1] to the gas cooktop connection.
- ▶ Note the gas flow direction of the gas regulator [1].

### Liquid gas (LPG)



When converting from NG to ULPG, the sticker in the enclosed pack must be attached.

If the cooktop is attached to a liquid gas supply (LPG), the supply is controlled on the gas bottle.

For this purpose, install only the test point adapter in the gas supply pipe.

The test point adapter comes with the appliance.

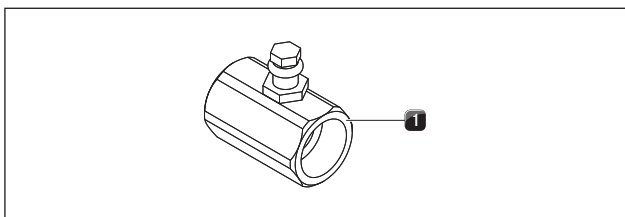


Fig. 4.47 Connection to the test point adapter (LPG)

[1] Test point adapter

- ▶ Attach the test point adapter [1] to the gas cooktop connection.
- ▶ Ensure that the seal is positioned correctly.
- ▶ Tighten all connections so that they are secure.
- ▶ Check that installation has been done correctly.
- ▶ Check the correct functioning of the stopcock.
- ▶ Check the gas pressure (LPG) as follows:
- ▶ Set the control knob to the 0 position.
- ▶ Close the gas supply.
- ▶ Unscrew the test point screw completely.
- ▶ Connect your measuring device to the test point connection.
- ▶ Open the gas supply.
- ▶ Set the gas pressure at the gas supply pipe (LPG pressure bottle) to 2.75 kPa.
- ▶ Ignite the burner (see the Operation section).

- ▶ Check the burner flame.
- ▶ Close the gas supply after successfully setting the pressure.
- ▶ Set the control knob to the 0 position.
- ▶ Shut off the measuring device from the test point.
- ▶ Securely screw the test point screw back into the test point adapter.
- ▶ Check that the screw is positioned correctly.

### Subsequent installation work for both gas types (NG/LPG)

- ▶ Check the tightness of the gas connection by conducting a leak test (see Leak test section).
- ▶ Switch on the main switch/automatic circuit breaker.
- ▶ Put the cooktop into operation (see the Operation section).
- ▶ Check all the functions and the burner flame are working correctly.

### 4.14.6 Changing the gas type

- ▶ Switch all appliances off.
- ▶ Close the gas supply to the gas supply pipe.
- ▶ Switch off the main switch/automatic circuit breaker.
- ▶ Secure the main switch/automatic circuit breaker against being switched back on without permission.
- ▶ Make sure the power to the appliance is disconnected.

### Changing the gas burner nozzle in the gas burner



The burner nozzles, gas type and pressure may only be changed by a certified engineer or BORA service technician. He/she also assumes responsibility for the proper gas installation and commissioning.



The nozzles regulate the maximum gas throughflow for each burner and gas type/pressure.



The gas cooktop is set by default to natural gas G20/20 mbar (pre-assembled). If another type of gas is used, the configuration menu on the cooktop must be adjusted accordingly.



Special setting for Australia and New Zealand:

The gas cooktop is set by default to natural gas/ 1.0 kPa (G20/10mbar pre assembled).



Use only stamped and approved nozzles.

Cat.	
I2E+	G20/G25: 20/25 mbar, BE, FR
I2E	G20:20 mbar, DE, LU, PL, RO
I2EK	G25.3: 25 mbar, NL
I2H	G20: 20 mbar, AT, CH, CZ, DK, EE, ES, FI, GB, GR, HR, IE, IT, LT, LV, NO, PT, RO, SE, SI, SK, TR
I3+	G30/G31: 28-30/37 mbar, BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, PT, SI, TR

I3B/P	G30/31: 30 mbar, BE, CY, CZ, DK, EE, FI, FR, GB, GR, HR, IT, LT, NL, NO, PL, PT, RO, SE, SI, TR
I3B/P	G30/31: 50 mbar, AT, CH, DE, FR, SK
I3P	G31: 37 mbar, BE, CH, CZ, ES, FR, GB, GR, HR, IE, IT, LT, NL, PL, PT, SI, SK, TR
I12E+3+	G20/G25: 20/25 mbar, G30/G31: 28-30/37 mbar, BE, FR
I12EK3B/P	G25.3: 25 mbar, G30/31: 30 mbar, NL
I12H3+	G20: 20 mbar, G30/31: 28-30/37 mbar, CH, CY, CZ, ES, GB, GR, IE, IT, LT, PT, SI, SK, TR
I12H3B/P	G20: 20 mbar, G30/G31: 30 mbar, CY, CZ, DK, EE, FI, GR, HR, IT, LT, NO, RO, SE, SI, SK, TR
I12H3B/P	G20: 20 mbar, G30/31: 50 mbar AT, CH, SK
I12L3B/P	G25: 25 mbar, G30/31: 30 mbar RO

Tab. 4.8 Overview of gas categories

AT	eingestellt:	Erdgas H	I2H	20 mbar
BE	eingestellt:	Erdgas E+	I2E+	20 / 25 mbar
BE	ingesteld:	Aardgas E+	I2E+	20 / 25 mbar
BE	reglage:	Gaz naturel E+	I2E+	20 / 25 mbar
CH	eingestellt:	Erdgas H	I2H	20 mbar
CH	impostato per:	Gas metano H	I2H	
CH	impostato per:	Gaz naturel H	I2H	
CY	ενεργοποιημένη:	φυσικό αέριο H		20 mbar
CZ	nastaveno na:	Zemní plyn H	I2H	20 mbar
DE	eingestellt:	Erdgas E	I2H	20 mbar
DK	sat på:	Naturgas H	I2H	20 mbar
EE	sisse lülitatud:	Maagaas H	I2H	20 mbar
ES	ajustado:	Gas natural H	I2H	20 mbar
FI	asetettu:	Maakaasu H	I2H	20 mbar
FR	reglage:	Gaz naturel E+	I2E+	20 / 25 mbar
GB	set for:	Natural gas H	I2H	20 mbar
GR	ενεργοποιημένη:	φυσικό αέριο H	I2H	20 mbar
HR	uključeno:	Prirodni plin H	I2H	20 mbar
IE	set for:	Natural gas H	I2H	20 mbar
IS	sett á:	jarðgas H		20 mbar
IT	aggiustato a:	Gas naturale H	I2H	20 mbar
LT	nustatytas:	Gamtinės dujos H	I2H	20 mbar
LU	festgeluecht:	Natierlech Gas E		20 mbar
LV	ieslēgts:	Dabaszāze H	I2H	20 mbar
MT	isettjat fuq:	Gass naturali H		20 mbar
NO	satt på:	Naturgass H	I2H	20 mbar
PL	ustawić:	Gaz ziemny E	I2H	20 mbar
PT	regulado para:	Gás natural H	I2H	20 mbar
RO	setat pe:	Gaz natural H	I2H, I2E	20 mbar
SE	sätt på:	Naturgas H	I2H	20 mbar
SI	nastavljen na:	Zemeljski plin H	I2H	20 mbar
SK	zapnuté:	Zemný plyn H	I2H	20 mbar
TR	ayarlamak:	Doğal gaz H	I2H	20 mbar

Tab. 4.9 Gas cooktop default settings

The stamp on the nozzles corresponds to the values in the nozzle table and can be found either on the top or side of the nozzles.

EU		
Gas type/ gas pressure mbar	Ø SR burner/ normal burner	Ø R burner/ high-power burner
G20/20	104	125
G25/20	110	131
G20/10	122	155
G20/13	115	149
G25/25	104	131
G25.3/25		
G20/25	100	119
G30/29	69	85
G31/37		
G30/50	62	78
G30/31 – 50 mbar		

Tab. 4.10 Nozzle table

Total nominal connection values for liquid gas:

Gas type	mbar	kW	g/h	m <sup>3</sup> /h
G30/G31	50	4.90	328	0.129
G30	29	5.00	348	0.137

Tab. 4.11 Liquid gas nominal connection values

Total nominal connection values for natural gas:

Gas type	mbar	kW	m <sup>3</sup> /h
G20	20	5.00	0.449
G25	25	5.10	0.538
G25.3	25	5.10	0.538
G20	13	5.10	0.486
G25	20	4.80	0.501

Tab. 4.12 Natural gas nominal connection values

Special nozzle table for Australia and New Zealand:

AUS / NZS		
gas type	Ø SR burner/ normal burner	Ø R burner
NG/1.0 kPa (G20/10)	1.22	1.55
ULPG/2.75 kPa (G31/27,5)	0.75	0.92

Tab. 4.13 Nozzle table (Australia and New Zealand)

**Total nominal connection values for U-LPG/  
2.75 kPa test point pressure:** 18.6 MJ/h


**Cooktop energy consumption AU/NZ – U-LPG/  
2.75 kPa test point pressure:**

High Power front burner 11.2 MJ/h  
Normal back burner 7.4 MJ/h

**Total nominal connection values for NG/  
1.0 kPa test point pressure:** 19.5 MJ/h

**Cooktop energy consumption AU/NZ – NG/  
1.00 kPa test point pressure:**


High power front burner 12.0 MJ/h  
Normal back burner 7.5 MJ/h

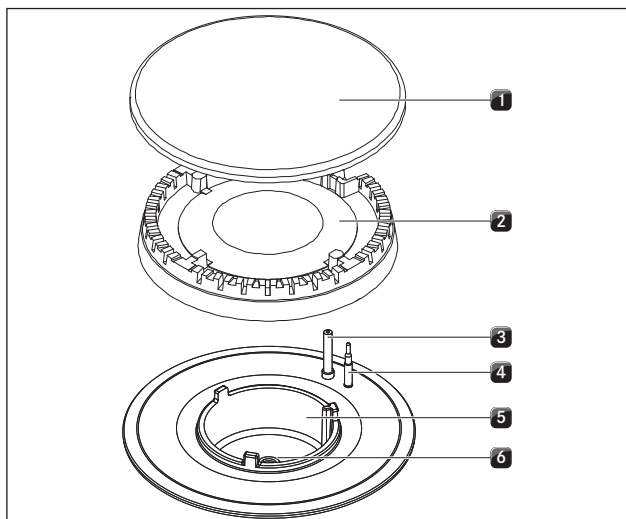

**Fig. 4.48** Gas burner structure

- [1] Burner cap
- [2] Burner head
- [3] Electric igniter
- [4] Safety thermocouple
- [5] Burner housing
- [6] Gas burner nozzle

- ▶ Remove the pan support.
- ▶ Remove the burner cap [1] from the burner head [2].
- ▶ Remove the burner head [2] from the gas outlet.

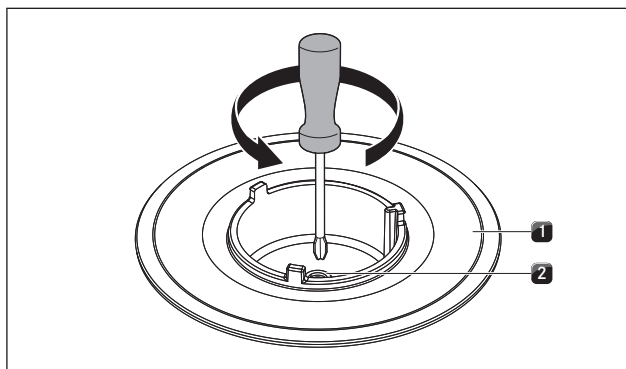


**Fig. 4.49** Cooktop burner with gas burner nozzle

- [1] Gas burner  
[2] Gas burner nozzle

- ▶ Unscrew the gas burner nozzle [2] from the gas burner [1]
- ▶ Screw the corresponding nozzle for the gas type to be used into the gas burner [2].
- ▶ Put the burner parts back together again.
- ▶ Position the burner head [2] correctly on the gas outlet.
- ▶ Ensure that the safety thermocouple [4] and the electric igniter [3] are positioned in the correct opening.
- ▶ Position the burner cap [1] so that it fits perfectly, sitting straight on the burner head [2].
- If burner parts are not positioned correctly, the electric igniter will not work.
- ▶ Place the pan support straight on the gas burner so it fits perfectly.



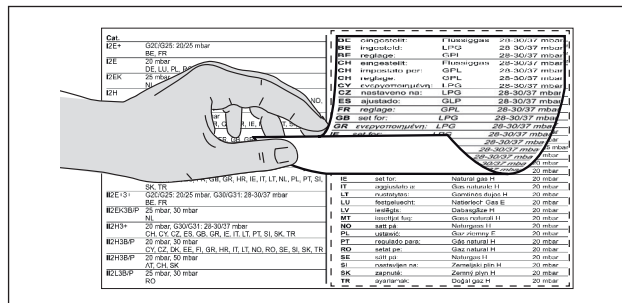

## Affixing the nozzle set nameplates

- Affix the nozzle set nameplates supplied in the space provided above the nozzle nameplate on the bottom of the cooktop (see fig. 4.46) and on the inside of the back cover of the operating instructions.



**Fig. 4.50** Affixing the nozzle set nameplates

#### 4.14.7 Gas configuration

-  The burner nozzles, gas type and pressure may only be changed by a certified engineer or BORA service technician. He/she also assumes responsibility for the proper gas installation and commissioning.
-  Gas characteristic curve A must not be used in the case of liquid gas (G30/31).
-  It is important that the gas type, gas pressure and characteristic curve are set correctly to ensure safe, failure-free operation of the gas cooktop.
-  Detailed information on the gas configuration menu can be seen in the operating instructions.

- Enter the settings in the gas configuration menu (see operating instructions).

#### 4.15 Initial operation

**Special requirements for the initial operation of the gas cooktop CKG:**

- i** Minimum requirement for operating the gas cooktop  
CKG: system software 03.00 (or higher)
- If necessary, query the installed software version (see operating instructions).
  - If necessary, update the system software (see operating instructions).


#### 4.15.1 Configuration

- i** Detailed instructions on how to operate and configure the BORA Classic 2.0 system can be found in the operating instructions (see the Operation and Menu sections).

**The BORA Classic 2.0 system comes factory-set with the following extractor configuration:**


- Recirculation mode
- Filter F1 (ULBF)
- One fan

**If a different extractor version is installed (e.g. exhaust air), the menu must be used to adjust the configuration.**

- ▶ Ensure that all devices are connected correctly and connected to the power supply (fused) prior to initial operation.
- Exception: during initial operation, the kitchen fitter may use a temporary power supply for the control unit in order to configure the appliance (e.g. using the site power supply during the building phase).
- The settings made are saved and will not be affected when the system is disconnected from the mains.
- The final mains connection to the appliances may only be set up by certified specialists.
- ▶ Start the system (long press on the power button .
- ▶ If necessary, use the menu to adjust the configuration for the installed extractor version.
- ▶ Check that all cooktops are displayed according to the way they are installed.
- ▶ To do this, check the display on the operating panel (cooking zone indicators).

**If cooktops have not been recognised correctly:**

If cooktops are not correctly recognised by the system, they will either not be displayed at all or will be shown with an error code E (see operating instructions).

- ▶ Switch the system off (long press on the power button .
- ▶ Check the connections of the communication cables
- ▶ Check the cooktop electricity supply
- ▶ Switch the system back on again and check that all cooktops have been correctly recognised.

**If all cooktops have been recognised correctly:**

- ▶ Perform the basic configuration (see operating instructions).

#### 4.15.2 Function test

- ▶ Carry out a thorough function test on all devices.
- ▶ In the event of error messages, see the “Troubleshooting” chapter in the operating instructions.

#### Function test on gas cooktop CKG

- ▶ Switch the cooking zone on.
- The electronic gas regulator will calibrate itself (humming noises) and then the gas flame will automatically ignite in the selected cooking zone.
- The gas flame will burn steadily and evenly.


**Using the gas cooktop together with the cooktop extractor for the first time**

- ▶ Switch the cooktop extractor to the maximum power level.

- ▶ Switch all cooking zones to the minimum power level.

The electronic gas regulator will calibrate itself (humming noises) and then the gas flame will automatically ignite in the selected cooking zone.

The gas flame will burn steadily and evenly (no reignition). The gas flame will be slightly affected by the cooktop extractor (airflow) – this is normal.


-  If the gas flame goes out, is excessively affected by the extractor and/or the flame is not as it should be (e.g. soot production, flame blowback, etc.), the characteristic curve must be increased, as well as the ventilation in exhaust air mode, if necessary, or the return flow aperture in recirculation mode.

#### Faults when using gas cooktop CKG for the first time

When operating for the first time or after a prolonged period without use or when the liquid gas bottles have been changed, faults are possible:


- The burner does not ignite.
  - There may be air in the gas pipe.
- ▶ Repeat the ignition process.
- The burner does not ignite and the cooktop does not react.
  - The electronic gas regulator must be recalibrated.
- ▶ Using the gas configuration menu, reset the gas regulator.

### 4.16 Sealing the devices

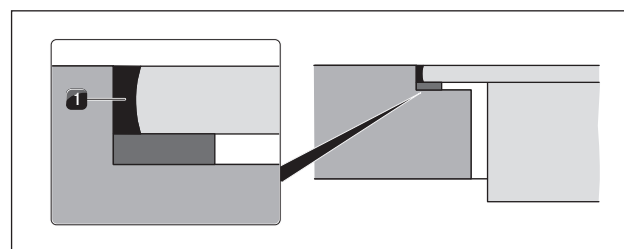

**Fig. 4.51** Silicone sealant for flush installation

- [1] black, heat-resistant silicone sealant

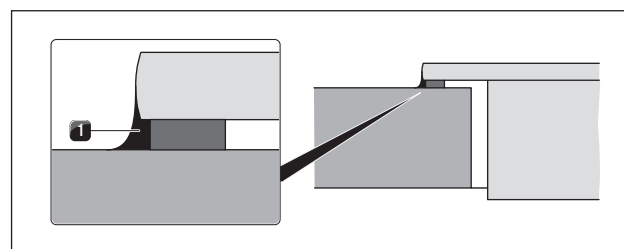

**Fig. 4.52** Silicone sealant for surface mounting

- [1] black, heat-resistant silicone sealant

- ▶ Once all of the installation work and initial operation is complete, seal the devices all around with black, heat-resistant silicone sealant (also between the cooktop extractor and cooktop) [1].
- ▶ Make sure that no silicone sealant gets under the cooktop.

## 4.17 Handover to user

### Once installation is complete:

- ▶ Explain the main functions to the user.
- ▶ Explain all safety-related aspects of operation and handling to the user.
- ▶ Affix the identification plates provided to the penultimate page in the operating instructions (see Operating instructions).

### If a CKG gas cooktop is installed:

- ▶ also affix the nozzle set nameplate to the inside of the back cover of the CKG gas cooktop operating instructions.
- ▶ Provide the user with the accessories and operating and installation instructions, which are to be kept in a safe place.



## 5 Decommissioning, disassembly and disposal

- Observe all safety and warning information (see „2 Safety“).
- Follow the enclosed manufacturer's information.

### 5.1 Decommissioning

Decommissioning is understood as final shutdown and disassembly. Following decommissioning, the device can either be installed into other units, sold on privately or disposed of.

- i** Electricity and gas connections may only be disconnected by qualified specialists.

- To decommission, switch the device off (see „7.2 Switching the system on and off“)
- Disconnect the device from the power supply.
- Disconnect the device from the gas supply.

### 5.2 Disassembly

For removal, the device must be accessible for disassembly and disconnected from the power supply.

For gas devices, make sure the gas connection is disconnected.

- Undo the appliance fixture.
- Remove the silicone joints.
- Disconnect the device from the extractor duct.
- Remove the device from the worktop by lifting it upwards.
- Remove any other accessories.
- Dispose of the old device and any contaminated accessories as described under “Environmentally-friendly disposal”.

### 5.3 Environmentally-friendly disposal

#### Disposal of transport packaging

- i** The packaging protects the device from damage in transport. The packaging materials have been selected from environmental and disposal perspectives and are therefore recyclable.

Returning the packaging to the materials cycle saves resources and reduces waste volumes. Your specialist supplier will take the packaging back.

- Give the packaging to your specialist supplier or
- Dispose of the packaging properly in line with local regulations.

#### Disposal of old appliance



Electrical devices marked with this label may not be disposed of in domestic waste at the end of their service life. They must be disposed of at a collection point for the recycling of old electrical or electronic devices. You can find information from your city or district council.

Many electrical and electronic devices still contain valuable materials. But they also contain damaging materials which were necessary for them to function properly and safely. These can damage human health or the environment if disposed of improperly or incorrectly handled.

- Never put your old appliance in domestic waste.
- Take the old appliance to a regional collection point for return and recycling electrical and electronic components and other materials.



## 6 Notes



Installation instructions:

○ Original

⊙ Translation

**Manufacturer: BORA Vertriebs GmbH & Co KG**

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from the BORA Service Team. Subject to printing errors and mistakes.

© BORA Vertriebs GmbH & Co KG

All rights reserved.

**(D)**

**BORA Lüftungstechnik GmbH**

Rosenheimer Str. 33

83064 Raubling

Germany

T +49 (0) 8035 / 9840-0

F +49 (0) 8035 / 9840-300

info@bora.com

www.bora.com

**(A)**

**BORA Vertriebs GmbH & Co KG**

Innstraße 1

6342 Niederndorf

Austria

T +43 (0) 5373 / 62250-0

F +43 (0) 5373 / 62250-90

mail@bora.com

www.bora.com

**(INT)**

**BORA Holding GmbH**

Innstraße 1

6342 Niederndorf

Austria

T +43 (0) 5373 / 62250-0

F +43 (0) 5373 / 62250-90

mail@bora.com

www.bora.com

**(AU) (NZ)**

**BORA APAC Pty Ltd**

100 Victoria Road

Drummoyne NSW 2047

Australien

T +61 2 9719 2350

F +61 2 8076 3514

info@boraapac.com.au

www.bora-australia.com.au



000078-10007

